

## 9. Maintenance

## 9.1 Troubleshooting for Normal Malfunction

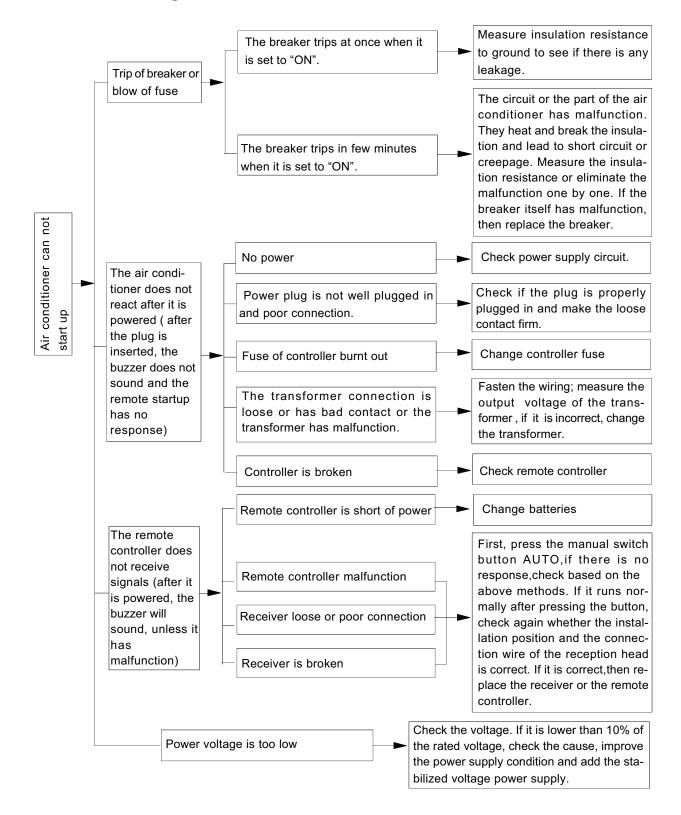


66 Installation and Maintenance

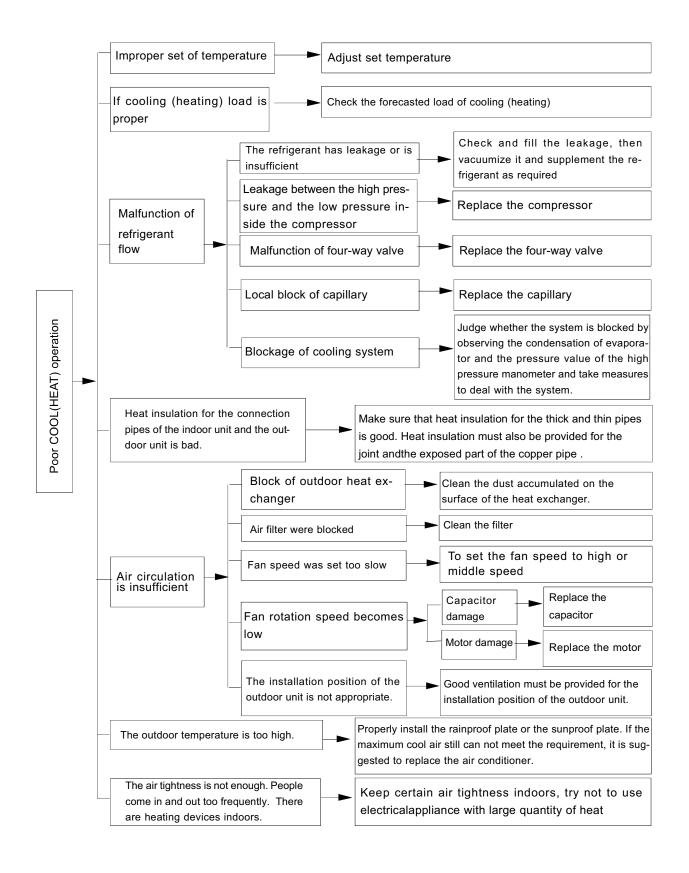


Installation and Maintenance

67

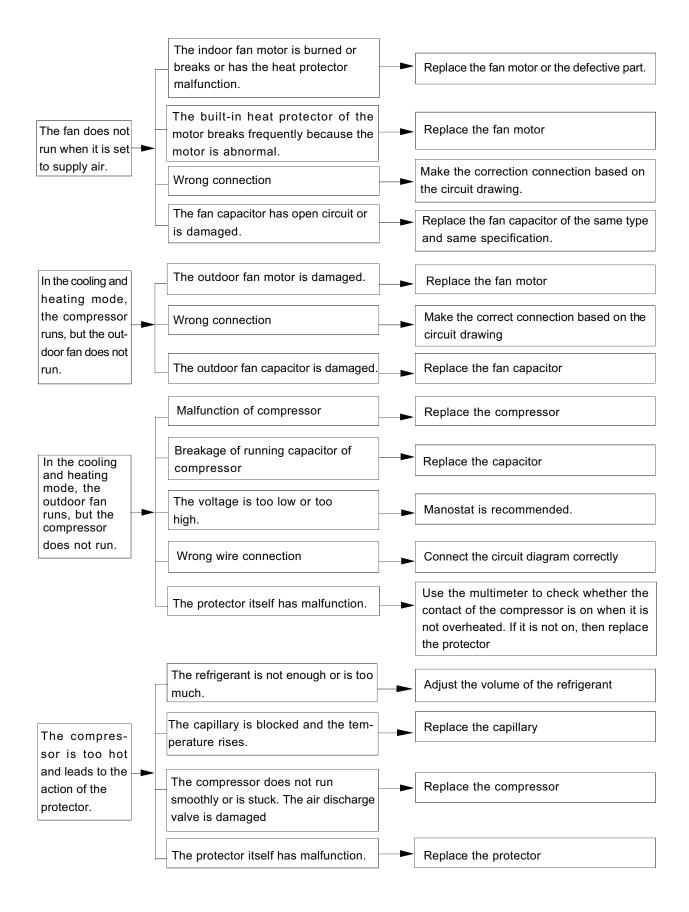

68 Installation and Maintenance

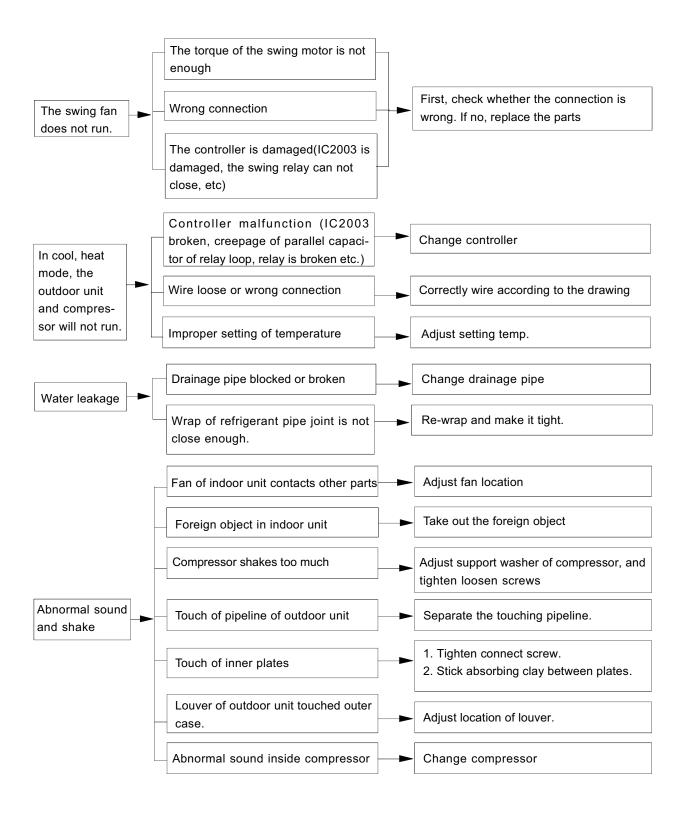

Installation and Maintenance