

Service Manual

MODEL: GWH09RB-K3DBA3E
GWH12RB-K3DBA3E
GWH09RB-K3DBA5E
GWH12RB-K3DBA5E
(Refrigerant R410A)

Table of Contents

Part I : Technical Information	1
1. Summary	1
2. Specifications	2
2.1 Specification Sheet.....	2
2.2 Operation Characteristic Curve	6
2.3 Capacity Variation Ratio According to Temperature	6
2.4 Cooling and Heating Data Sheet in Rated Frequency	7
2.5 Noise Curve.....	7
3. Outline Dimension Diagram	8
3.1 Indoor Unit.....	8
3.2 Outdoor Unit	8
4. Refrigerant System Diagram	10
5. Electrical Part	11
5.1 Wiring Diagram.....	11
5.2 PCB Printed Diagram	14
6. Function and Control	16
6.1 Remote Controller Introduction	16
6.2 Brief Description of Modes and Functions.....	20
Part II : Installation and Maintenance	25
7. Notes for Installation and Maintenance	25
8. Installation	27
8.1 Installation Dimension Diagram.....	27
8.2 Installation Parts-checking	29
8.3 Selection of Installation Location.....	29
8.4 Electric Connection Requirement.....	29
8.5 Installation of Indoor Unit.....	29


- 8.6 Installation of Outdoor Unit..... 32
- 8.7 Vacuum Pumping and Leak Detection 33
- 8.8 Check after Installation and Test Operation 33
- 9. Maintenance..... 34**
 - 9.1 Error Code List 34
 - 9.2 Troubleshooting for Main Malfunction 41
 - 9.3 Troubleshooting for Normal Malfunction..... 54
- 10. Exploded View and Parts List 56**
 - 10.1 Indoor Unit..... 56
 - 10.2 Outdoor Unit 60
- 11. Removal Procedure 64**
 - 11.1 Removal Procedure of Indoor Unit 64
 - 11.2 Removal Procedure of Outdoor Unit 69
- Appendix: 80**
 - Appendix 1: Reference Sheet of Celsius and Fahrenheit 80
 - Appendix 2: Configuration of Connection Pipe..... 80
 - Appendix 3: Pipe Expanding Method 81
 - Appendix 4: List of Resistance for Ambient Temperature Sensor 82

Part I : Technical Information


1. Summary

Indoor Unit:

GWH09RB-K3DBA3E/I(Cold Plasma)
GWH12RB-K3DBA3E/I(Cold Plasma)

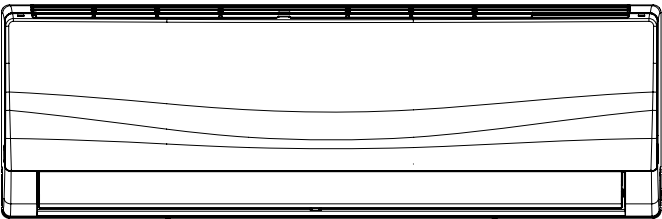


GWH09RB-K3DBA5E/I
GWH12RB-K3DBA5E/I

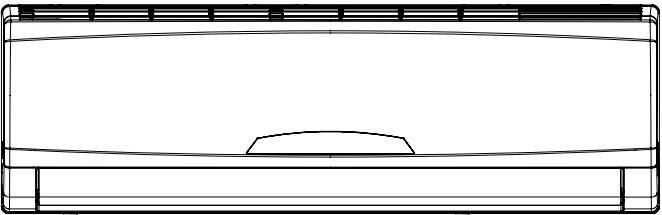


Outdoor Unit:

GWH09RB-K3DBA5E/O
GWH09RB-K3DBA3E/O(LCLH)

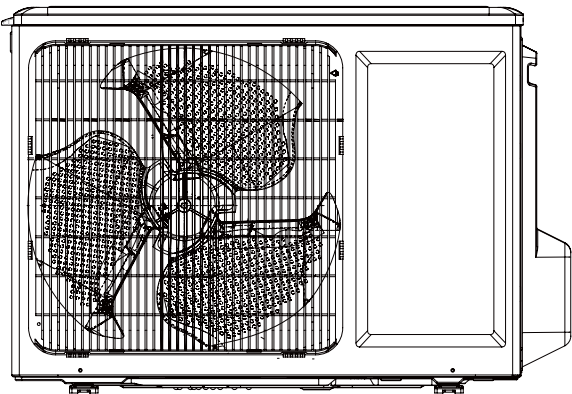


GWH12RB-K3DBA5E/O
GWH12RB-K3DBA3E/O(LCLH)

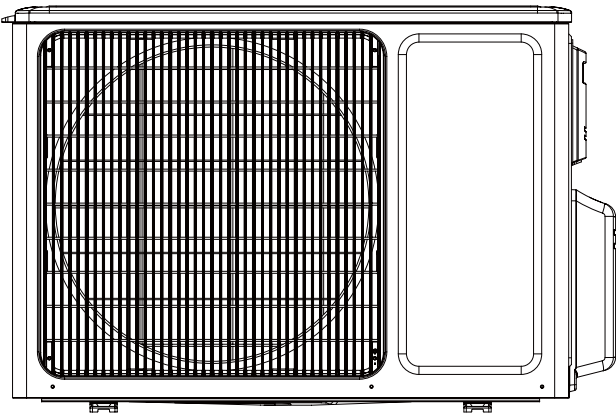

Remote Controller:

 YAA1FB



2. Specifications

2.1 Specification Sheet

Parameter		Unit	Value	Value
Model			GWH09RB-K3DBA5E	GWH12RB-K3DBA5E
Product Code			CB304001200	CB304001300
Power Supply	Rated Voltage	V~	220-240	220-240
	Rated Frequency	Hz	50	50
	Phases		1	1
Power Supply Mode			Indoor	Indoor
Cooling Capacity (Min~Max)		W	2600(800~3200)	3500(900~4000)
Heating Capacity (Min~Max)		W	2750(900~3400)	3650(900~4200)
Cooling Power Input (Min~Max)		W	640(100~1300)	980(100~1450)
Heating Power Input (Min~Max)		W	650(150~1700)	920(150~1700)
Cooling Power Current		A	2.78	4.26
Heating Power Current		A	2.83	4.00
Rated Input		W	1700	1700
Rated Current		A	7.39	7.39
Air Flow Volume (SH/H/M/L/SL)		m ³ /h	600/500/400/300/-	600/500/400/300/-
Dehumidifying Volume		L/h	0.80	1.40
EER		W/W	/	/
COP		W/W	/	/
SEER		W/W	6.50	6.60
SCOP		W/W	4.00	4.00
Application Area		m ²	12-18	16-24
Indoor Unit	Model		GWH09RB-K3DBA5E/I	GWH12RB-K3DBA5E/I
	Product Code		CB304N01200	CB304N01300
	Fan Type		Cross-flow	Cross-flow
	Diameter Length(DXL)	mm	Φ92X645	Φ92X645
	Fan Motor Cooling Speed (SH/H/M/L/SL)	r/min	1260/1050/900/690/-	1290/1070/900/690/-
	Fan Motor Heating Speed (SH/H/M/L/SL)	r/min	1320/1200/1000/910/-	1280/1050/980/920/-
	Output of Fan Motor	W	20	20
	Fan Motor RLA	A	0.10	0.10
	Fan Motor Capacitor	μF	1.0	1.0
	Input of Heater	W	/	/
	Evaporator Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter	mm	Φ7	Φ7
	Row-fin Gap	mm	2-1.4	2-1.4
	Coil Length (LXDXW)	mm	690X24.8X266.7	690X24.8X266.7
	Swing Motor Model		MP24AA	MP24AA
	Output of Swing Motor	W	2	2
	Fuse	A	3.15	3.15
	Sound Pressure Level (SH/H/M/L/SL)	dB (A)	41/35/30/23/-	42/36/31/26/-
	Sound Power Level (SH/H/M/L/SL)	dB (A)	55/51/46/37/-	55/51/46/37/-
	Dimension (WXHXD)	mm	845X275X189	845X275X189
	Dimension of Carton Box (LXWXH)	mm	923X264X356	923X264X356
	Dimension of Package (LXWXH)	mm	926X267X371	926X267X371
	Net Weight	kg	10.0	10.0
	Gross Weight	kg	13.0	13.0

Outdoor Unit	Model		GWH09RB-K3DBA5E/O	GWH12RB-K3DBA5E/O
	Product Code		CB304W01200	CB304W01300
	Compressor Manufacturer/Trademark		PANASONIC WANBAO COMPRESSOR (GUANGZHOU) CO.,LTD	CHINA RESOURCES SANYO (SHENYANG) COMPRESSOR CO.,LTD
	Compressor Model		5RS102ZJA21	C-6RZ110H1A
	Compressor Oil		FV50S	FV50S
	Compressor Type		Rotary	Rotary
	L.R.A.	A	25.00	33.00
	Compressor RLA	A	4.47	4.59
	Compressor Power Input	W	985	800
	Overload Protector		1NT11L-5270	1NT11L-3979
	Throttling Method		Electron expansion valve	Electron expansion valve
	Operation temp	°C	16~30	16~30
	Ambient temp (cooling)	°C	-15~24	-15~24
	Ambient temp (heating)	°C	-20~24	-20~24
	Condenser Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter	mm	Φ9.52	Φ7.94
	Rows-fin Gap	mm	2-1.6	2.5-1.5
	Coil Length (LXD _X W)	mm	732X44X507	763X57X550
	Fan Motor Speed	rpm	900	850
	Output of Fan Motor	W	30	30
	Fan Motor RLA	A	0.13	0.23
	Fan Motor Capacitor	μF	/	/
	Air Flow Volume of Outdoor Unit	m ³ /h	1800	2000
	Fan Type		Axial-flow	Axial-flow
	Fan Diameter	mm	Φ400	Φ445
	Defrosting Method		Automatic Defrosting	Automatic Defrosting
	Climate Type		T1	T1
	Isolation		I	I
	Moisture Protection		IP24	IP24
	Permissible Excessive Operating Pressure for the Discharge Side	MPa	4.3	4.3
	Permissible Excessive Operating Pressure for the Suction Side	MPa	2.5	2.5
	Sound Pressure Level (H/M/L)	dB (A)	49/-/-	50/-/-
	Sound Power Level (H/M/L)	dB (A)	63/-/-	63/-/-
	Dimension (WXHXD)	mm	848X540X320	899X596X378
	Dimension of Carton Box (LXWXH)	mm	878X360X580	945X417X630
	Dimension of Package (LXWXH)	mm	881X363X595	948X420X645
	Net Weight	kg	36.0	43.0
	Gross Weight	kg	40.0	47.0
	Refrigerant		R410A	R410A
	Refrigerant Charge	kg	1.22	1.30
Connection Pipe	Length	m	5	5
	Gas Additional Charge	g/m	20	20
	Outer Diameter Liquid Pipe	mm	Φ6	Φ6
	Outer Diameter Gas Pipe	mm	Φ9.52	Φ9.52
	Max Distance Height	m	10	10
	Max Distance Length	m	15	20
Note: The connection pipe applies metric diameter.				

The above data is subject to change without notice; please refer to the nameplate of the unit.


Parameter		Unit	Value	Value
Model			GWH09RB-K3DBA3E(Cold Plasma+LCLH)	GWH12RB-K3DBA3E(Cold Plasma+LCLH)
Product Code			CB302002100	CB302002200
Power Supply	Rated Voltage	V~	220-240	220-240
	Rated Frequency	Hz	50	50
	Phases		1	1
Power Supply Mode			Indoor	Indoor
Cooling Capacity (Min~Max)		W	2600(800~3200)	3500(900~4000)
Heating Capacity (Min~Max)		W	2750(900~3400)	3650(900~4200)
Cooling Power Input (Min~Max)		W	640(100~1300)	980(100~1450)
Heating Power Input (Min~Max)		W	650(150~1700)	920(150~1700)
Cooling Power Current		A	2.78	4.26
Heating Power Current		A	2.83	4.00
Rated Input		W	1700	1700
Rated Current		A	7.39	7.39
Air Flow Volume (SH/H/M/L/SL)		m ³ /h	600/500/400/300/-	600/500/400/300/-
Dehumidifying Volume		L/h	0.80	1.40
EER		W/W	/	/
COP		W/W	/	/
SEER		W/W	6.50	6.60
SCOP		W/W	4.00	4.00
Application Area		m ²	12-18	16-24
Indoor Unit	Model		GWH09RB-K3DBA3E/I(Cold Plasma)	GWH12RB-K3DBA3E/I(Cold Plasma)
	Product Code		CB302N02100	CB302N02200
	Fan Type		Cross-flow	Cross-flow
	Diameter Length(DXL)	mm	Φ92X645	Φ92X645
	Fan Motor Cooling Speed (SH/H/M/L/SL)	r/min	1260/1050/900/690/-	1290/1070/900/690/-
	Fan Motor Heating Speed (SH/H/M/L/SL)	r/min	1320/1200/1000/910/-	1280/1050/980/920/-
	Output of Fan Motor	W	20	20
	Fan Motor RLA	A	0.10	0.10
	Fan Motor Capacitor	μF	1.0	1.0
	Input of Heater	W	/	/
	Evaporator Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter	mm	Φ7	Φ7
	Row-fin Gap	mm	2-1.4	2-1.4
	Coil Length (LXDXW)	mm	690X24.8X266.7	690X24.8X266.7
	Swing Motor Model		MP24AA	MP24AA
	Output of Swing Motor	W	2	2
	Fuse	A	3.15	3.15
	Sound Pressure Level (SH/H/M/L/SL)	dB (A)	41/35/30/23/-	42/36/31/26/-
	Sound Power Level (SH/H/M/L/SL)	dB (A)	55/51/46/37/-	55/51/46/37/-
	Dimension (WXHDX)	mm	845X275X189	845X275X189
	Dimension of Carton Box (LXWXH)	mm	923X264X356	923X264X356
	Dimension of Package (LXWXH)	mm	926X267X371	926X267X371
	Net Weight	kg	10.0	10.0
	Gross Weight	kg	12.0	12.0

Outdoor Unit	Model		GWH09RB-K3DBA3E/O(LCLH)	GWH12RB-K3DBA3E/O(LCLH)
	Product Code		CB302W02100	CB302W02200
	Compressor Manufacturer/Trademark		PANASONIC WANBAO COMPRESSOR (GUANGZHOU) CO.,LTD	CHINA RESOURCES SANYO (SHENYANG) COMPRESSOR CO.,LTD
	Compressor Model		5RS102ZJA21	C-6RZ110H1A
	Compressor Oil		FV50S	FV50S
	Compressor Type		Rotary	Rotary
	L.R.A.	A	25.00	33.00
	Compressor RLA	A	4.47	4.59
	Compressor Power Input	W	985	800
	Overload Protector		1NT11L-5270	1NT11L-3979
	Throttling Method		Electron expansion valve	Electron expansion valve
	Operation temp	°C	16~30	16~30
	Ambient temp (cooling)	°C	-15~24	-15~24
	Ambient temp (heating)	°C	-20~24	-20~24
	Condenser Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter	mm	Φ9.52	Φ7.94
	Rows-fin Gap	mm	2-1.6	2.5-1.5
	Coil Length (LXDXW)	mm	732X44X507	763X57X550
	Fan Motor Speed	rpm	900	850
	Output of Fan Motor	W	30	30
	Fan Motor RLA	A	0.13	0.23
	Fan Motor Capacitor	μF	/	/
	Air Flow Volume of Outdoor Unit	m ³ /h	1800	2000
	Fan Type		Axial-flow	Axial-flow
	Fan Diameter	mm	Φ400	Φ445
	Defrosting Method		Automatic Defrosting	Automatic Defrosting
	Climate Type		T1	T1
	Isolation		I	I
	Moisture Protection		IP24	IP24
	Permissible Excessive Operating Pressure for the Discharge Side	MPa	4.3	4.3
	Permissible Excessive Operating Pressure for the Suction Side	MPa	2.5	2.5
	Sound Pressure Level (H/M/L)	dB (A)	49/-/-	50/-/-
	Sound Power Level (H/M/L)	dB (A)	63/-/-	63/-/-
	Dimension (WXHDXD)	mm	848X540X320	899X596X378
	Dimension of Carton Box (LXWXH)	mm	878X360X580	945X417X630
	Dimension of Package (LXWXH)	mm	881X363X595	948X420X645
	Net Weight	kg	36.0	43.0
	Gross Weight	kg	40.0	47.0
	Refrigerant		R410A	R410A
	Refrigerant Charge	kg	1.22	1.30
Connection Pipe	Length	m	5	5
	Gas Additional Charge	g/m	20	20
	Outer Diameter Liquid Pipe	mm	Φ6	Φ6
	Outer Diameter Gas Pipe	mm	Φ9.52	Φ9.52
	Max Distance Height	m	10	10
	Max Distance Length	m	15	20
	Note: The connection pipe applies metric diameter.			


The above data is subject to change without notice; please refer to the nameplate of the unit.

2.2 Operation Characteristic Curve

Cooling

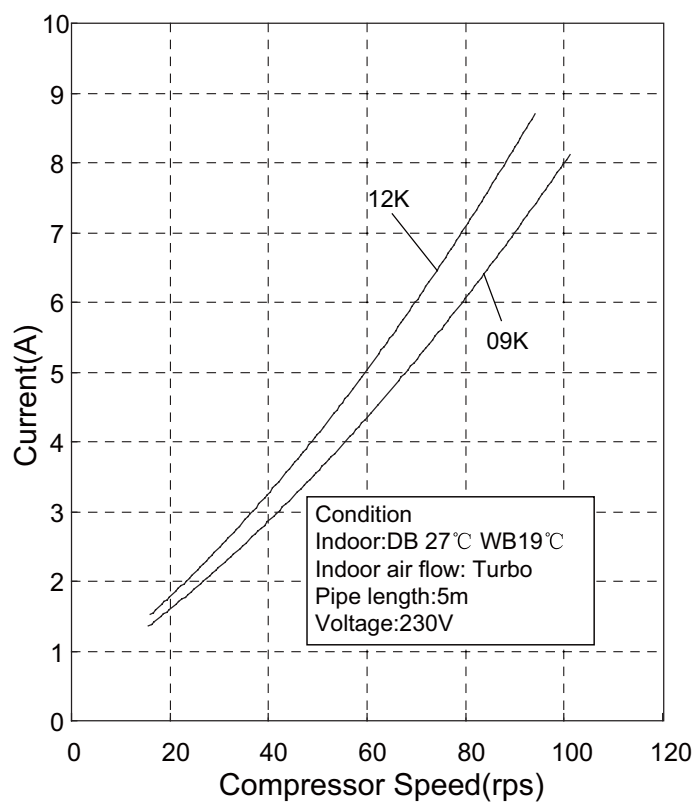


Heating

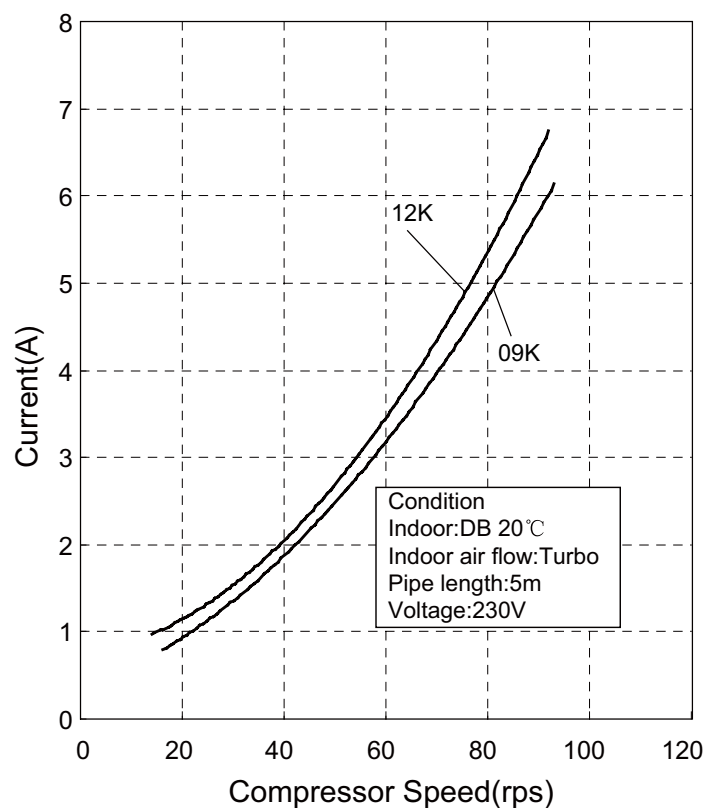


2.3 Capacity Variation Ratio According to Temperature

Cooling

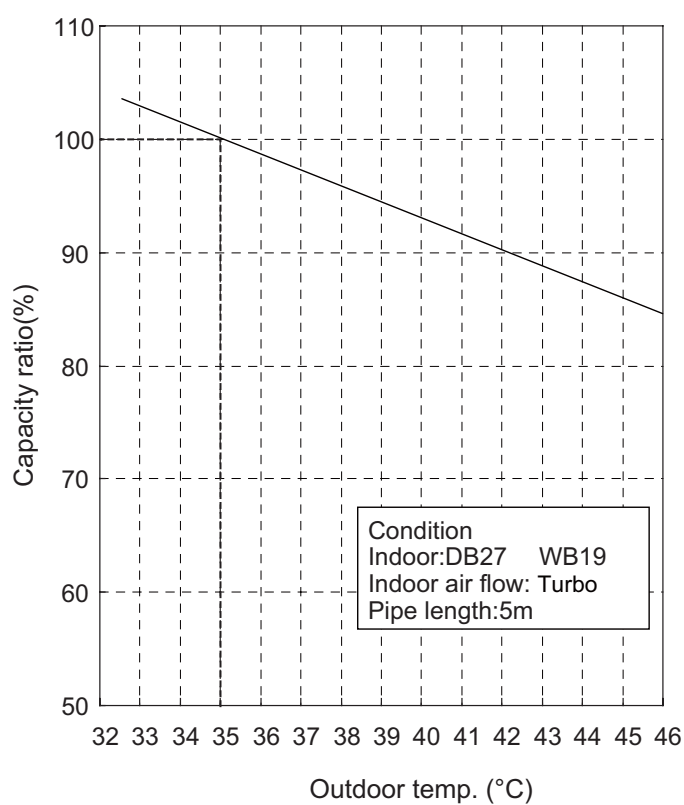

Heating

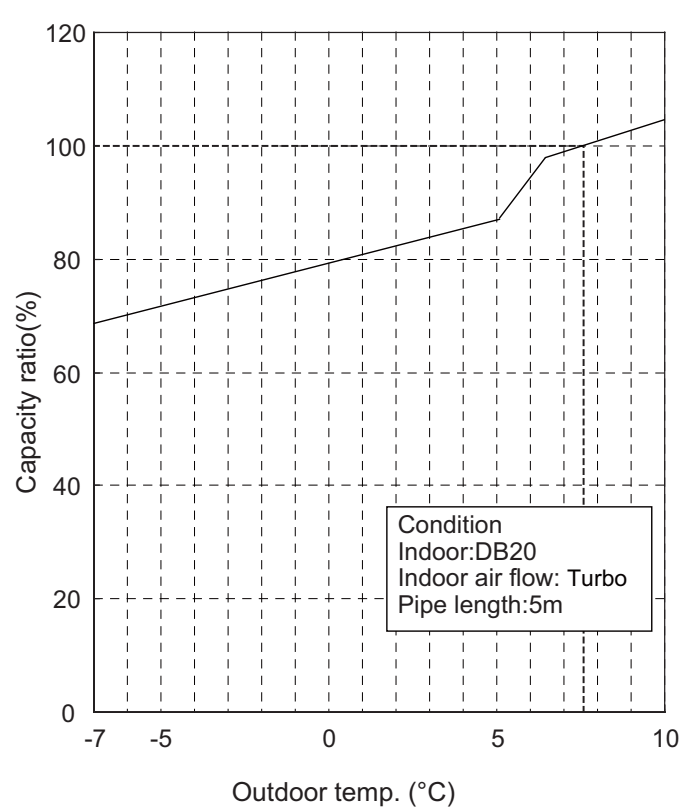

2.4 Cooling and Heating Data Sheet in Rated Frequency

Cooling:

Rated cooling condition(°C) (DB/WB)		Model	Pressure of gas pipe connecting indoor and outdoor unit	Inlet and outlet pipe temperature of heat exchanger		Fan speed of indoor unit	Fan speed of outdoor unit	Compressor revolution (Hz)
Indoor	Outdoor		P (MPa)	T1 (°C)	T2 (°C)			
27/19	35/24	09K	0.85~1.0	in:8~11 out:11~14	in:50~80 out:37~43	Turbo	Suprt High	54
		12K						75



Heating:

Rated heating condition(°C) (DB/WB)		Model	Pressure of gas pipe connecting indoor and outdoor unit	Inlet and outlet pipe temperature of heat exchanger		Fan speed of indoor unit	Fan speed of outdoor unit	Compressor revolution (Hz)
Indoor	Outdoor		P (MPa)	T1 (°C)	T2 (°C)			
20/-	7/6	09K	2.5~3.0	in:50~80 out:37~43	in:1~3 out:2~5	Turbo	Suprt High	60
		12K						80

Instruction:


T1: Inlet and outlet pipe temperature of evaporator
T2: Inlet and outlet pipe temperature of condenser
P: Pressure at the side of big valve
Connection pipe length: 5 m.

2.5 Noise Curve

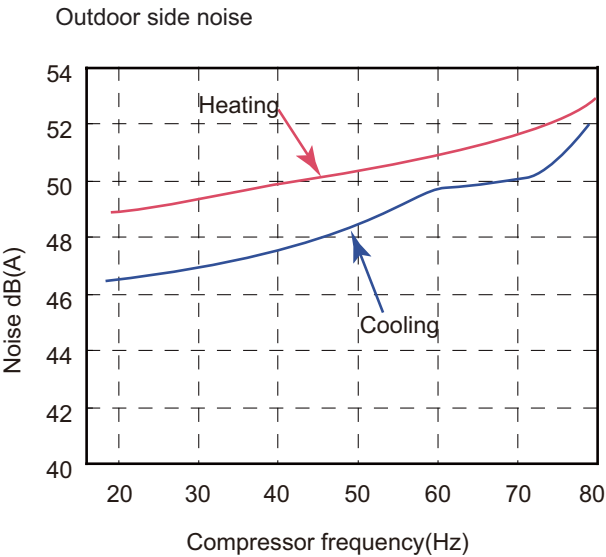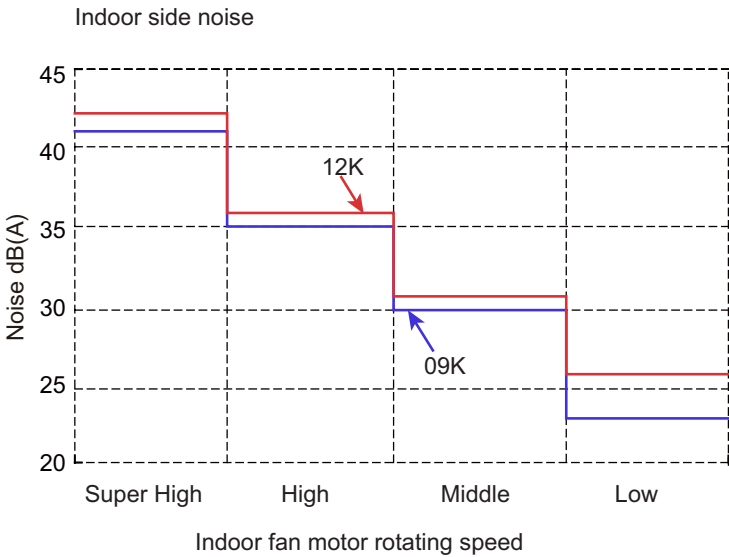


3. Outline Dimension Diagram

3.1 Indoor Unit

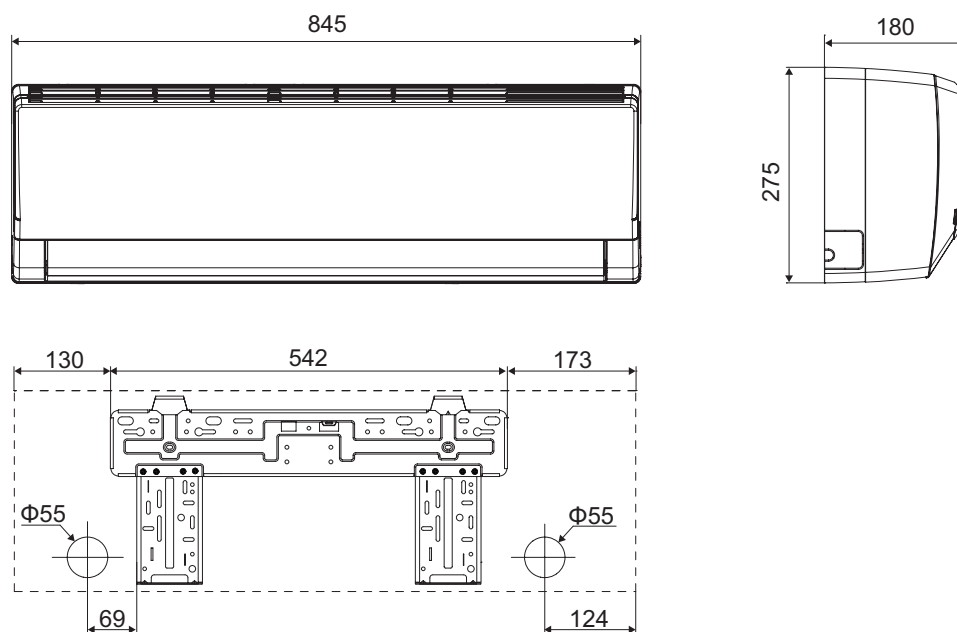


3.2 Outdoor Unit

GWH09RB-K3DBA5E/O
GWH09RB-K3DBA3E/O(LCLH)

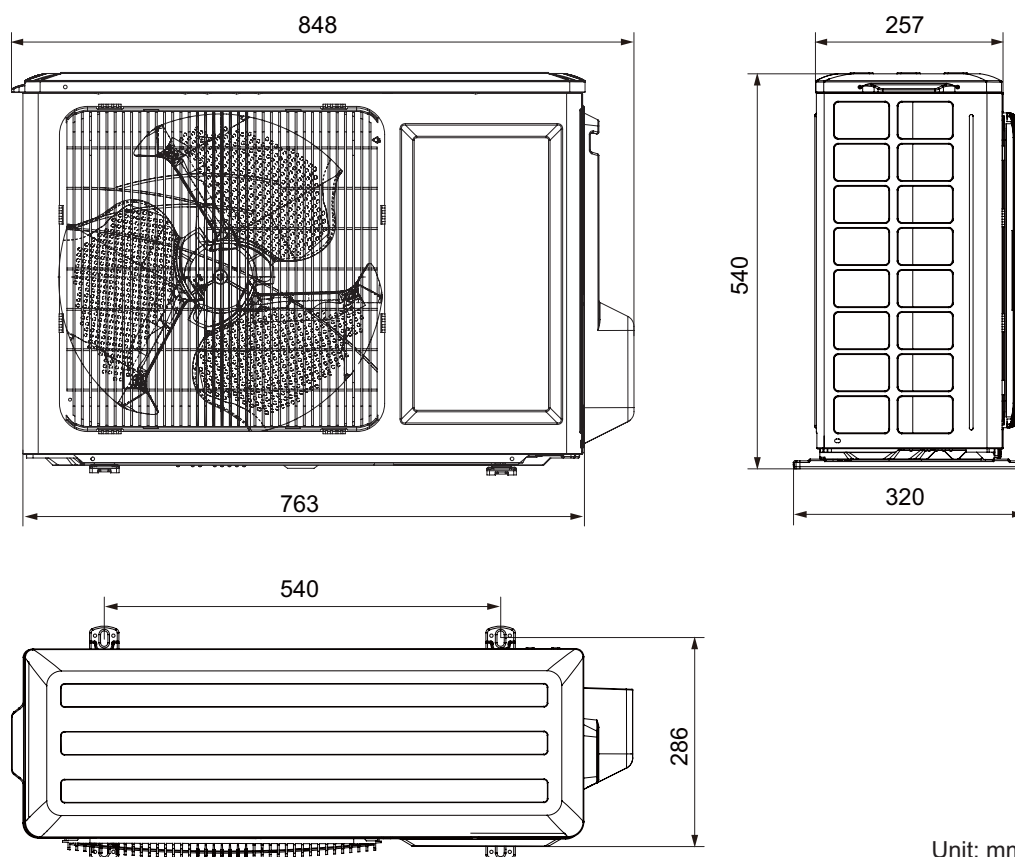


Unit: mm

GWH12RB-K3DBA5E/O
GWH12RB-K3DBA3E/O(LCLH)

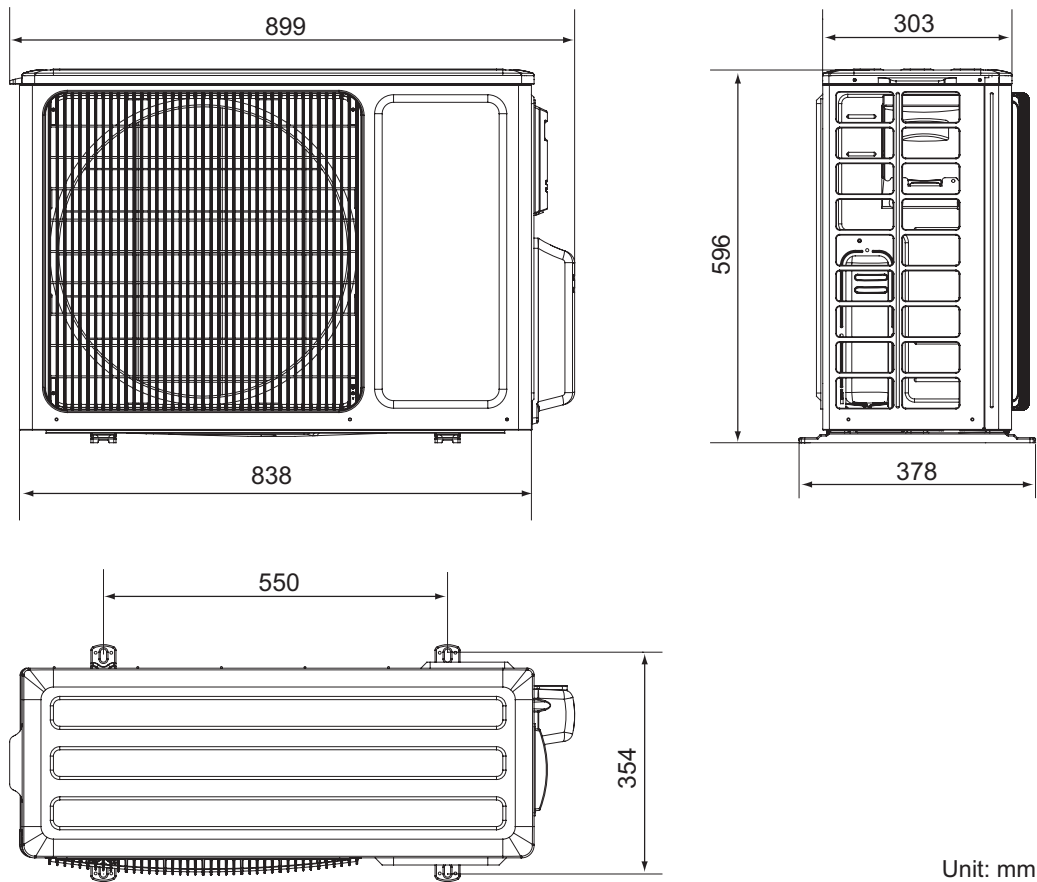

Unit: mm

4. Refrigerant System Diagram

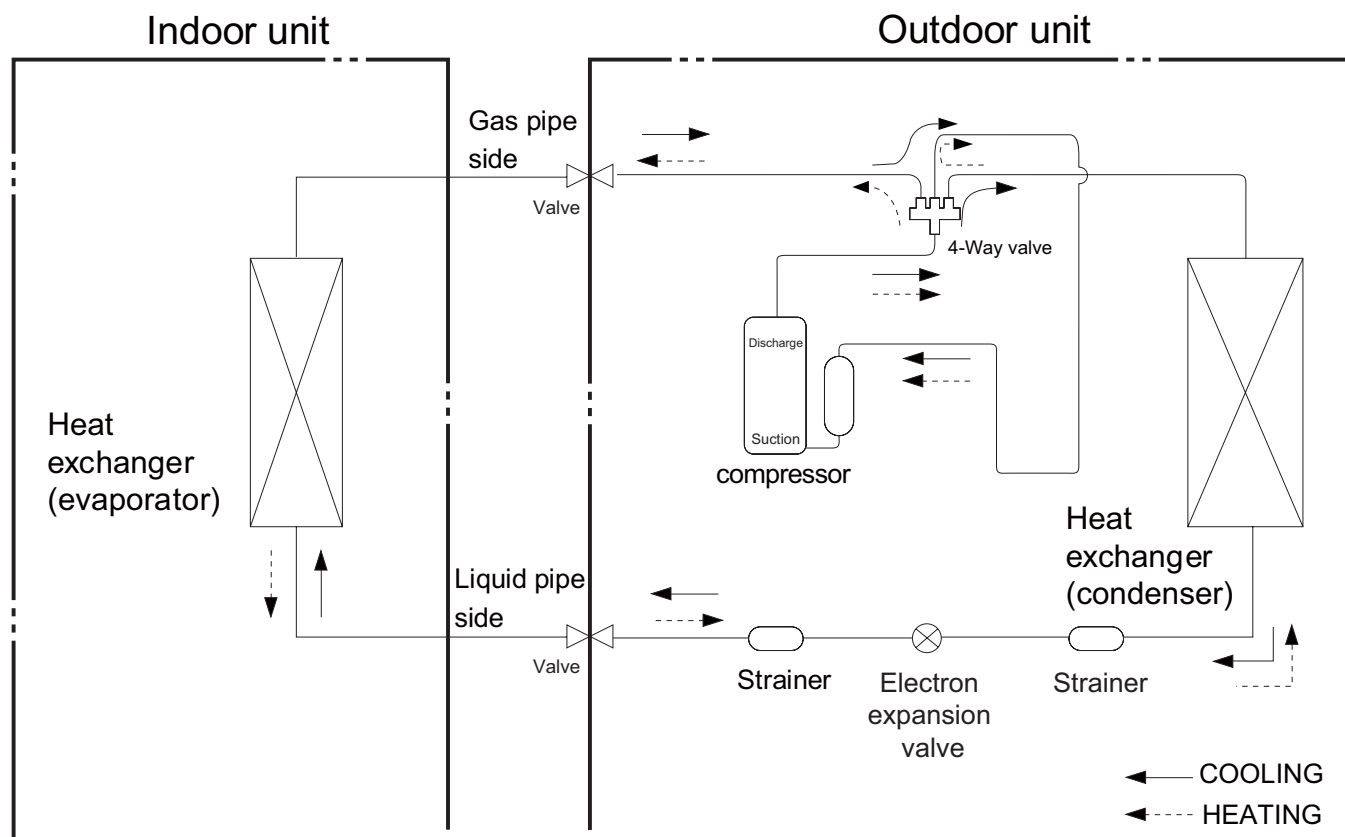

Connection pipe specification:

Liquid : 1/4" (6mm) Gas : 3/8" (9.52mm)

5. Electrical Part

5.1 Wiring Diagram


● Instruction

Symbol	Symbol Color	Symbol	Symbol Color	Symbol	Name
WH	White	GN	Green	CAP	Jumper cap
YE	Yellow	BN	Brown	COMP	Compressor
RD	Red	BU	Blue		Grounding wire
YEGN	Yellow/Green	BK	Black	/	/
VT	Violet	OG	Orange	/	/


Note: Jumper cap is used to determine fan speed and the swing angle of horizontal lover for this model.

● Indoor Unit

GWH09RB-K3DBA5E/I GWH12RB-K3DBA5E/I

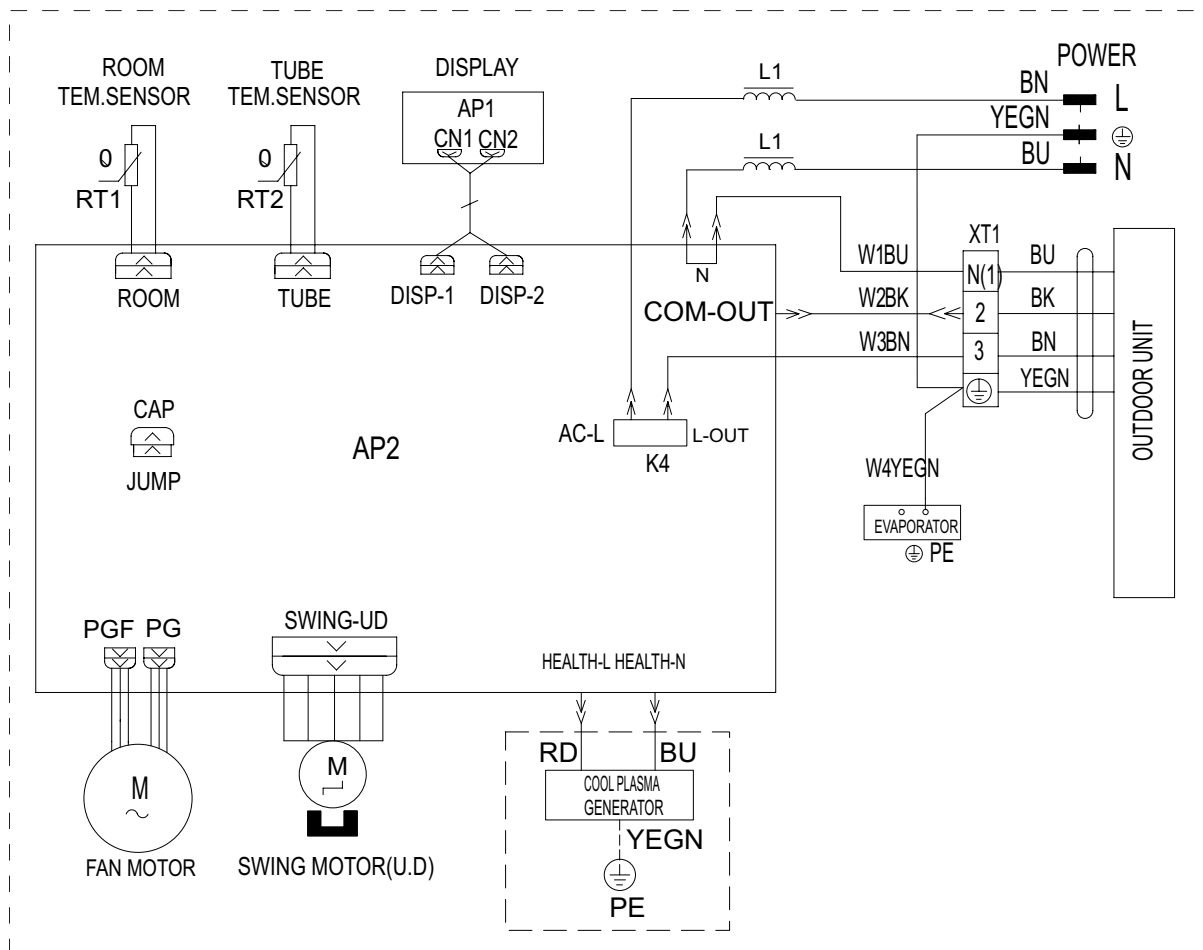


GWH09RB-K3DBA3E/I(Cold Plasma) GWH12RB-K3DBA3E/I(Cold Plasma)

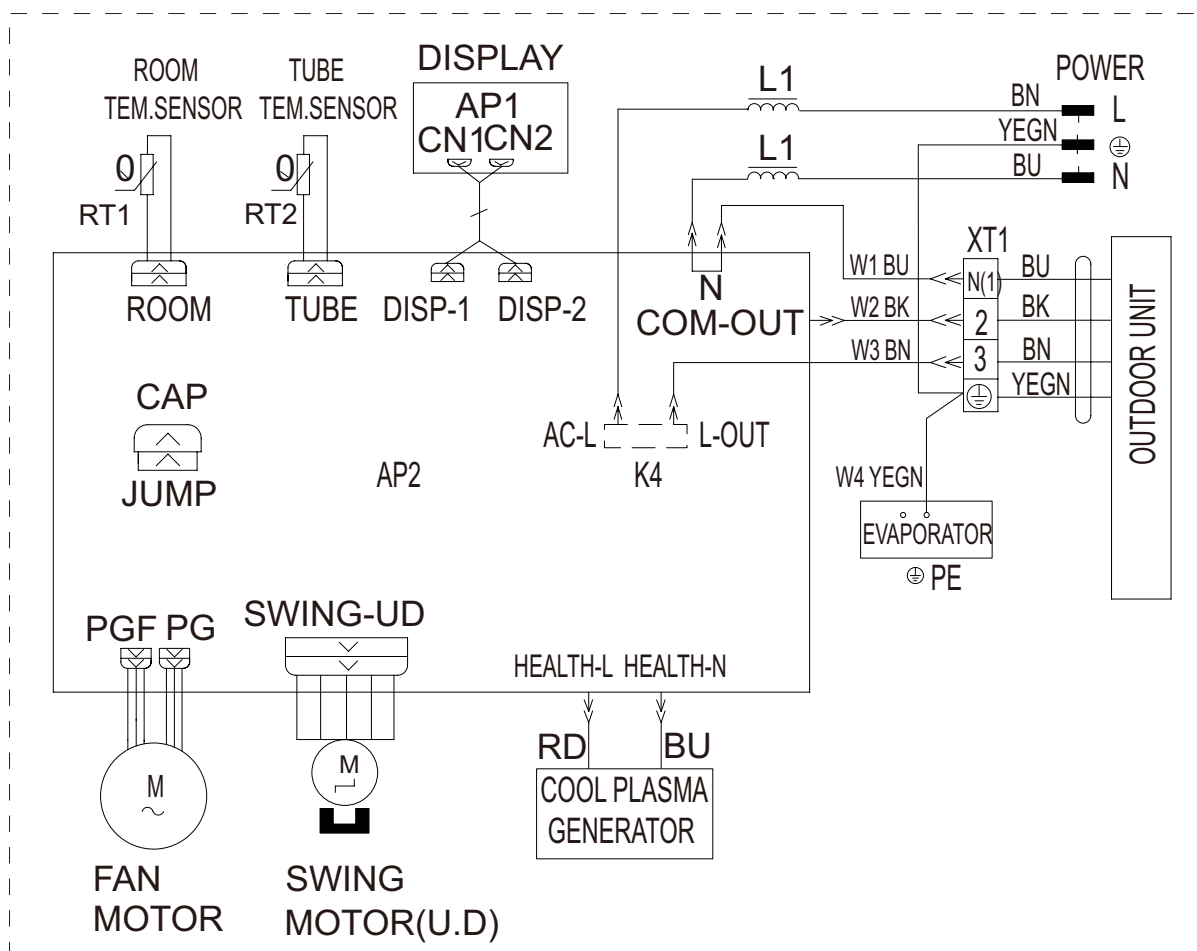


• Outdoor Unit


GWH09RB-K3DBA3E/O(LCLH)

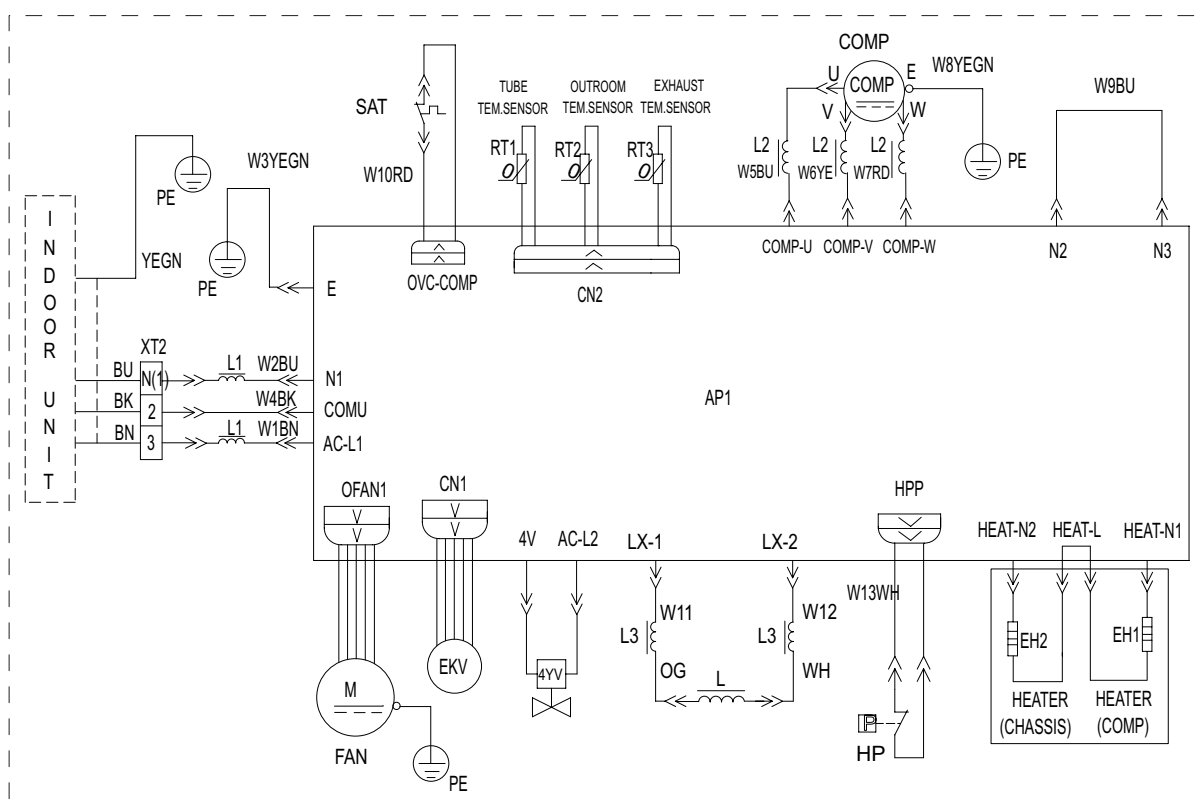

GWH09RB-K3DBA5E/O

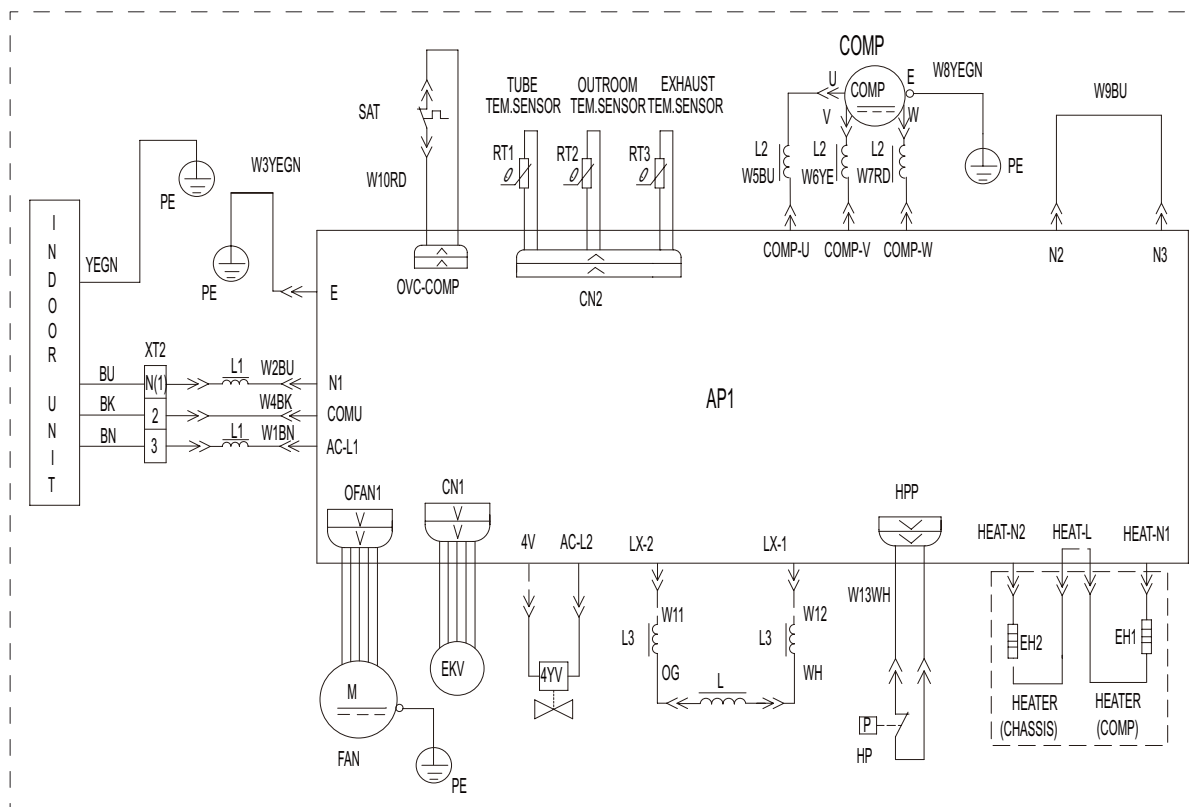

GWH12RB-K3DBA5E/O GWH12RB-K3DBA3E/O(LCLH)

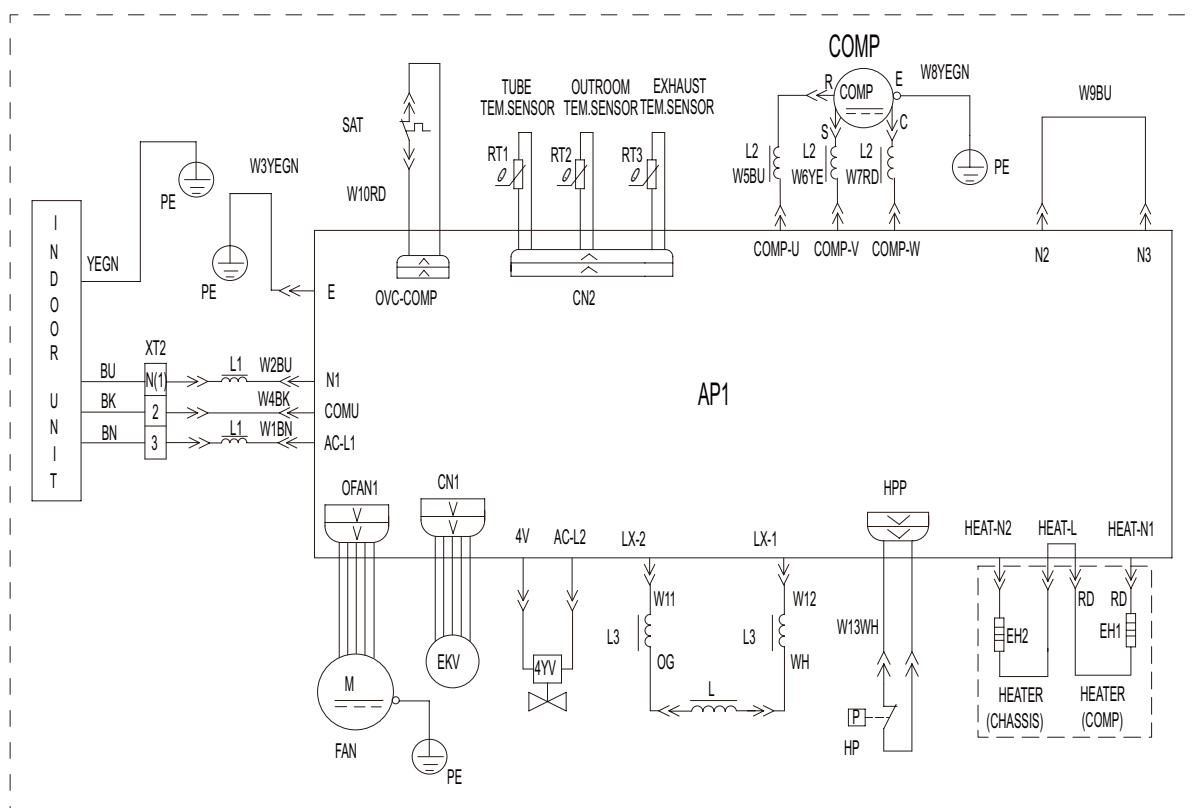


These wiring diagrams are subject to change without notice; please refer to the one supplied with the unit.


5.2 PCB Printed Diagram

Indoor Unit


• Top view

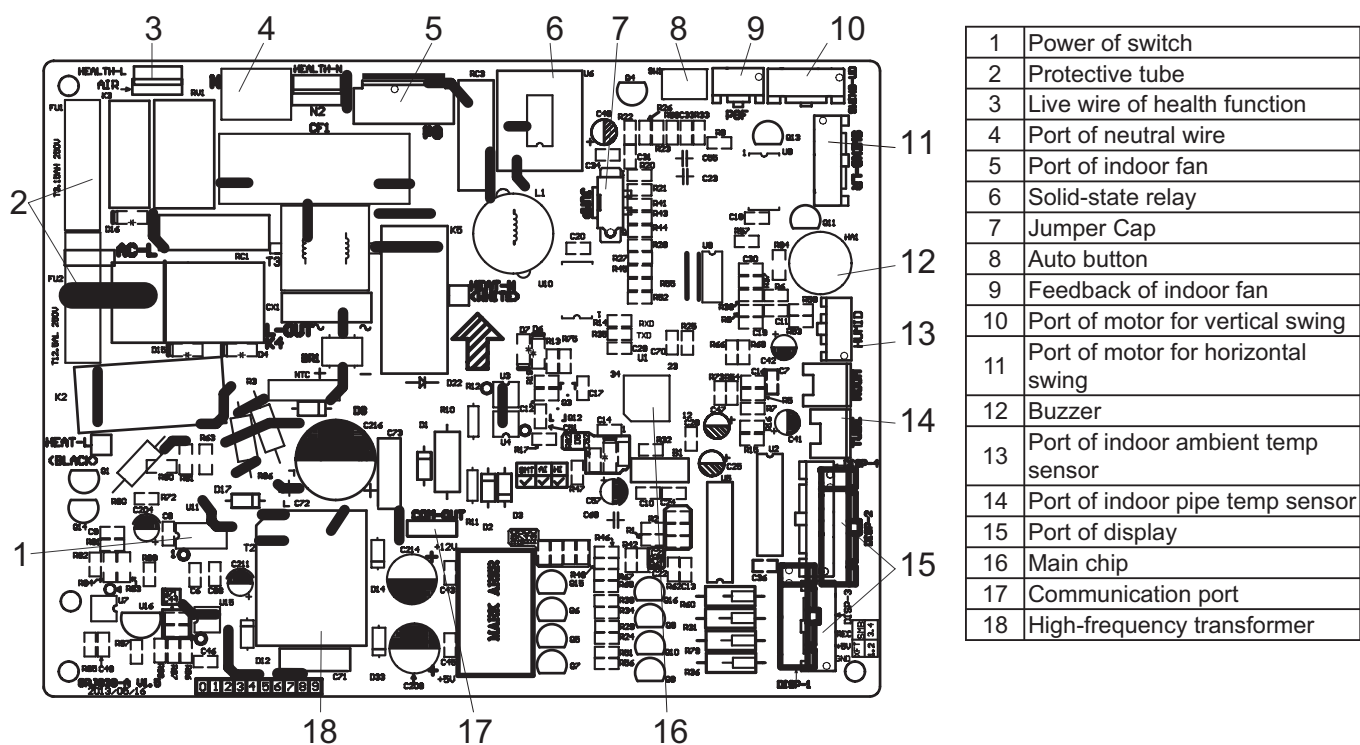

• Bottom view

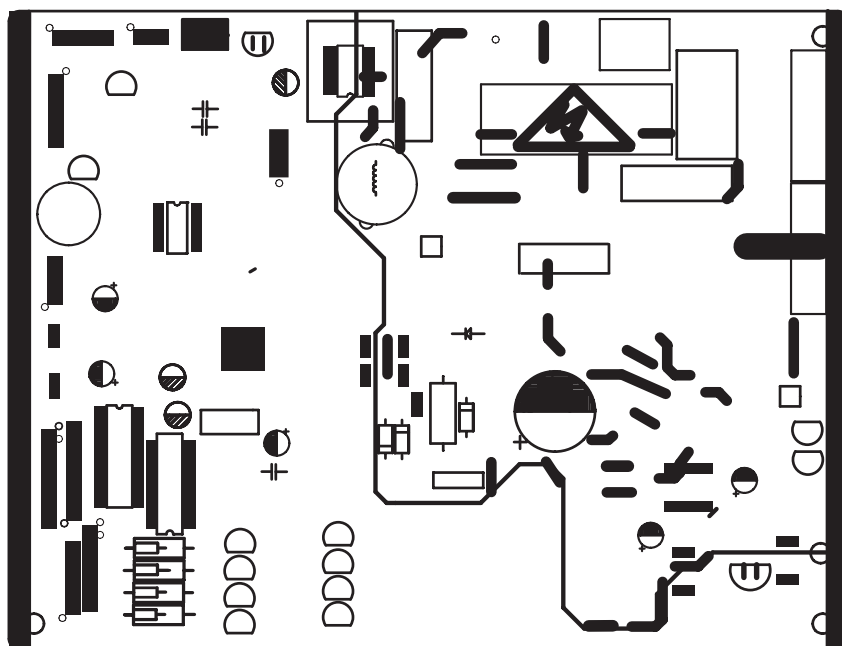


- **Top view**

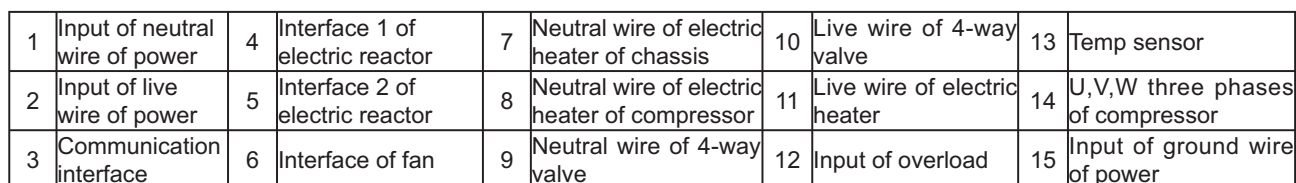


6. Function and Control

6.1 Remote Controller Introduction

Buttons on Remote Controller

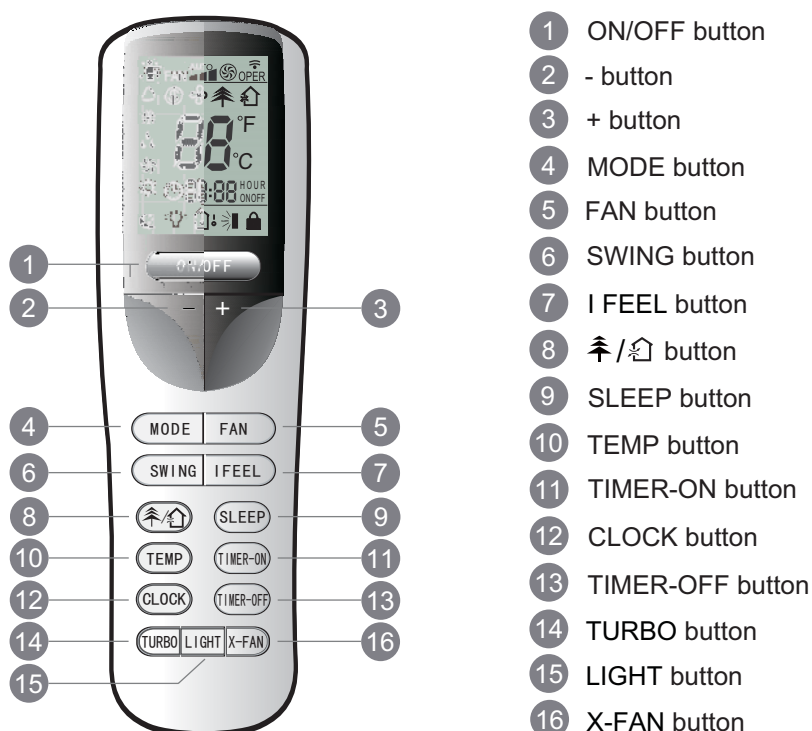

Introduction for Icons on Display Screen

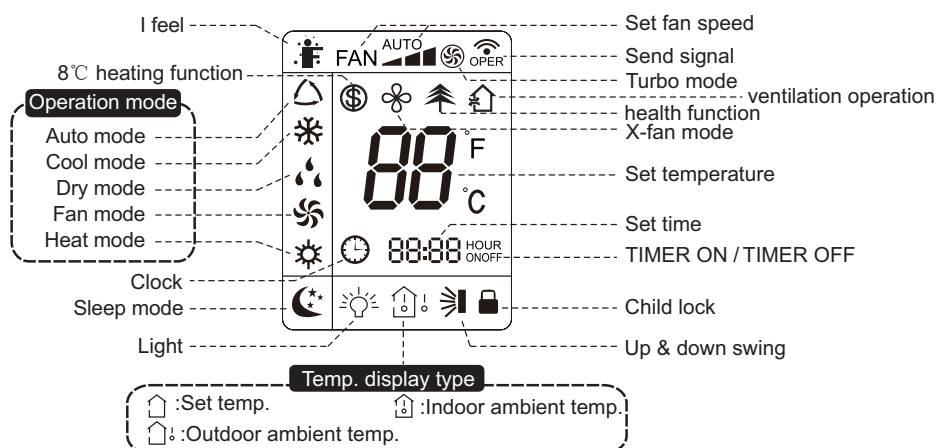

Introduction for Buttons on Remote Controller

Note:

- After putting through the power, the air conditioner will give out a sound. Operation indicator " " is ON (red indicator). After that, you can operate the air conditioner by using remote controller.
- Under on status, pressing the button on the remote controller, the signal icon " " on the display of remote controller will blink once and the air conditioner will give out a "de" sound, which means the signal has been sent to the air conditioner.
- Under off status, set temperature and clock icon will be displayed on the display of remote controller (If timer on, timer off and light functions are set, the corresponding icons will be displayed on the display of remote controller at the same time); Under on status, the display will show the corresponding set function icons.

1. ON/OFF Button

Press this button to turn on the unit. Press this button again to turn off the unit.

2. - Button

Press this button to decrease set temperature. Holding it down above 2 seconds rapidly decreases set temperature. In AUTO mode, set temperature is not adjustable.

3. + Button

Press this button to increase set temperature. Holding it down above 2 seconds rapidly increases set temperature. In AUTO mode, set temperature is not adjustable.

4. MODE Button

Each time you press this button, a mode is selected in a sequence that goes from AUTO, COOL, DRY, FAN, and HEAT*, as the following:

AUTO ► COOL ► DRY ► FAN ► HEAT*

 


*Note: Only for models with heating function.

After energization, AUTO mode is defaulted. In AUTO mode, the set temperature will not be displayed on the LCD, and the unit will automatically select the suitable operation mode in accordance with the room temperature to make indoor room comfortable. (As for cooling only unit, it won't have any action when it receives the signal of heating operation.)

5. FAN Button

This button is used for setting Fan Speed in the sequence that goes from AUTO, Low speed, Medium speed, High speed, then back to Auto.



6. SWING Button

Press this button to set up & down swing angle, which circularly changes as below:



This remote controller is universal. If any command 10°, 20°, or 30° is sent out, the unit will carry out the command as 10°. 10° indicates the guide louver swings as: 10°, 20°, 30°, 40°, 50°, 60°, 70°, 80°, 90°.

7. I FEEL Button

Press this button to turn on I FEEL function. The unit automatically adjust temperature according to the sensed temperature. Press this button again to cancel I FEEL function.

8. Healthy / Scavenging Button


Press this button to achieve the on and off of healthy and scavenging functions in operation status. Press this button for the first time to start scavenging function; LCD displays "Scavenging". Press the button for the second time to start healthy and scavenging functions simultaneously; LCD displays "Healthy" and "Scavenging". Press this button for the third time to quit healthy and scavenging functions simultaneously. Press the button for the fourth time to start healthy function; LCD display "Healthy". Press this button again to repeat the operation above. (This function is applicable to partial of models)

9. SLEEP Button

Press this button to go into the SLEEP operation mode. Press it again to cancel this function. This function is available in COOL, HEAT (Only for models with heating function) or DRY mode to maintain the most comfortable temperature for you.

10. TEMP Button


Press this button can see indoor set temperature, indoor ambient temperature or outdoor ambient temperature on indoor unit's display. Temperature is set circularly by remote controller as below:

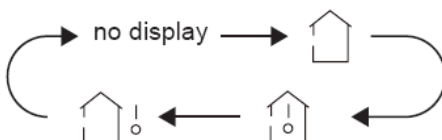



- When selecting "❏" by remote controller or no display, temperature indicator on indoor unit displays set temperature.
- When selecting "❏" by remote controller, temperature indicator on indoor unit displays indoor ambient temperature.
- When selecting "❏" by remote controller, temperature indicator on indoor unit displays outdoor ambient temperature.

11. TIMER-ON Button

Press this button to initiate the auto-ON timer. To cancel the auto-timer program, simply press this button again.

After press of this button,  disappears and "ON" blinks. 00:00 is displayed for ON time setting. Within 5 seconds, press + or - button to adjust the time value. Every press of either button changes the time setting by 1 minute. Holding down either button rapidly changes the time setting by 1 minute and then 10 minutes. Within 5 Seconds after setting, press TIMER ON button to confirm.

12. CLOCK Button

Press CLOCK button, blinking.  Within 5 seconds, pressing + or - button adjusts the present time. Holding down either button above 2 seconds increases or decreases the time by 1 minute every 0.5 second and then by 10 minutes every 0.5 second. During blinking after setting, press CLOCK button again to confirm the setting, and  then will be constantly displayed.



13. TIMER-OFF Button

Press this button to initiate the auto-off timer. To cancel the auto-timer program, simply press the button again. TIMER OFF setting is the same as TIMER ON.


14. TURBO Button

Press this button to activate / deactivate the Turbo function which enables the unit to reach the preset temperature in the shortest time. In COOL mode, the unit will blow strong cooling air at super high fan speed. In HEAT mode, the unit will blow strong heating air at super high fan speed.

15. LIGHT Button



Press LIGHT button to turn on the display's light and press this button again to turn off the display's light. If the light is turned on,  is displayed. If the light is turned off,  disappears.

16. X-FAN Button

Pressing X-FAN button in COOL or DRY mode, the icon  is displayed and the indoor fan will continue operation for 10 minutes in order to dry the indoor unit even though you have turned off the unit.

After energization, X-FAN OFF is defaulted. X-FAN is not available in AUTO, FAN or HEAT mode.

17. Combination of "+" and "-" buttons: About lock

Press "+" and "-" buttons simultaneously to lock or unlock the keypad. If the remote controller is locked,  is displayed. In this case, pressing any button,  blinks three times.

18. Combination of "MODE" and "-" buttons: About switch between Fahrenheit and centigrade

At unit OFF, press "MODE" and "-" buttons simultaneously to switch between °C and °F.

19. Combination of "TEMP" and "CLOCK" buttons: About Energy-saving Function

Press "TEMP" and "CLOCK" simultaneously in COOL mode to start energy-saving function. Nixie tube on the remote controller displays "SE". Repeat the operation to quit the function.

20. Combination of "TEMP" and "CLOCK" buttons: About 8°C Heating Function

Press "TEMP" and "CLOCK" simultaneously in HEAT mode to start 8°C Heating Function. Nixie tube on the remote controller displays "8" and a selected temperature of "8°C". (46°F if Fahrenheit is adopted). Repeat the operation to quit the function.

21. About Back-lighting Function

The unit lights for 4s when energizing for the first time, and 3s for later press.

22. About HEALTH function (COLD PLASMA)

Turn on the unit, start up the fan (Breezing and X-FAN are excluded) and press HEALTH button on remote controller to start health function (If there is not HEALTH button on remote controller, the unit defaults health function ON.)

23. Operation guide

1. After putting through the power, press "ON/OFF" button on remote controller to turn on the air conditioner.
2. Press "MODE" button to select your required mode: AUTO, COOL, DRY, FAN, HEAT.
3. Press "+" or "-" button to set your required temperature. (Temperature can't be adjusted under auto mode).
4. Press "FAN" button to set your required fan speed: auto, low, medium and high speed.
5. Press "SWING" button to select fan blowing angle.

Replacement of Batteries in Remote Controller



1. Press the back side of remote controller marked with "OPEN" as shown in the fig, and then push out the cover of battery box along the arrow direction.
2. Replace two 7# (AAA 1.5V) dry batteries, and make sure the position of "+" polar and "-" polar are correct.
3. Reinstall the cover of battery box.

Note:

- During operation, point the remote control signal sender at the receiving window on indoor unit.
- The distance between signal sender and receiving window should be no more than 8m, and there should be no obstacles between them.
- Signal may be interfered easily in the room where there is fluorescent lamp or wireless telephone; remote controller should be close to indoor unit during operation.
- Replace new batteries of the same model when replacement is required.
- When you don't use remote controller for a long time, please take out the batteries.
- If the display on remote controller is fuzzy or there's no display, please replace batteries.

Emergency Operation

If remote controller is lost or damaged, please use auxiliary button to turn on or turn off the air conditioner. The operation in details are as below: As shown in the fig. Open panel, press aux. button to turn on or turn off the air conditioner. When the air conditioner is turned on, it will operate under auto mode.

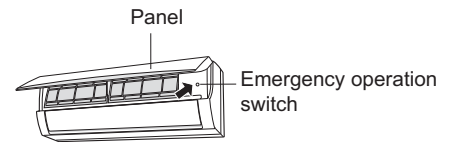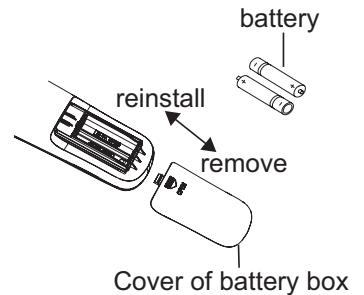

6.2 Brief Description of Modes and Functions

1. Temperature Parameters

- ◆ Indoor preset temperature (T_{preset})
- ◆ Indoor ambient temperature ($T_{\text{amb.}}$)

2. Basic Functions

Once energized, in no case should the compressor be restarted within less than 3 minutes. In the situation that memory function is available, for the first energization, if the compressor is at stop before de-energization, the compressor will be started without a 3-minute lag; if the compressor is in operation before de-energization, the compressor will be started with a 3-minute lag; and once started, the compressor will not be stopped within 6 minutes regardless of changes in room temperature;

(1) COOL Mode


① The condition and process of cooling

If $T_{\text{amb.}} \geq T_{\text{preset}}$ COOL mode will act, the compressor and outdoor fan will run, and the indoor fan will run at the set speed.

If $T_{\text{amb.}} \leq T_{\text{preset}} - 2^\circ\text{C}$, the compressor will stop, the outdoor fan will delay 30 seconds to stop, and the indoor fan will run at the set speed.

If $T_{\text{preset}} - 2^\circ\text{C} \leq T_{\text{amb.}} \leq T_{\text{preset}}$, the unit will keep running in the previous mode.

In this mode, the reversal valve will not be powered on and the temperature setting range is $16 \sim 30^\circ\text{C}$.

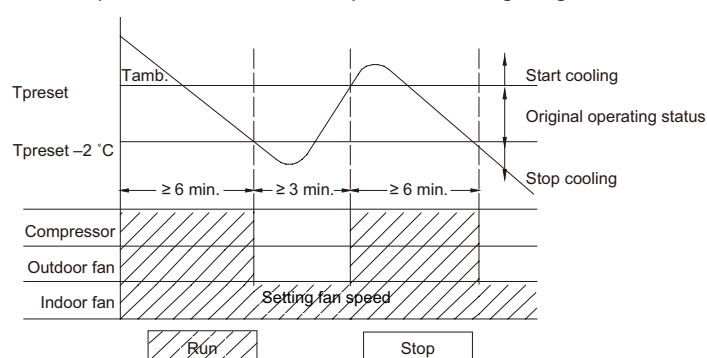


② Protection function

◆ Overcurrent protection

If total current is high, the compressor will run in limited frequency. If total current is too high, the compressor will stop, the outdoor fan will delay 30 seconds to stop, indoor unit will display E5 and outdoor yellow light will blink 5 times.

◆ Antifreezing protection

When the antifreezing protection is detected, the compressor will stop, the outdoor fan will stop after 30 seconds, and the indoor fan and swing motor will keep running in the original mode. When antifreezing protection is eliminated and the compressor has stopped for 3 minutes, the compressor will resume running in the original mode.

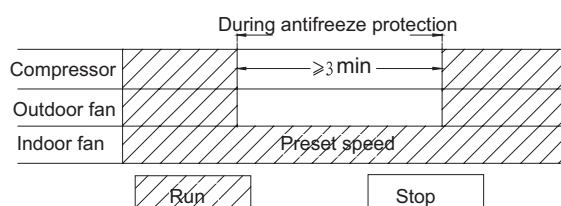

(2) Dehumidifying Mode

① Working conditions and process of dehumidifying

If $T_{\text{amb.}} > T_{\text{preset}}$, the unit will enter cooling and dehumidifying mode, in which case the compressor and the outdoor fan will operate and the indoor fan will run at low speed.

If $T_{\text{preset}} - 2^\circ\text{C} \leq T_{\text{amb.}} \leq T_{\text{preset}}$, the compressor remains at its original operation state.

If $T_{\text{amb.}} < T_{\text{preset}} - 2^\circ\text{C}$, the compressor will stop, the outdoor fan will stop with a time lag of 30s, and the indoor fan will operate at low speed.

② Protection

Protection is the same as that under the cooling mode.

(3) HEAT Mode

① The condition and process of heating

If $T_{\text{amb.}} \leq T_{\text{preset}} + 2^\circ\text{C}$, HEAT mode will act, the compressor, outdoor fan and reversal valve will run, the indoor fan will delay 3min to stop at the latest.

If $T_{\text{preset}} + 2^\circ\text{C} < T_{\text{amb.}} < T_{\text{preset}} + 5^\circ\text{C}$, the unit will keep running in the original mode.

If $T_{\text{amb.}} \geq T_{\text{preset}} + 5^\circ\text{C}$, the compressor will stop, the outdoor fan will delay 30sec to stop and indoor fan will blow 60S at low speed, the fan speed cannot be shifted within blow residual heat.

◆ In this mode, the temperature setting range is $16 \sim 30^\circ\text{C}$.


◆ The air conditioner will adjust the running frequency of the compressor automatically according to the change of ambient temperature.

◆ When the unit is turned off in HEAT mode, or switched to other mode from HEAT mode, the four-way valve will be powered off after

the compressor stops.


◆ When compressor is running (not including each malfunction and protection):

- When outdoor ambient temperature $\geq 20^{\circ}\text{C}$ and indoor fan speed is low or medium, the fan speed will turn to high; if indoor fan speed is high or super high, it will keep the same.
- When outdoor ambient temperature $\leq 18^{\circ}\text{C}$, the fan speed will resume set fan speed.
- When $18^{\circ}\text{C} < \text{outdoor ambient temperature} < 20^{\circ}\text{C}$, it will run at present fan speed (set fan speed or high fan speed); but when first exiting cold air prevention after entering heating mode, it will run in set fan speed.

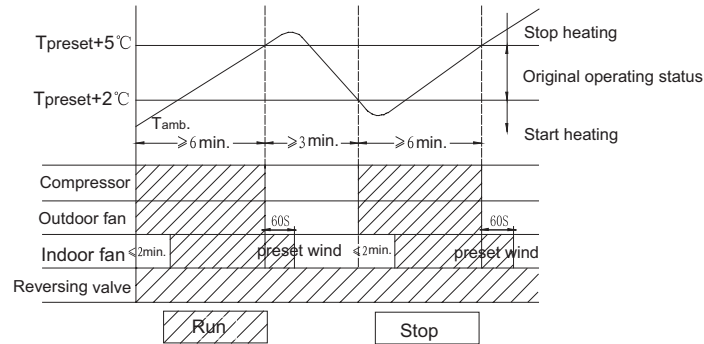

② The condition and process of defrosting

When frost is detected in the condenser, the system will enter into defrosting state. When defrosting starts, the compressor and indoor fan will stop, and the outdoor fan and four-way valve will delay 30 seconds to stop. The compressor will start after 15 seconds and then defrosting will be started. When the compressor has run for 7 minutes or defrosting is finished, the compressor will stop. After 30 seconds the four-way valve opens and after another 60 seconds, the compressor and outdoor fan resume running. The indoor fan will delay 3 minutes to run at the latest. The Heat indicator will be off for 0.5 second in each 10 seconds during defrosting.

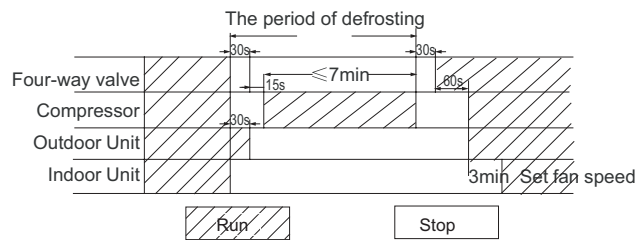

③ Protection function

◆ Anti-cold-wind protection

In HEAT mode, in order to prevent the indoor unit from blowing out cold wind, each time the compressor starts, the indoor fan will delay 3 minutes after the compressor to run at the latest and it can adjust fan speed automatically when temperature is low.

◆ Cold air prevention

The unit is started under heating mode (the compressor is ON):

① In the case of $T_{\text{indoor amb.}} < 24^{\circ}\text{C}$: if $T_{\text{tube}} \leq 40^{\circ}\text{C}$ and the indoor fan is at stop state, the indoor fan will begin to run at low speed with a time lag of 2 minutes. Within 2 minutes, if $T_{\text{tube}} > 40^{\circ}\text{C}$, the indoor fan also will run at low speed; and after 1-minute operation at low speed, the indoor fan will be converted to operation at preset speed. Within 1-minute low speed operation or 2-minute non-operation, if $T_{\text{tube}} \leq 42^{\circ}\text{C}$, the fan will run at present speed.

② In the case of $T_{\text{indoor amb.}} \geq 24^{\circ}\text{C}$: if $T_{\text{tube}} \leq 42^{\circ}\text{C}$, the indoor fan will run at low speed, and after one minute, the indoor fan will be converted to preset speed. Within one-minute low speed operation, if $T_{\text{tube}} > 42^{\circ}\text{C}$, the indoor fan will be converted to preset speed.

Note: $T_{\text{indoor amb.}}$ indicated in ① and ② refers to, under initially heating mode, the indoor ambient temperature before the command to start the compressor is performed according to the program, or after the unit is withdrawn from defrost, the indoor ambient temperature before the defrost symbol is cleared.

◆ Total current up and frequency down protection

If the total current $I_{\text{total}} \leq W$, frequency rise will be allowed; if $I_{\text{total}} \geq X$, frequency rise will not be allowed; if $I_{\text{total}} \geq Y$, the compressor will run at reduced frequency; and if $I_{\text{total}} \geq Z$, the compressor will stop and the outdoor fan will stop with a time lag of 30s.

(4) Fan Mode

Under the mode, the indoor fan will run at preset speed and the compressor, the outdoor fan, the four-way valve and the electric heater will stop.

Under the mode, temperature can be set within a range of $16 \sim 30^{\circ}\text{C}$.

(5) AUTO Mode

① Operation way of AUTO mode

a. When $T_{\text{ambient}} \geq 26^{\circ}\text{C}$, it will run in cooling mode. The implied set temperature is 25°C (note: the set temperature sending to outdoor unit is 25°C).

b. For heating and cooling unit, when $T_{\text{ambient}} \leq (19^{\circ}\text{C} + T_{\text{supplementary}})$, it will run in heating mode. The implied set temperature is 20°C ; for cooling only unit, when $T_{\text{ambient}} \leq 22^{\circ}\text{C}$, it will run in fan mode and the displayed set temperature is 25°C .

c. For heating and cooling unit, when $(19^{\circ}\text{C} + T_{\text{supplementary}}) < T_{\text{indoor ambient}} < 26^{\circ}\text{C}$ (for cooling only unit, $22^{\circ}\text{C} < T_{\text{indoor ambient}} < 26^{\circ}\text{C}$), it will keep the original running mode. If the unit is energized for the first time, it will run in fan mode.

② Protection

- In cooling operation, protection is the same as that under the cooling mode;
- In heating operation, protection is the same as that under the heating mode;
- When ambient temperature changes, operation mode will be converted preferentially. Once started, the compressor will remain unchanged for at least 6 minutes.

(6) Common Protection Functions and Fault Display under COOL, HEAT, DRY and AUTO Modes

① Overload protection

T_{tube} : measured temperature of outdoor heat exchanger under cooling mode; and measured temperature of indoor heat exchanger under heating mode.

1) Cooling overload

- If $T_{\text{tube}} \leq 52^{\circ}\text{C}$, the unit will return to its original operation state.
- If $T_{\text{tube}} \geq 55^{\circ}\text{C}$, frequency rise is not allowed.
- If $T_{\text{tube}} \geq 58^{\circ}\text{C}$, the compressor will run at reduced frequency.
- If $T_{\text{tube}} \geq 62^{\circ}\text{C}$, the compressor will stop and the indoor fan will run at preset speed.

2) Heating overload

- If $T_{\text{tube}} \leq 50^{\circ}\text{C}$, the unit will return to its original operation state.
- If $T_{\text{tube}} \geq 53^{\circ}\text{C}$, frequency rise is not allowed.
- If $T_{\text{tube}} \geq 56^{\circ}\text{C}$, the compressor will run at reduced frequency.
- If $T_{\text{tube}} \geq 60^{\circ}\text{C}$, the compressor will stop and the indoor fan will blow residue heat and then stop.

② Exhaust temperature protection of compressor

If exhaust temperature $\geq 98^{\circ}\text{C}$, frequency is not allowed to rise.

If exhaust temperature $\geq 103^{\circ}\text{C}$, the compressor will run at reduced frequency.

If exhaust temperature $\geq 110^{\circ}\text{C}$, the compressor will stop.

If exhaust temperature $\leq 90^{\circ}\text{C}$ and the compressor has stayed at stop for at least 3 minutes, the compressor will resume its operation.

③ Communication fault

If the unit fails to receive correct signals for durative 3 minutes, communication fault can be justified and the whole system will stop.

④ Module protection

Under module protection mode, the compressor will stop. When the compressor remains at stop for at least 3 minutes, the compressor will resume its operation. If module protection occurs six times in succession, the compressor will not be started again.

⑤ Overload protection

If temperature sensed by the overload sensor is over 115°C , the compressor will stop and the outdoor fan will stop with a time lag of 30 seconds. If temperature is below 95°C , the overload protection will be relieved.

⑥ If voltage on the DC bus is below 150V or over 420V, the compressor will stop and the outdoor fan will stop with a time lag of 30 seconds. When voltage on the DC bus returns to its normal value and the compressor has stayed at stop for at least 3 minutes, the compressor will resume its operation.

⑦ Faults of temperature sensors

Designation of sensors	Faults
Indoor ambient temperature	The sensor is detected to be open-circuited or short-circuited for successive 5 seconds
Indoor tube temperature	The sensor is detected to be open-circuited or short-circuited for successive 5 seconds
Outdoor ambient temperature	The sensor is detected to be open-circuited or short-circuited for successive 30 seconds
Outdoor tube temperature	The sensor is detected to be open-circuited or short-circuited for successive 30 seconds, and no detection is performed within 10 minutes after defrost begins.
Exhaust	After the compressor has operated for 3 minutes, the sensor is detected to be open-circuited or short-circuited for successive 30 seconds.
Overload	After the compressor has operated for 3 minutes, the sensor is detected to be open-circuited or short-circuited for successive 30 seconds.

3. Other Controls

(1) ON/OFF

Press the remote button ON/OFF: the on-off state will be changed once each time you press the button.

(2) Mode Selection

Press the remote button MODE, then select and show in the following ways: AUTO, COOL, DRY, FAN, HEAT, AUTO.

(3) Temperature Setting Option Button

Each time you press the remote button TEMP+ or TEMP-, the setting temperature will be up or down by 1. Regulating Range: $16\sim 30^{\circ}\text{C}$, the button is useless under the AUTO mode.

(4) Time Switch

You should start and stop the machine according to the setting time by remote control.

(5) SLEEP State Control

- When the air conditioner is under the mode of COOL, and the SLEEP mode has been set well, after the SLEEP state keeps about 1 hour, the pre-setting T will raise 1°C, and it will raise 1°C again after 2 hours, so it raise 2°C in 2 hours, then it will run on at the setting temperature and wind speed.
- When the air conditioner is under the mode of HEAT, and the Timer has been set well, after the SLEEP state keeps about 1 hour, the pre-setting T will reduce 1°C, and it will reduce 1°C again after 2 hours, so it reduce 2°C in 2 hours, then it will run on at the setting temperature and wind speed.
- The setting temperature keeps the same under the FAN mode and AUTO mode.

(6) Indoor Fan Control

Indoor fan could be set at ultra-high, high, medium, low speed by wireless remote controller and operated as that speed.

Auto fan speed could be set as well, indoor fan will operate under auto fan speed as following:

① Under heating mode: auto speed under heating or auto heating mode:

- When $T_{amb.} \leq T_{preset} + 1^{\circ}\text{C}$, indoor fan will operate at high speed;
- When $T_{preset} + 1^{\circ}\text{C} < T_{amb.} < T_{preset} + 3^{\circ}\text{C}$, indoor fan will operate at medium speed;
- When $T_{amb.} \geq T_{preset} + 3^{\circ}\text{C}$, indoor fan will operate at low speed;

There should be at least 180s operation time during switchover of each speed.

② Under cooling mode: auto speed under cooling or auto cooling mode:

- When $T_{amb.} < T_{preset} + 2^{\circ}\text{C}$, indoor fan will operate at high speed;
- When $T_{preset} < T_{amb.} < T_{preset} + 2^{\circ}\text{C}$, indoor fan will operate at medium speed;
- When $T_{amb.} \leq T_{preset}$, indoor fan will operate at low speed;

There should be at least 180s operation time during switchover of each speed.

(7) Buzzer Control


The buzzer will send a “Di” sound when the air conditioner is powered up or received the information sent by the remote control or there is a button input, the single tube cooler doesn’t receive the remote control ON signal under the mode of heating mode.

(8) Auto Button

If the controller is on, it will stop by pressing the button, and if the controller is off, it will be automatic running state by pressing the button, swing on and light on, and the main unit will run based on the remote control if there is remote control order.

(9) Up-and-Down Swinging Control

When power on, the up-and-down motor will firstly move the air deflector to 0 counter-clockwise, close the air outlet. After starting the machine, if you don’t set the swinging function, heating mode and auto-heating mode, the up-and-down air deflector will move to D clockwise; under other modes, the up-and-down air deflector will move to L1. If you set the swinging function when you start the machine, then the wind blade will swing between L and D. The air deflector has 7 swinging states: Location L, Location A, Location B, Location C, Location D, Location L to Location D, stop at any location between L-D (the included angle between L~D is the same). The air deflector will be closed at 0 Location, and the swinging is effectual only on condition that setting the swinging order and the inner fan is running. The indoor fan and compressor may get the power when air deflector is on the default location.

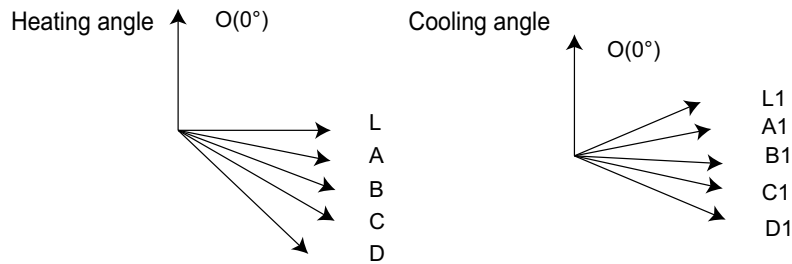

(10) Display

① Operation pattern and mode pattern display

All the display patterns will display for a time when the power on, the operation indication pattern will display in red under standby status. When the machine is start by remote control, the indication pattern will light and display the current operation mode (the mode light includes: Cooling, heating and dehumidify). If you close the light key, all the display patterns will close.

② Double-8 display

According to the different setting of remote control, the nixie light may display the current temperature (the temperature scope is from 16~30°C) and indoor ambient temperature. The heating and air supply temperature will display 25°C under auto-mode, the temperature will display 20°C under the auto-heating mode, and the temperature will display H1 under the defrosting mode. (If you set the fahrenheit temperature display, the nixie light will display according to fahrenheit temperature)

(11) Protection Function and Failure Display

E2: Freeze-proofing protection

E4: Exhausting protection

E5: Overcurrent protection

E6: Communication failure

F1: Indoor ambient sensor start and short circuit (continuously measured failure in 5s)

F2: Indoor evaporator sensor start and short circuit (continuously measured failure in 5s)

F3: Outdoor ambient sensor start and short circuit (continuously measured failure in 30s)

F4: Outdoor condenser sensor start and short circuit (continuously measured failure in 30s, and don't measure within 10 minutes after defrosted)

F5: Outdoor exhausting sensor start and short circuit (continuously measured failure in 30s after the compressor operated 3 minutes)

H3: Overload protection of compressor

H5: Module protection

PH: High-voltage protection

PL: Low-voltage protection

P1: Nominal cooling and heating test

P2: Maximum cooling and heating test

P3: Medium cooling and heating test

P0: Minimum cooling and heating test.

(12) Drying Function

You may start or stop the drying function under the modes of cooling and dehumidify at the starting status (The modes of automatism, heating and air supply do not have drying function). When you start the drying function, after stop the machine by pressing the switch button, you should keep running the inner fans for 2 minutes under low air damper (The swing will operate as the former status within 2 minutes, and other load is stopped), then stop the entire machine; When you stop the drying function, press the switch button will stop the machine directly.

When you start the drying function, operating the drying button will stop the inner fans and close the guide louver.

(13)Memory Function

When interrupting the power supply memory content: mode, swing function, light, set temperature and wind speed. After interrupted the power supply, the machine will start when recovering the power according to the memory content automatically.

Part II : Installation and Maintenance

7. Notes for Installation and Maintenance

Safety Precautions: Important!

Please read the safety precautions carefully before installation and maintenance.

The following contents are very important for installation and maintenance.

Please follow the instructions below.

- The installation or maintenance must accord with the instructions.
- Comply with all national electrical codes and local electrical codes.
- Pay attention to the warnings and cautions in this manual.
- All installation and maintenance shall be performed by distributor or qualified person.
- All electric work must be performed by a licensed technician according to local regulations and the instructions given in this manual.
- Be caution during installation and maintenance. Prohibit incorrect operation to prevent electric shock, casualty and other accidents.



Warnings

Electrical Safety Precautions:

1. Cut off the power supply of air conditioner before checking and maintenance.
2. The air condition must apply specialized circuit and prohibit share the same circuit with other appliances.
3. The air conditioner should be installed in suitable location and ensure the power plug is touchable.
4. Make sure each wiring terminal is connected firmly during installation and maintenance.
5. Have the unit adequately grounded. The grounding wire can't be used for other purposes.
6. Must apply protective accessories such as protective boards, cable-cross loop and wire clip.
7. The live wire, neutral wire and grounding wire of power supply must be corresponding to the live wire, neutral wire and grounding wire of the air conditioner.
8. The power cord and power connection wires can't be pressed by hard objects.
9. If power cord or connection wire is broken, it must be replaced by a qualified person.

10. If the power cord or connection wire is not long enough, please get the specialized power cord or connection wire from the manufacture or distributor. Prohibit prolong the wire by yourself.

11. For the air conditioner without plug, an air switch must be installed in the circuit. The air switch should be all-pole parting and the contact parting distance should be more than 3mm.

12. Make sure all wires and pipes are connected properly and the valves are opened before energizing.

13. Check if there is electric leakage on the unit body. If yes, please eliminate the electric leakage.

14. Replace the fuse with a new one of the same specification if it is burnt down; don't replace it with a cooper wire or conducting wire.

15. If the unit is to be installed in a humid place, the circuit breaker must be installed.

Installation Safety Precautions:

1. Select the installation location according to the requirement of this manual.(See the requirements in installation part)
2. Handle unit transportation with care; the unit should not be carried by only one person if it is more than 20kg.
3. When installing the indoor unit and outdoor unit, a sufficient fixing bolt must be installed; make sure the installation support is firm.
4. Wear safety belt if the height of working is above 2m.
5. Use equipped components or appointed components during installation.
6. Make sure no foreign objects are left in the unit after finishing installation.


Refrigerant Safety Precautions:

1. Avoid contact between refrigerant and fire as it generates poisonous gas; Prohibit prolong the connection pipe by welding.
2. Apply specified refrigerant only. Never have it mixed with any other refrigerant. Never have air remain in the refrigerant line as it may lead to rupture or other hazards.
3. Make sure no refrigerant gas is leaking out when installation is completed.
4. If there is refrigerant leakage, please take sufficient measure to minimize the density of refrigerant.
5. Never touch the refrigerant piping or compressor without wearing glove to avoid scald or frostbite.


Improper installation may lead to fire hazard, explosion, electric shock or injury.

Main Tools for Installation and Maintenance

<p>1. Level meter, measuring tape</p> 	<p>2. Screw driver</p> 	<p>3. Impact drill, drill head, electric drill</p> 
<p>4. Electroprobe</p> 	<p>5. Universal meter</p> 	<p>6. Torque wrench, open-end wrench, inner hexagon spanner</p> 
<p>7. Electronic leakage detector</p> 	<p>8. Vacuum pump</p> 	<p>9. Pressure meter</p> 
<p>10. Pipe pliers, pipe cutter</p> 	<p>11. Pipe expander, pipe bender</p> 	<p>12. Soldering appliance, refrigerant container</p> 

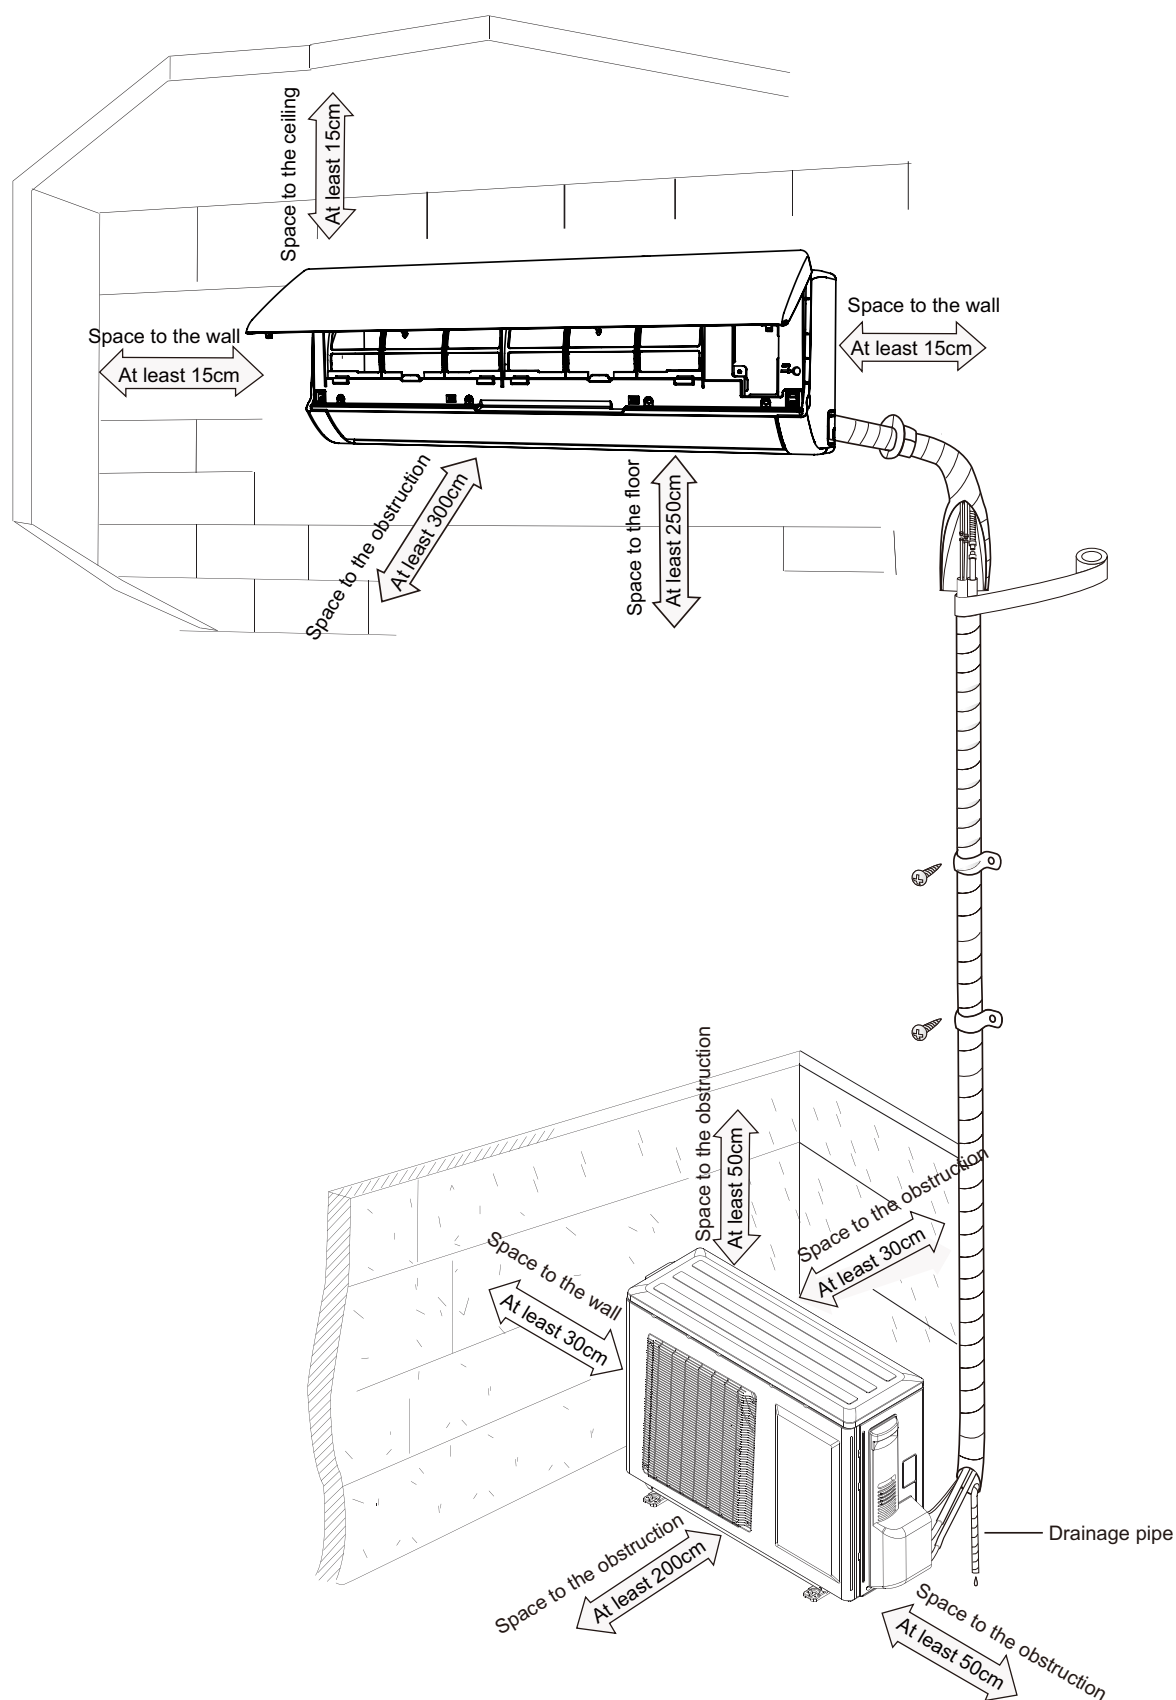

Installation procedures

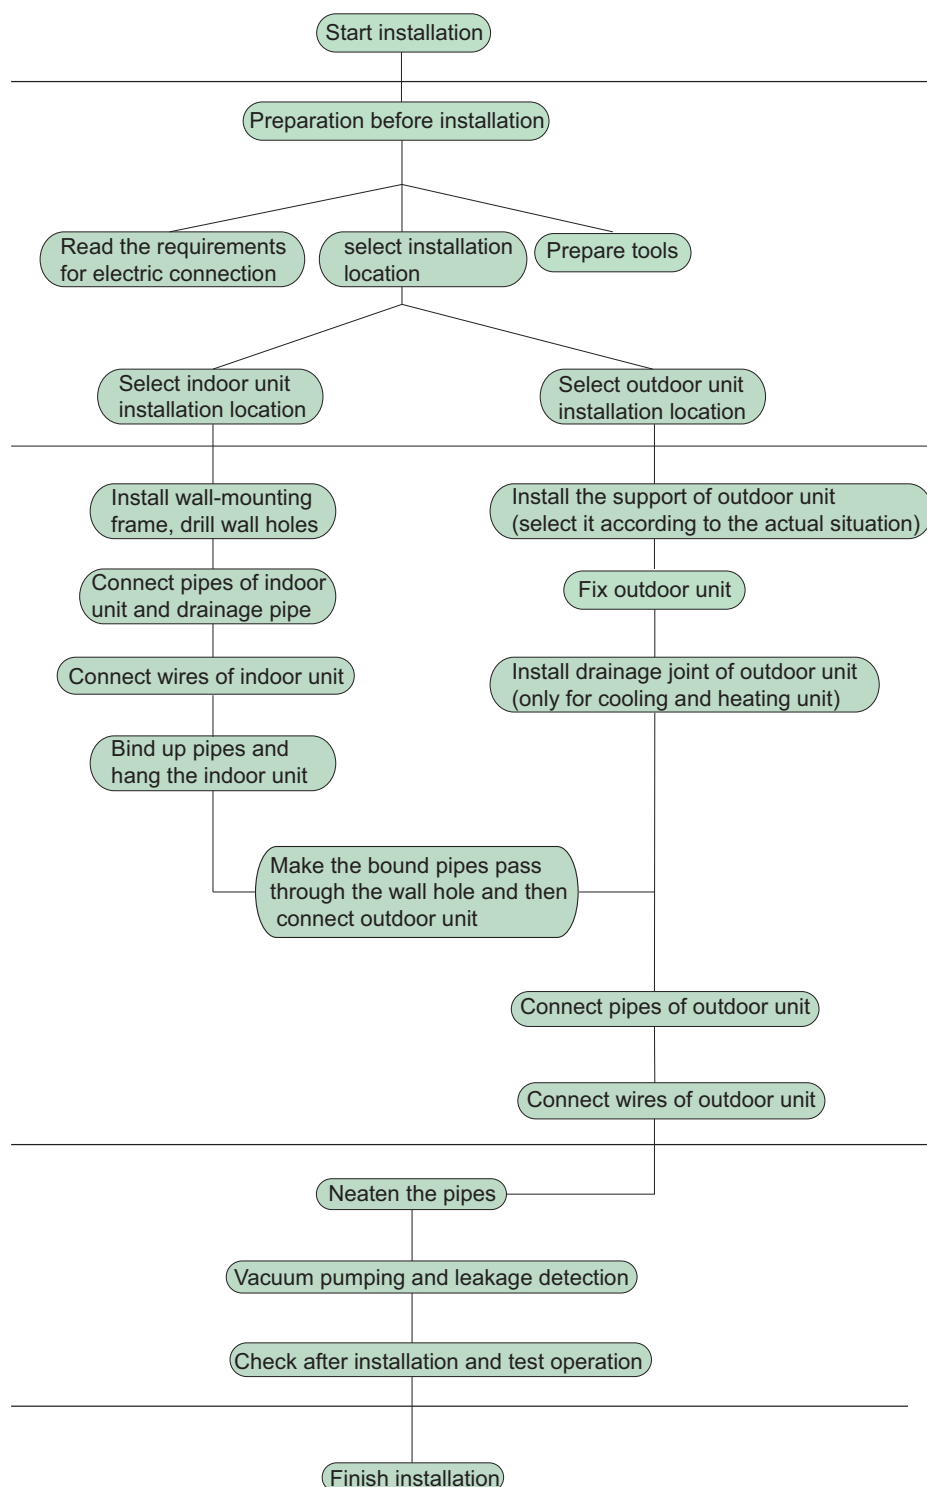

Note: this flow is only for reference; please find the more detailed installation steps in this section.

8.2 Installation Parts-checking

No.	Name	No.	Name
1	Indoor unit	8	Sealing gum
2	Outdoor unit	9	Wrapping tape
3	Connection pipe	10	Support of outdoor unit
4	Drainage pipe	11	Fixing screw
5	Wall-mounting frame	12	Drainage plug(cooling and heating unit)
6	Connecting cable(power cord)	13	Owner's manual, remote controller
7	Wall pipe		

⚠ Note:

- 1.Please contact the local agent for installation.
- 2.Don't use unqualified power cord.

8.3 Selection of Installation Location

1. Basic Requirement:

Installing the unit in the following places may cause malfunction. If it is unavoidable, please consult the local dealer:

- (1) The place with strong heat sources, vapors, flammable or explosive gas, or volatile objects spread in the air.
- (2) The place with high-frequency devices (such as welding machine, medical equipment).
- (3) The place near coast area.
- (4) The place with oil or fumes in the air. in the air.
- (5) The place with sulfureted gas.
- (6) Other places with special circumstances.

2. Indoor Unit:

- (1) There should be no obstruction near air inlet and air outlet.
- (2) Select a location where the condensation water can be dispersed easily and won't affect other people.
- (3) Select a location which is convenient to connect the outdoor unit and near the power socket.
- (4) Select a location which is out of reach for children.
- (5) The location should be able to withstand the weight of indoor unit and won't increase noise and vibration.
- (6) The appliance must be installed 250 cm above floor.
- (7) Don't install the indoor unit right above the electric appliance.
- (8) The appliance shall not be installed in the laundry

3. Outdoor unit:

- 1.Select a location where the noise and outflow air emitted by the outdoor unit will not affect neighborhood.
- 2.The location should be well ventilated and dry, in which the outdoor unit won't be exposed directly to sunlight or strong wind.
- 3.The location should be able to withstand the weight of outdoor unit.
- 4.Make sure that the installation follows the requirement of installation dimension diagram.
- 5.Select a location which is out of reach for children and far away from animals or plants.If it is unavoidable, please add fence for safety purpose.

8.4 Electric Connection Requirement

1. Safety precaution

- (1) Must follow the electric safety regulations when installing the unit.
- (2) According to the local safety regulations, use qualified power supply circuit and air switch.
- (3) Make sure the power supply matches with the requirement of air conditioner. Unstable power supply or incorrect wiring may result in electric shock, fire hazard or malfunction. Please install proper power supply cables before using the air conditioner.

Air-conditioner	Air switch capacity
09K	10A
12K	16A

- (4) Properly connect the live wire, neutral wire and grounding wire of power socket.
- (5) Be sure to cut off the power supply before proceeding any work related to electricity and safety.
- (6) Do not put through the power before finishing installation.
- (7) For appliances with type Y attachment, the instructions shall contain the substance of the following. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- (8) The temperature of refrigerant circuit will be high, please keep the interconnection cable away from the copper tube.

2. Grounding requirement:

- (1) The air conditioner is first class electric appliance. It must be properly grounding with specialized grounding device by a professional. Please make sure it is always grounded effectively, otherwise it may cause electric shock.
- (2) The yellow-green wire in air conditioner is grounding wire, which can't be used for other purposes.
- (3) The grounding resistance should comply with national electric safety regulations.
- (4) The appliance must be positioned so that the plug is accessible
- (5) An all-pole disconnection switch having a contact separation of at least 3mm in all poles should be connected in fixed wiring.
- (6) Including an air switch with suitable capacity, please note the following table. Air switch should be included magnet buckle and heating buckle function, it can protect the circuit-short and overload. (Caution: please do not use the fuse only for protect the circuit)

8.5 Installation of Indoor Unit

1. Choosing Installation location

Recommend the installation location to the client and then confirm it with the client.

2. Install Wall-mounting Frame


- (1) Hang the wall-mounting frame on the wall; adjust it in horizontal position with the level meter and then point out the screw fixing holes on the wall.
- (2) Drill the screw fixing holes on the wall with impact drill (the specification of drill head should be the same as the plastic expansion particle) and then fill the plastic expansion particles

in the holes.


(3) Fix the wall-mounting frame on the wall with tapping screws (ST4.2X25TA) and then check if the frame is firmly installed by pulling the frame. If the plastic expansion particle is loose, please drill another fixing hole nearby.

3. Install Wall-mounting Frame

(1) Choose the position of piping hole according to the direction of outlet pipe. The position of piping hole should be a little lower than the wall-mounted frame.(As show in Fig.1)

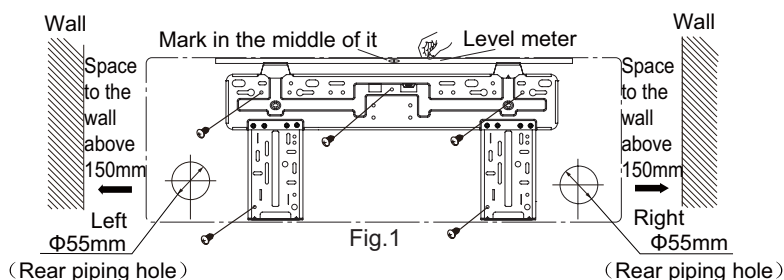

(2) Open a piping hole with the diameter of Φ55 on the selected outlet pipe position. In order to drain smoothly, slant the piping hole on the wall slightly downward to the outdoor side with the gradient of 5-10°. (As show in Fig.2)


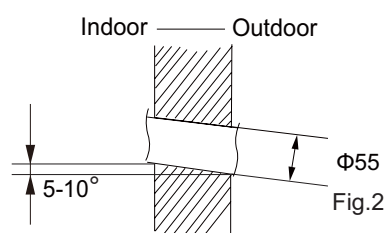


⚠ Note:

- (1) Pay attention to dust prevention and take relevant safety measures when opening the hole.
- (2) The plastic expansion particles are not provided and should be bought locally.



4. Outlet pipe

- (1) The pipe can be led out in the direction of right, rear right, left or rear left. (As show in Fig.3)
- (2) When selecting leading out the pipe from left or right, please cut off the corresponding hole on the bottom case. (As show in Fig.4)

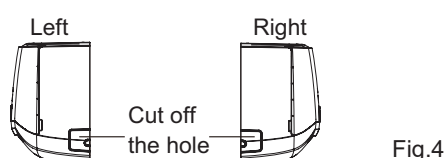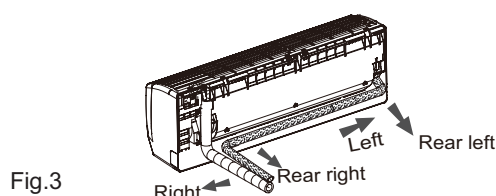

5. Connect the Pipe of Indoor Unit

 - (1) Aim the pipe joint at the corresponding bellmouth. (As show in Fig.5)
- (2) Pretightening the union nut with hand.
- (3) Adjust the torque force by referring to the following sheet. Place the open-end wrench on the pipe joint and place the torque wrench on the union nut. Tighten the union nut with torque wrench. (As show in Fig.6)
- (4) Wrap the indoor pipe and joint of connection pipe with insulating pipe, and then wrap it with tape. (As show in Fig.7)


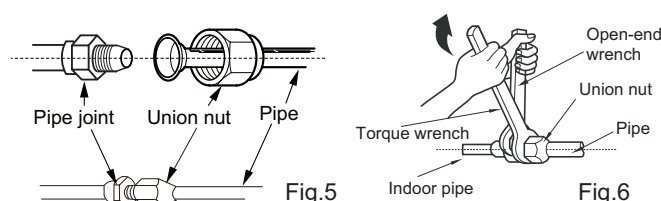


Refer to the following table for wrench moment of force:

Hex nut diameter(mm)	Tightening torque(N.m)
Φ6	15~20
Φ9.52	30~40
Φ12	45~55
Φ16	60~65
Φ19	70~75


6. Install Drain Hose

- (1) Connect the drain hose to the outlet pipe of indoor unit. (As show in Fig.8)
- (2) Bind the joint with tape. (As show in Fig.9)

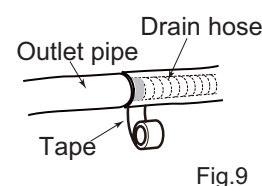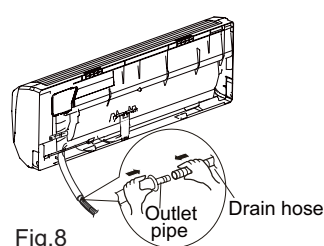


⚠ Note:

- (1) Add insulating pipe in the indoor drain hose in order to prevent condensation.
- (2) The plastic expansion particles are not provided. (As show in Fig.10)

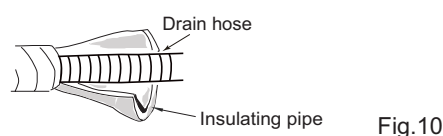


7. Connect Wire of Indoor Unit


(1) Open the panel, remove the screw on the wiring cover and then take down the cover.(As show in Fig.11)

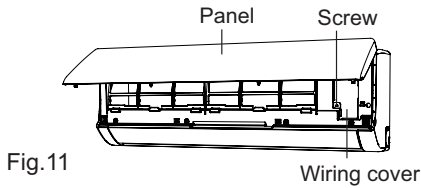

(2) Make the power connection wire go through the cable-cross hole at the back of indoor unit and then pull it out from the front side.(As show in Fig.12)

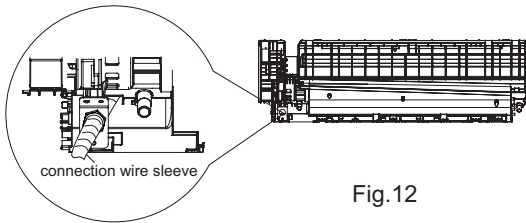

(3) Remove the wire clip; connect the power connection wire to the wiring terminal according to the color; tighten the screw and then fix the power connection wire with wire clip.(As show in Fig.13)

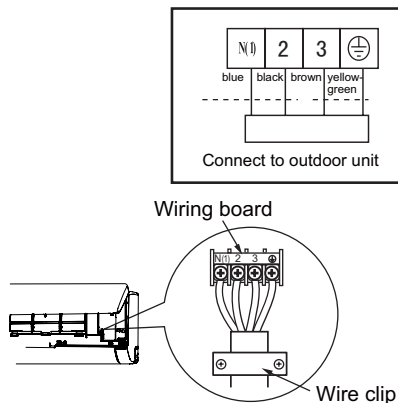

Note: The wiring connect is for reference only, please refer to the actual one

Fig.13

(4) Put wiring cover back and then tighten the screw.
(5) Close the panel.

⚠ Note:

- (1) All wires of indoor unit and outdoor unit should be connected by a professional.
- (2) If the length of power connection wire is insufficient, please contact the supplier for a new one. Avoid extending the wire by yourself.
- (3) For the air conditioner with plug, the plug should be reachable after finishing installation.
- (4) For the air conditioner without plug, an air switch must be installed in the line. The air switch should be all-pole parting and the contact parting distance should be more than 3mm.

8. Bind up Pipe

- (1) Bind up the connection pipe, power cord and drain hose with the band.(As show in Fig.14)
- (2) Reserve a certain length of drain hose and power cord for installation when binding them. When binding to a certain degree, separate the indoor power and then separate the drain hose.(As show in Fig.15)
- (3) Bind them evenly.
- (4) The liquid pipe and gas pipe should be bound separately at the end.

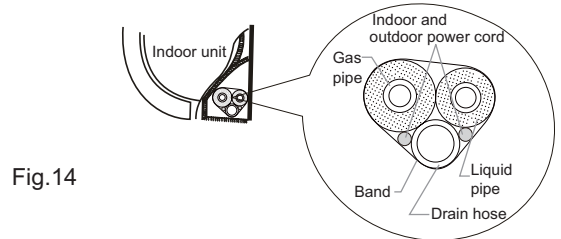


Fig.14

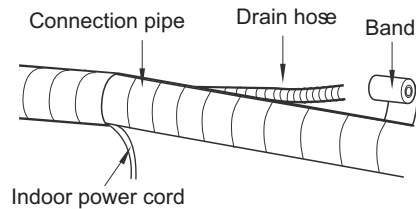


Fig.15

⚠ Note:

- (1) The power cord and control wire can't be crossed or winding.
- (2) The drain hose should be bound at the bottom.

9. Hang the Indoor Unit

- (1) Put the bound pipes in the wall pipe and then make them pass through the wall hole.
- (2) Hang the indoor unit on the wall-mounting frame.
- (3) Stuff the gap between pipes and wall hole with sealing gum.
- (4) Fix the wall pipe.
- (As show in Fig.16)
- (5) Check if the indoor unit is installed firmly and closed to the wall.(As show in Fig.17)

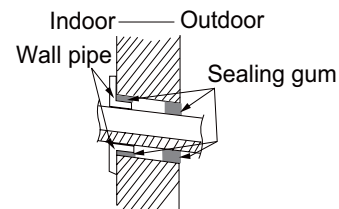


Fig.16

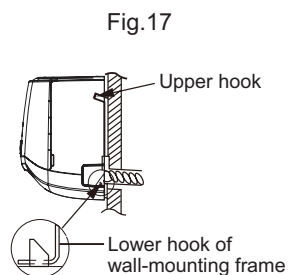


Fig.17

⚠ Note:

Do not bend the drain hose too excessively in order to prevent blocking.

8.6 Installation of Outdoor Unit

1. Fix the support of outdoor unit(select it according to the actual installation situation)

- (1) Select installation location according to the house structure.
- (2) Fix the support of outdoor unit on the selected location with expansion screws.

⚠ Note:

- (1) Take sufficient protective measures when installing the outdoor unit.
- (2) Make sure the support can withstand at least four times the unit weight.
- (3) The outdoor unit should be installed at least 3cm above the floor in order to install drain joint.(As show in Fig.18)
- (4) For the unit with cooling capacity of 2300W~5000W, 6 expansion screws are needed; for the unit with cooling capacity of 6000W~8000W, 8 expansion screws are needed; for the unit with cooling capacity of 10000W~16000W, 10 expansion screws are needed.

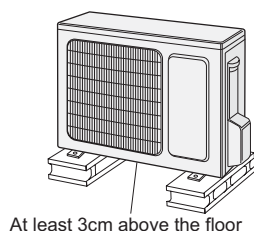


Fig.18

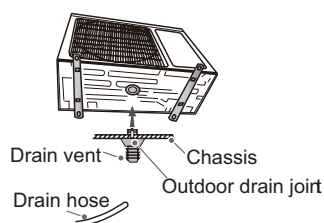


Fig.19

2. Install Drain Joint(Only for cooling and heating unit)

- (1) Connect the outdoor drain joint into the hole on the chassis.
 - (2) Connect the drain hose into the drain vent.
- (As show in Fig.19)

3. Fix Outdoor Unit

- (1) Place the outdoor unit on the support.
 - (2) Fix the foot holes of outdoor unit with bolts.
- (As show in Fig.20)

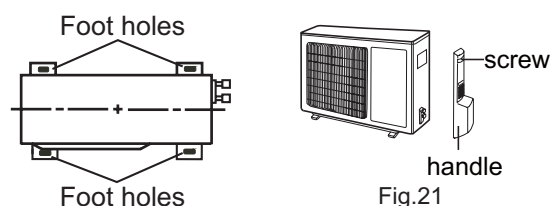


Fig.20

4. Fix Outdoor Unit

- (1) Remove the screw on the right handle of outdoor unit and then remove the handle.(As show in Fig.21)
- (2) Remove the screw cap of valve and aim the pipe joint at the bellmouth of pipe.(As show in Fig.22)

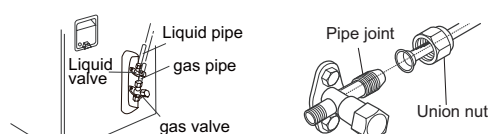


Fig.22


- (3) Pretightening the union nut with hand.
- (4) Tighten the union nut with torque wrench .

Refer to the following table for wrench moment of force :

Hex nut diameter(mm)	Tightening torque(N.m)
Φ6	15~20
Φ9.52	30~40
Φ12	45~55
Φ16	60~65
Φ19	70~75

5. Connect Outdoor Electric Wire

- (1) Remove the wire clip; connect the power connection wire to the wiring terminal according to the color; fix them with screws.
- (As show in Fig.23)

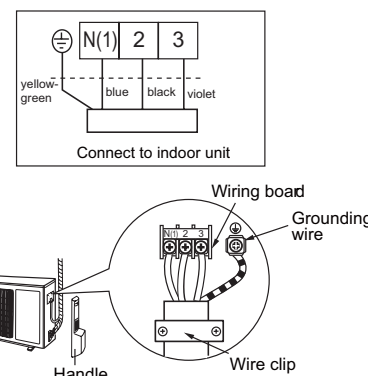

Note: the wiring connect is for reference only, please refer to the actual one.

Fig.23

- (2) Fix the power connection wire with wire clip.

⚠ Note:

- (1) After tightening the screw, pull the power cord slightly to check if it is firm.
- (2) Never cut the power connection wire to prolong or shorten the distance.

6. Neaten the Pipes

- (1) The pipes should be placed along the wall, bent reasonably and hidden possibly. Min. semidiameter of bending the pipe is 10cm.
- (2) If the outdoor unit is higher than the wall hole, you must set a U-shaped curve in the pipe before pipe goes into the room, in order to prevent rain from getting into the room.(As show in Fig.24)

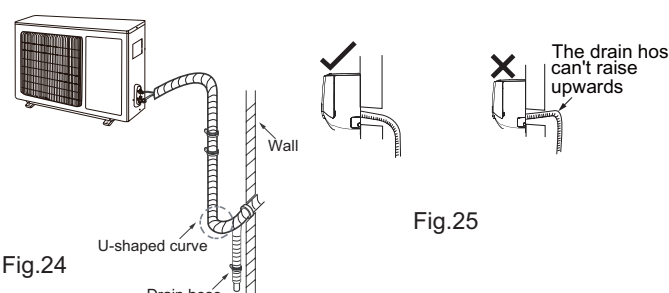



Fig.25

Fig.24

⚠ Note:

- (1) The through-wall height of drain hose shouldn't be higher than the outlet pipe hole of indoor unit.(As show in Fig.25)
- (2) Slant the drain hose slightly downwards. The drain hose can't be curved, raised and fluctuant, etc.(As show in Fig.26)


(3) The water outlet can't be placed in water in order to drain smoothly.(As show in Fig.27)

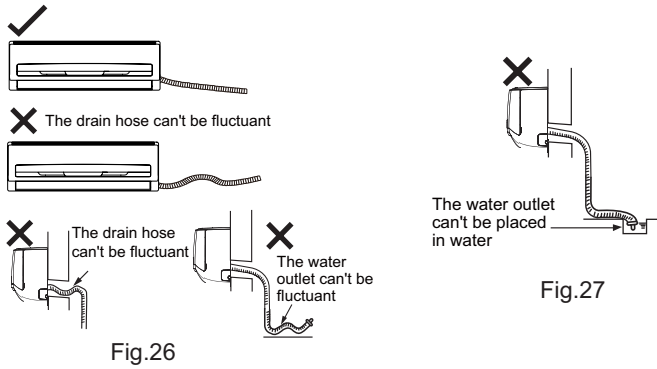

8.7 Vacuum Pumping and Leak Detection

1. Use Vacuum Pump

- (1) Remove the valve caps on the liquid valve and gas valve and the nut of refrigerant charging vent.
 - (2) Connect the charging hose of piezometer to the refrigerant charging vent of gas valve and then connect the other charging hose to the vacuum pump.
 - (3) Open the piezometer completely and operate for 10-15min to check if the pressure of piezometer remains in -0.1MPa.
 - (4) Close the vacuum pump and maintain this status for 1-2min to check if the pressure of piezometer remains in -0.1MPa. If the pressure decreases, there may be leakage.
 - (5) Remove the piezometer, open the valve core of liquid valve and gas valve completely with inner hexagon spanner.
 - (6) Tighten the screw caps of valves and refrigerant charging vent.
- (As show in Fig.28)

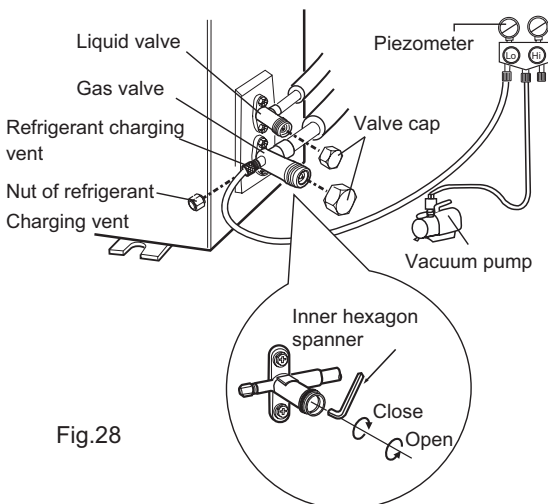

2. Leakage detection

- (1) With leakage detector:
Check if there is leakage with leakage detector.
- (2) With soap water:
If leakage detector is not available, please use soap water for leakage detection. Apply soap water at the suspected position and keep the soap water for more than 3min. If there are air bubbles coming out of this position, there's a leakage.

8.8 Check after Installation and Test Operation

1. Check after Installation

Check according to the following requirement after finishing installation.

NO.	Items to be checked	Possible malfunction
1	Has the unit been installed firmly?	The unit may drop, shake or emit noise.
2	Have you done the refrigerant leakage test?	It may cause insufficient cooling (heating) capacity.
3	Is heat insulation of pipeline sufficient?	It may cause condensation and water dripping.
4	Is water drained well?	It may cause condensation and water dripping.
5	Is the voltage of power supply according to the voltage marked on the nameplate?	It may cause malfunction or damage the parts.
6	Is electric wiring and pipeline installed correctly?	It may cause malfunction or damage the parts.
7	Is the unit grounded securely?	It may cause electric leakage.
8	Does the power cord follow the specification?	It may cause malfunction or damage the parts.
9	Is there any obstruction in air inlet and air outlet?	It may cause insufficient cooling (heating).
10	The dust and sundries caused during installation are removed?	It may cause malfunction or damaging the parts.
11	The gas valve and liquid valve of connection pipe are open completely?	It may cause insufficient cooling (heating) capacity.

2. Test operation

- (1) Preparation of test operation
 - The client approves the air conditioner installation.
 - Specify the important notes for air conditioner to the client.
- (2) Method of test operation
 - Put through the power, press ON/OFF button on the remote controller to start operation.
 - Press MODE button to select AUTO, COOL, DRY, FAN and HEAT to check whether the operation is normal or not.
 - If the ambient temperature is lower than 16°C, the air conditioner can't start cooling.

9. Maintenance

9.1 Error Code List

NO.	Malfunction Name	Display Method of Indoor Unit				Display Method of Outdoor Unit			A/C status	Possible Causes
		Dual-8 Code Display	Indicator Display (during blinking, ON 0.5s and OFF 0.5s)			Indicator has 3 kinds of display status and during blinking, ON 0.5s and OFF 0.5s				
			Operation Indicator	Cool Indicator	Heating Indicator	Yellow Indicator	Red Indicator	Green Indicator		
1	High pressure protection of system	E1	OFF 3s and blink once						During cooling and drying operation, except indoor fan operates, all loads stop operation. During heating operation, the complete unit stops.	Possible reasons: 1. Refrigerant was superabundant; 2. Poor heat exchange (including filth blockage of heat exchanger and bad radiating environment); Ambient temperature is too high.
2	Antifreezing protection	E2	OFF 3S and blink twice			OFF 1S and blink 3 times			During cooling and drying operation, compressor and outdoor fan stop while indoor fan operates.	1. Poor air-return in indoor unit; 2. Fan speed is abnormal; 3. Evaporator is dirty.
3	Refrigerant leakage protection	F0					OFF 1S and blink 9 times		The Dual-8 Code Display will show F0 and the complete unit stops.	1.Refrigerant leakage; 2.Indoor evaporator temperature sensor works abnormally; 3.The unit has been plugged up somewhere.
4	High discharge temperature protection of compressor	E4	OFF 3S and blink 4 times			OFF 1S and blink 7 times			During cooling and drying operation, compressor and outdoor fan stop while indoor fan operates. During heating operation, all loads stop.	Please refer to the malfunction analysis (discharge protection, overload).
5	Overcurrent protection	E5	OFF 3S and blink 5 times			OFF 1S and blink 5 times			During cooling and drying operation, compressor and outdoor fan stop while indoor fan operates. During heating operation, all loads stop.	1. Supply voltage is unstable; 2. Supply voltage is too low and load is too high; 3. Evaporator is dirty.
6	Communi- cation Malfunction	E6	OFF 3S and blink 6 times			Always ON			During cooling operation, compressor stops while indoor fan motor operates. During heating operation, the complete unit stops.	Refer to the corresponding malfunction analysis.
7	High temperature resistant protection	E8	OFF 3S and blink 8 times			OFF 1S and blink 6 times			During cooling operation: compressor will stop while indoor fan will operate. During heating operation, the complete unit stops.	Refer to the malfunction analysis (overload, high temperature resistant).
8	EEPROM malfunction	EE			OFF 3S and blink 15 times	OFF 1S and blink 11 times			During cooling and drying operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop	Replace outdoor control panel AP1
9	Limit/ decrease frequency due to high temperature of module	EU		OFF 3S and blink 6 times	OFF 3S and blink 6 times				All loads operate normally, while operation frequency for compressor is decreased	Discharging after the complete unit is de-energized for 20mins, check whether the thermal grease on IPM Module of outdoor control panel AP1 is sufficient and whether the radiator is inserted tightly. If its no use, please replace control panel AP1.
10	Malfunction protection of jumper cap	C5	OFF 3S and blink 15 times						Wireless remote receiver and button are effective, but can not dispose the related command	1. No jumper cap insert on mainboard. 2. Incorrect insert of jumper cap. 3. Jumper cap damaged. 4. Abnormal detecting circuit of mainboard.

NO.	Malfunction Name	Display Method of Indoor Unit				Display Method of Outdoor Unit			A/C status	Possible Causes
		Dual-8 Code Display	Indicator Display (during blinking, ON 0.5s and OFF 0.5s)			Indicator has 3 kinds of display status and during blinking, ON 0.5s and OFF 0.5s				
			Operation Indicator	Cool Indicator	Heating Indicator	Yellow Indicator	Red Indicator	Green Indicator		
11	Gathering refrigerant	Fo	OFF 3S and blink 1 times	OFF 3S and blink 1 times		OFF 1S and blink 17 times			When the outdoor unit receive signal of Gathering refrigerant ,the system will be forced to run under cooling mode for gathering refrigerant	Nominal cooling mode
12	Indoor ambient temperature sensor is open/short circuited	F1		OFF 3S and blink once					During cooling and drying operation, indoor unit operates while other loads will stop; during heating operation, the complete unit will stop operation.	1. Loosening or bad contact of indoor ambient temp. sensor and mainboard terminal. 2. Components in mainboard fell down leads short circuit. 3. Indoor ambient temp. sensor damaged.(check with sensor resistance value chart) 4. Mainboard damaged.
13	Indoor evaporator temperature sensor is open/short circuited	F2		OFF 3S and blink twice					AC stops operation once reaches the setting temperature. Cooling, drying: internal fan motor stops operation while other loads stop operation; heating: AC stop operation	1. Loosening or bad contact of Indoor evaporator temp. sensor and mainboard terminal. 2. Components on the mainboard fall down leads short circuit. 3. Indoor evaporator temp. sensor damaged.(check temp. sensor value chart for testing) 4. Mainboard damaged.
14	Outdoor ambient temperature sensor is open/short circuited	F3		OFF 3S and blink 3 times			OFF 1S and blink 6 times		During cooling and drying operating, compressor stops while indoor fan operates; During heating operation, the complete unit will stop operation	Outdoor temperature sensor hasnt been connected well or is damaged. Please check it by referring to the resistance table for temperature sensor)
15	Outdoor condenser temperature sensor is open/short circuited	F4		OFF 3S and blink 4 times			OFF 1S and blink 5 times		During cooling and drying operation, compressor stops while indoor fan will operate; During heating operation, the complete unit will stop operation.	Outdoor temperature sensor hasnt been connected well or is damaged. Please check it by referring to the resistance table for temperature sensor)
16	Outdoor discharge temperature sensor is open/short circuited	F5		OFF 3S and blink 5 times			OFF 1S and blink 7 times		During cooling and drying operation, compressor will sop after operating for about 3 mins, while indoor fan will operate; During heating operation, the complete unit will stop after operating for about 3 mins.	1.Outdoor temperature sensor hasnt been connected well or is damaged. Please check it by referring to the resistance table for temperature sensor) 2.The head of temperature sensor hasnt been inserted into the copper tube
17	Limit/ decrease frequency due to overload	F6		OFF 3S and blink for 6 times			OFF 1S and blink 3 times		All loads operate normally, while operation frequency for compressor is decreased	Refer to the malfunction analysis (overload, high temperature resistant)
18	Decrease frequency due to overcurrent	F8		OFF 3S and blink 8 times			OFF 1S and blink once		All loads operate normally, while operation frequency for compressor is decreased	The input supply voltage is too low; System pressure is too high and overload

NO.	Malfunction Name	Display Method of Indoor Unit				Display Method of Outdoor Unit			A/C status	Possible Causes
		Dual-8 Code Display	Indicator Display (during blinking, ON 0.5s and OFF 0.5s)			Indicator has 3 kinds of display status and during blinking, ON 0.5s and OFF 0.5s				
			Operation Indicator	Cool Indicator	Heating Indicator	Yellow Indicator	Red Indicator	Green Indicator		
19	Decrease frequency due to high air discharge	F9		OFF 3S and blink 9 times			OFF 1S and blink twice		All loads operate normally, while operation frequency for compressor is decreased	Overload or temperature is too high; Refrigerant is insufficient; Malfunction of electric expansion valve (EKV)
20	Limit/ decrease frequency due to antifreezing	FH		OFF 3S and blink 2 times	OFF 3S and blink 2 times		OFF 1S and blink 4 times		All loads operate normally, while operation frequency for compressor is decreased	Poor air-return in indoor unit or fan speed is too low
21	Voltage for DC bus-bar is too high	PH		OFF 3S and blink 11 times		OFF 1S and blink 13 times			During cooling and drying operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop operation.	1. Measure the voltage of position L and N on wiring board (XT), if the voltage is higher than 265VAC, turn on the unit after the supply voltage is increased to the normal range. 2.If the AC input is normal, measure the voltage of electrolytic capacitor C on control panel (AP1), if its normal, theres malfunction for the circuit, please replace the control panel (AP1)
22	Voltage of DC bus-bar is too low	PL			OFF 3S and blink 21 times	OFF 1S and blink 12 times			During cooling and drying operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop	1. Measure the voltage of position L and N on wiring board (XT), if the voltage is higher than 150VAC, turn on the unit after the supply voltage is increased to the normal range. 2.If the AC input is normal, measure the voltage of electrolytic capacitor C on control panel (AP1), if its normal, theres malfunction for the circuit, please replace the control panel (AP1)
23	Compressor Min frequency in test state	P0		(during blinking, ON 0.25s and OFF 0.25s)	(during blinking, ON 0.25s and OFF 0.25s)					Showing during min. cooling or min. heating test
24	Compresso r rated frequenc e in test state	P1		(during blinking, ON 0.25s and OFF 0.25s)	(during blinking, ON 0.25s and OFF 0.25s)					Showing during nominal cooling or nominal heating test
25	Compressor maximum frequency in test state	P2		(during blinking, ON 0.25s and OFF 0.25s)	(during blinking, ON 0.25s and OFF 0.25s)					Showing during max. cooling or max. heating test

NO.	Malfunction Name	Display Method of Indoor Unit				Display Method of Outdoor Unit			A/C status	Possible Causes
		Dual-8 Code Display	Indicator Display (during blinking, ON 0.5s and OFF 0.5s)			Indicator has 3 kinds of display status and during blinking, ON 0.5s and OFF 0.5s				
			Operation Indicator	Cool Indicator	Heating Indicator	Yellow Indicator	Red Indicator	Green Indicator		
26	Compressor intermediate frequency in test state	P3		(during blinking, ON 0.25s and OFF 0.25s)	(during blinking, ON 0.25s and OFF 0.25s)					Showing during middle cooling or middle heating test
27	Overcurrent protection of phase current for compressor	P5		OFF 3S and blink 15 times					During cooling and drying operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop operation.	Refer to the malfunction analysis (IPM protection, loss of synchronism protection and overcurrent protection of phase current for compressor.
28	Charging malfunction of capacitor	PU			OFF 3S and blink 17 times				During cooling and drying operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop	Refer to the part three—charging malfunction analysis of capacitor
29	Malfunction of module temperature sensor circuit	P7			OFF 3S and blink 18 times				During cooling and drying operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop	Replace outdoor control panel AP1
30	Module high temperature protection	P8			OFF 3S and blink 19 times				During cooling operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop	After the complete unit is de-energized for 20mins, check whether the thermal grease on IPM Module of outdoor control panel AP1 is sufficient and whether the radiator is inserted tightly. If its no use, please replace control panel AP1.
31	Decrease frequency due to high temperature resistant during heating operation	H0			OFF 3S and blink 10 times				All loads operate normally, while operation frequency for compressor is decreased	Refer to the malfunction analysis (overload, high temperature resistant)
32	Static dedusting protection	H2			OFF 3S and blink twice					
33	Overload protection for compressor	H3			OFF 3S and blink 3 times	OFF 1S and blink 8 times			During cooling and drying operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop operation.	1. Wiring terminal OVC-COMP is loosened. In normal state, the resistance for this terminal should be less than 1ohm. 2.Refer to the malfunction analysis (discharge protection, overload)


NO.	Malfunction Name	Display Method of Indoor Unit				Display Method of Outdoor Unit			A/C status	Possible Causes
		Dual-8 Code Display	Indicator Display (during blinking, ON 0.5s and OFF 0.5s)			Indicator has 3 kinds of display status and during blinking, ON 0.5s and OFF 0.5s				
			Operation Indicator	Cool Indicator	Heating Indicator	Yellow Indicator	Red Indicator	Green Indicator		
34	System is abnormal	H4			OFF 3S and blink 4 times	OFF 1S and blink 6 times			During cooling and drying operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop operation.	Refer to the malfunction analysis (overload, high temperature resistant)
35	IPM protection	H5			OFF 3S and blink 5 times	OFF 1S and blink 4 times			During cooling and drying operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop operation.	Refer to the malfunction analysis (IPM protection, loss of synchronism protection and overcurrent protection of phase current for compressor.
36	Module temperature is too high	H5			OFF 3S and blink 5 times	OFF 1S and blink 10 times				
37	Internal motor (fan motor) do not operate	H6	OFF 3S and blink 11 times						Internal fan motor, external fan motor, compressor and electric heater stop operation,guide louver stops at present location.	1. Bad contact of DC motor feedback terminal. 2. Bad contact of DC motor control end. 3. Fan motor is stalling. 4. Motor malfunction. 5. Malfunction of mainboard rev detecting circuit.
38	Desynchronizing of compressor	H7			OFF 3S and blink 7 times				During cooling and drying operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop operation.	Refer to the malfunction analysis (IPM protection, loss of synchronism protection and overcurrent protection of phase current for compressor.
39	PFC protection	HC			OFF 3S and blink 6 times	OFF 1S and blink 14 times			During cooling and drying operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop operation.	Refer to the malfunction analysis
40	Outdoor DC fan motor malfunction	L3	OFF 3S and blink 23 times				OFF 1S and blink 14 times		Outdoor DC fan motor malfunction lead to compressor stop operation,	DC fan motor malfunction or system blocked or the connector loosed
41	power protection	L9	OFF 3S and blink 20 times			OFF 1S and blink 9 times			compressor stop operation and Outdoor fan motor will stop 30s latter , 3 minutes latter fan motor and compressor will restart	To protect the electronical components when detect high power
42	Indoor unit and outdoor unit doesn't match	LP	OFF 3S and blink 19 times			OFF 1S and blink 16 times			compressor and Outdoor fan motor can't work	Indoor unit and outdoor unit doesn't match
43	Failure start-up	LC			OFF 3S and blink 11 times				During cooling and drying operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop operation.	Refer to the malfunction analysis

NO.	Malfunction Name	Display Method of Indoor Unit				Display Method of Outdoor Unit			A/C status	Possible Causes
		Dual-8 Code Display	Indicator Display (during blinking, ON 0.5s and OFF 0.5s)			Indicator has 3 kinds of display status and during blinking, ON 0.5s and OFF 0.5s				
			Operation Indicator	Cool Indicator	Heating Indicator	Yellow Indicator	Red Indicator	Green Indicator		
44	Malfunction of phase current detection circuit for compressor	U1			OFF 3S and blink 13 times				During cooling and drying operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop	Replace outdoor control panel AP1
45	Malfunction of voltage dropping for DC bus-bar	U3			OFF 3S and blink 20 times				During cooling and drying operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop	Supply voltage is unstable
46	Malfunction of complete units current detection	U5		OFF 3S and blink 13 times					During cooling and drying operation, the compressor will stop while indoor fan will operate; During heating operating, the complete unit will stop operation.	Theres circuit malfunction on outdoor units control panel AP1, please replace the outdoor units control panel AP1.
47	The four-way valve is abnormal	U7		OFF 3S and blink 20 times					If this malfunction occurs during heating operation, the complete unit will stop operation.	1.Supply voltage is lower than AC175V; 2.Wiring terminal 4V is loosened or broken; 3.4V is damaged, please replace 4V.
48	Zero-crossing malfunction of outdoor unit	U9	OFF 3S and blink 18 times						During cooling operation, compressor will stop while indoor fan will operate; during heating,the complete unit will stop operation.	Replace outdoor control panel AP1
49	Frequency limiting (power)						OFF 1S and blink 13 times			
50	Compressor running					OFF 1S and blink once				
51	The temperature for turning on the unit is reached						OFF 1S and blink 8 times			
52	Frequency limiting (module temperature)						OFF 1S and blink 11 times			


NO.	Malfunction Name	Display Method of Indoor Unit				Display Method of Outdoor Unit			A/C status	Possible Causes
		Dual-8 Code Display	Indicator Display (during blinking, ON 0.5s and OFF 0.5s)			Indicator has 3 kinds of display status and during blinking, ON 0.5s and OFF 0.5s				
			Operation Indicator	Cool Indicator	Heating Indicator	Yellow Indicator	Red Indicator	Green Indicator		
53	Normal communication							OFF 0.5S and blink once		
54	Defrosting				OFF 3S and blink once (during blinking, ON 10s and OFF 0.5s)	OFF 1S and blink twice			Defrosting will occur in heating mode. Compressor will operate while indoor fan will stop operation.	Its the normal state

9.2 Troubleshooting for Main Malfunction


1. Malfunction of Temperature Sensor F1, F2

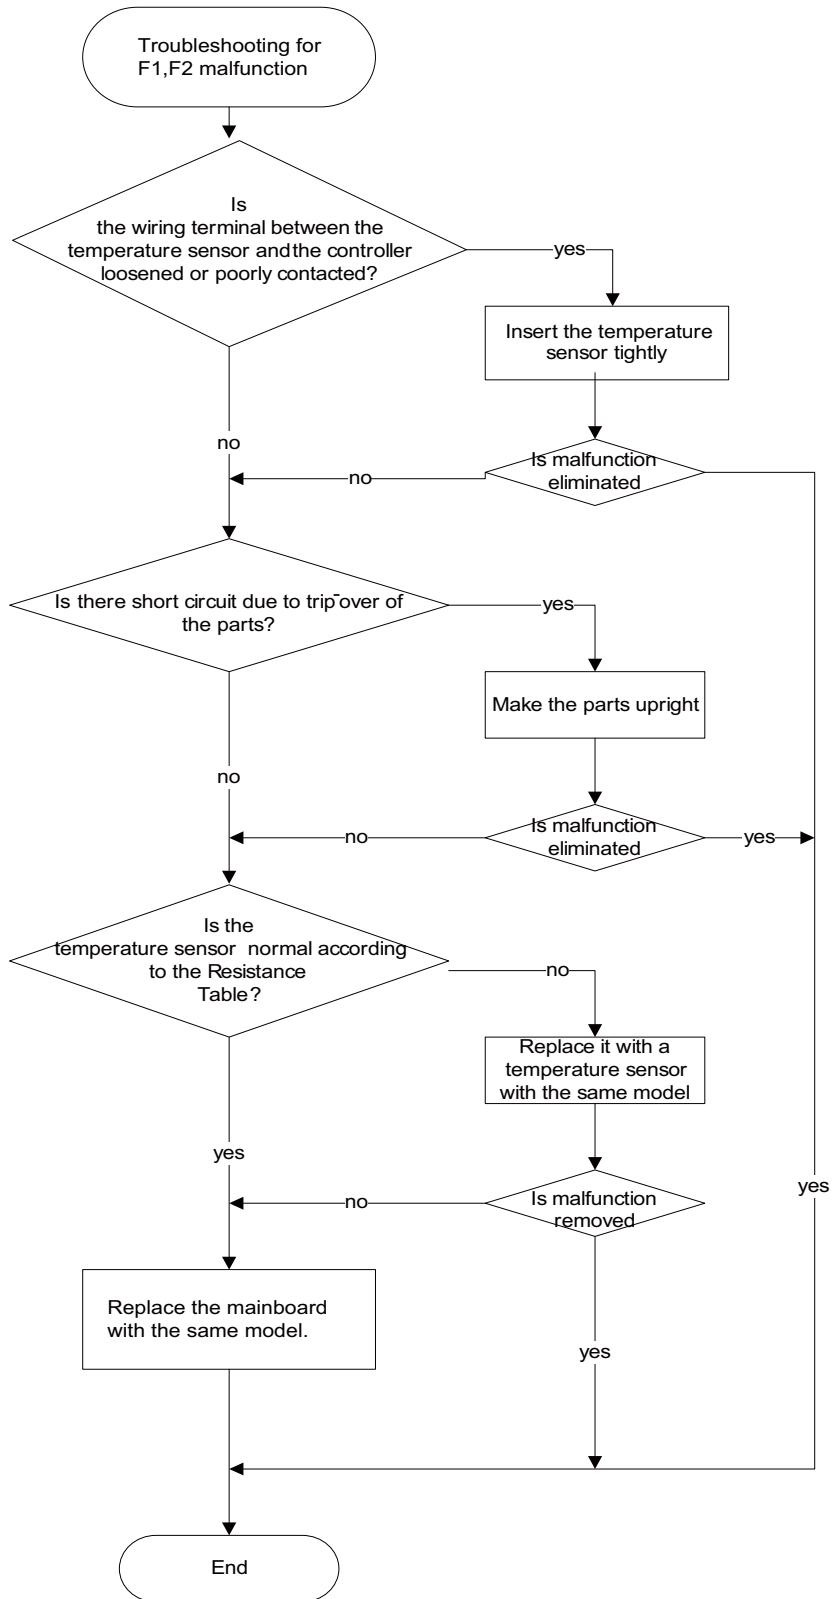


2. Malfunction of Blocked Protection of IDU Fan Motor H6

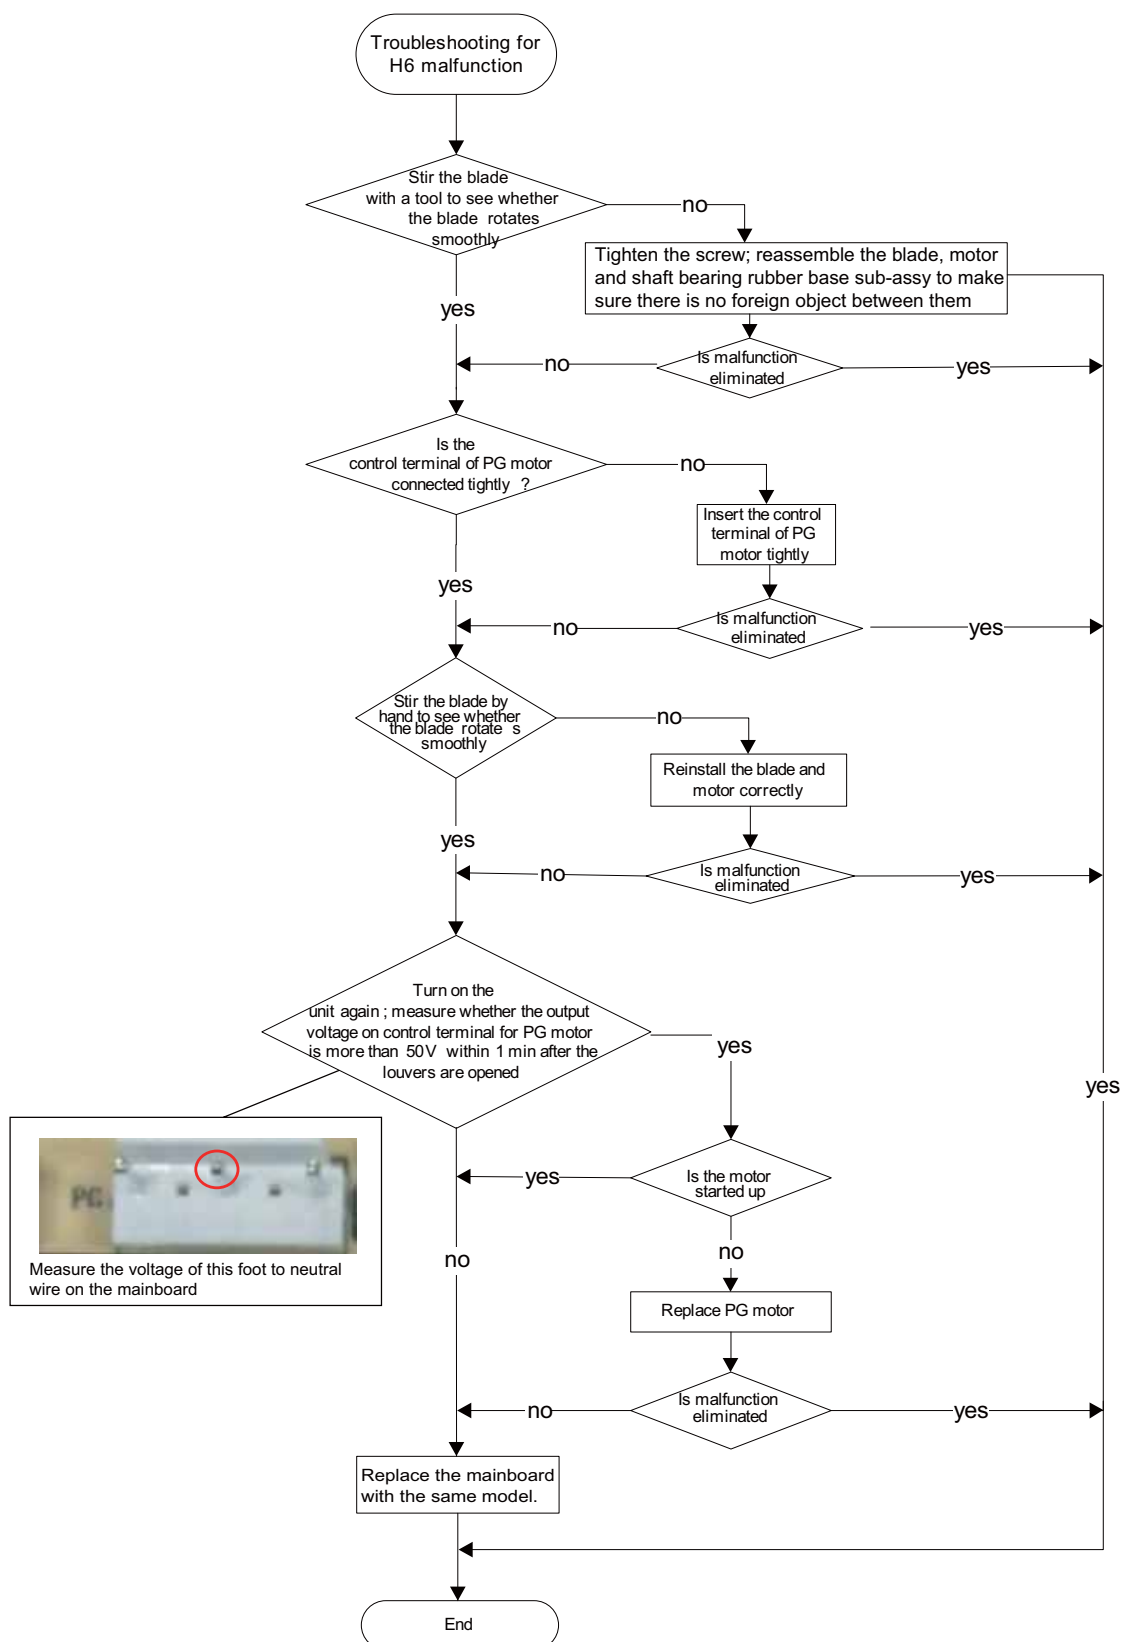


3. Malfunction of Protection of Jumper Cap C5

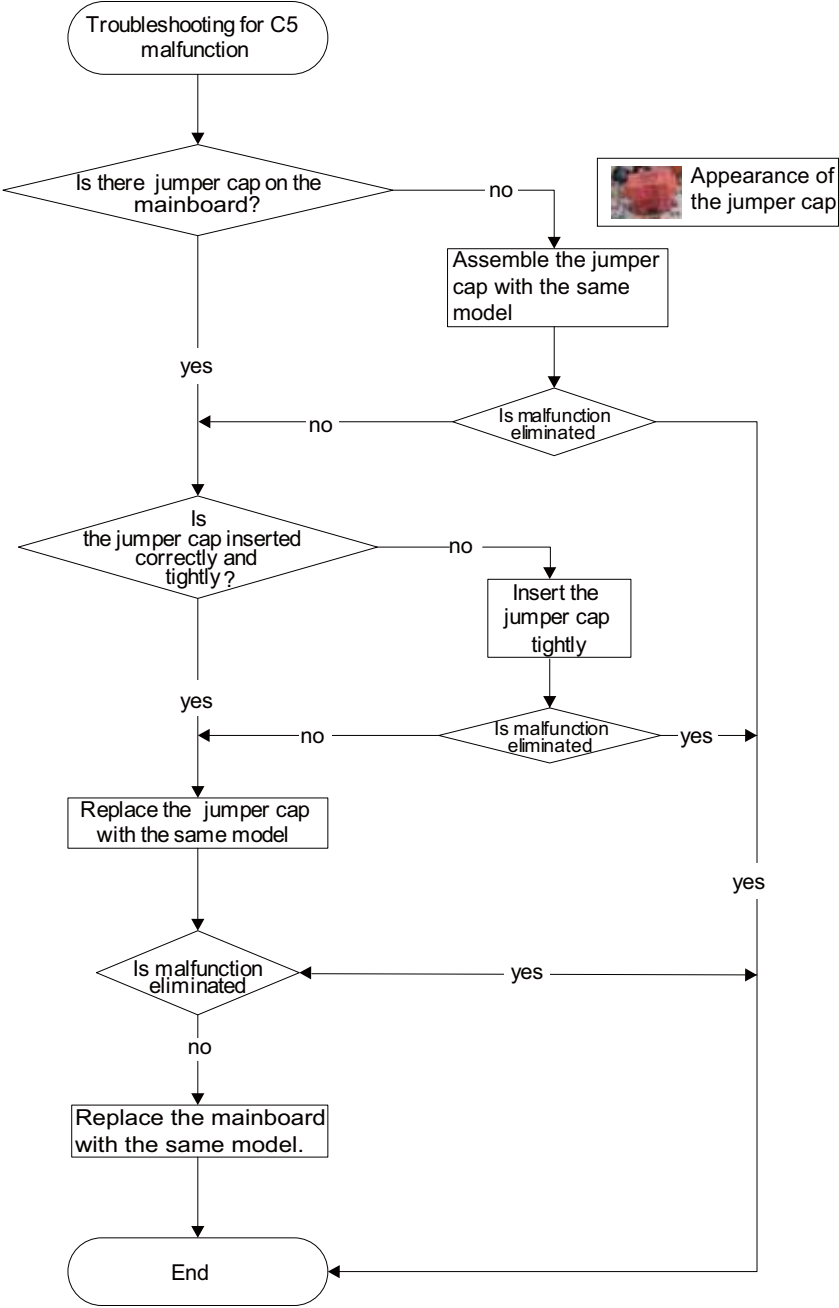

4. Malfunction of Overcurrent Protection E5

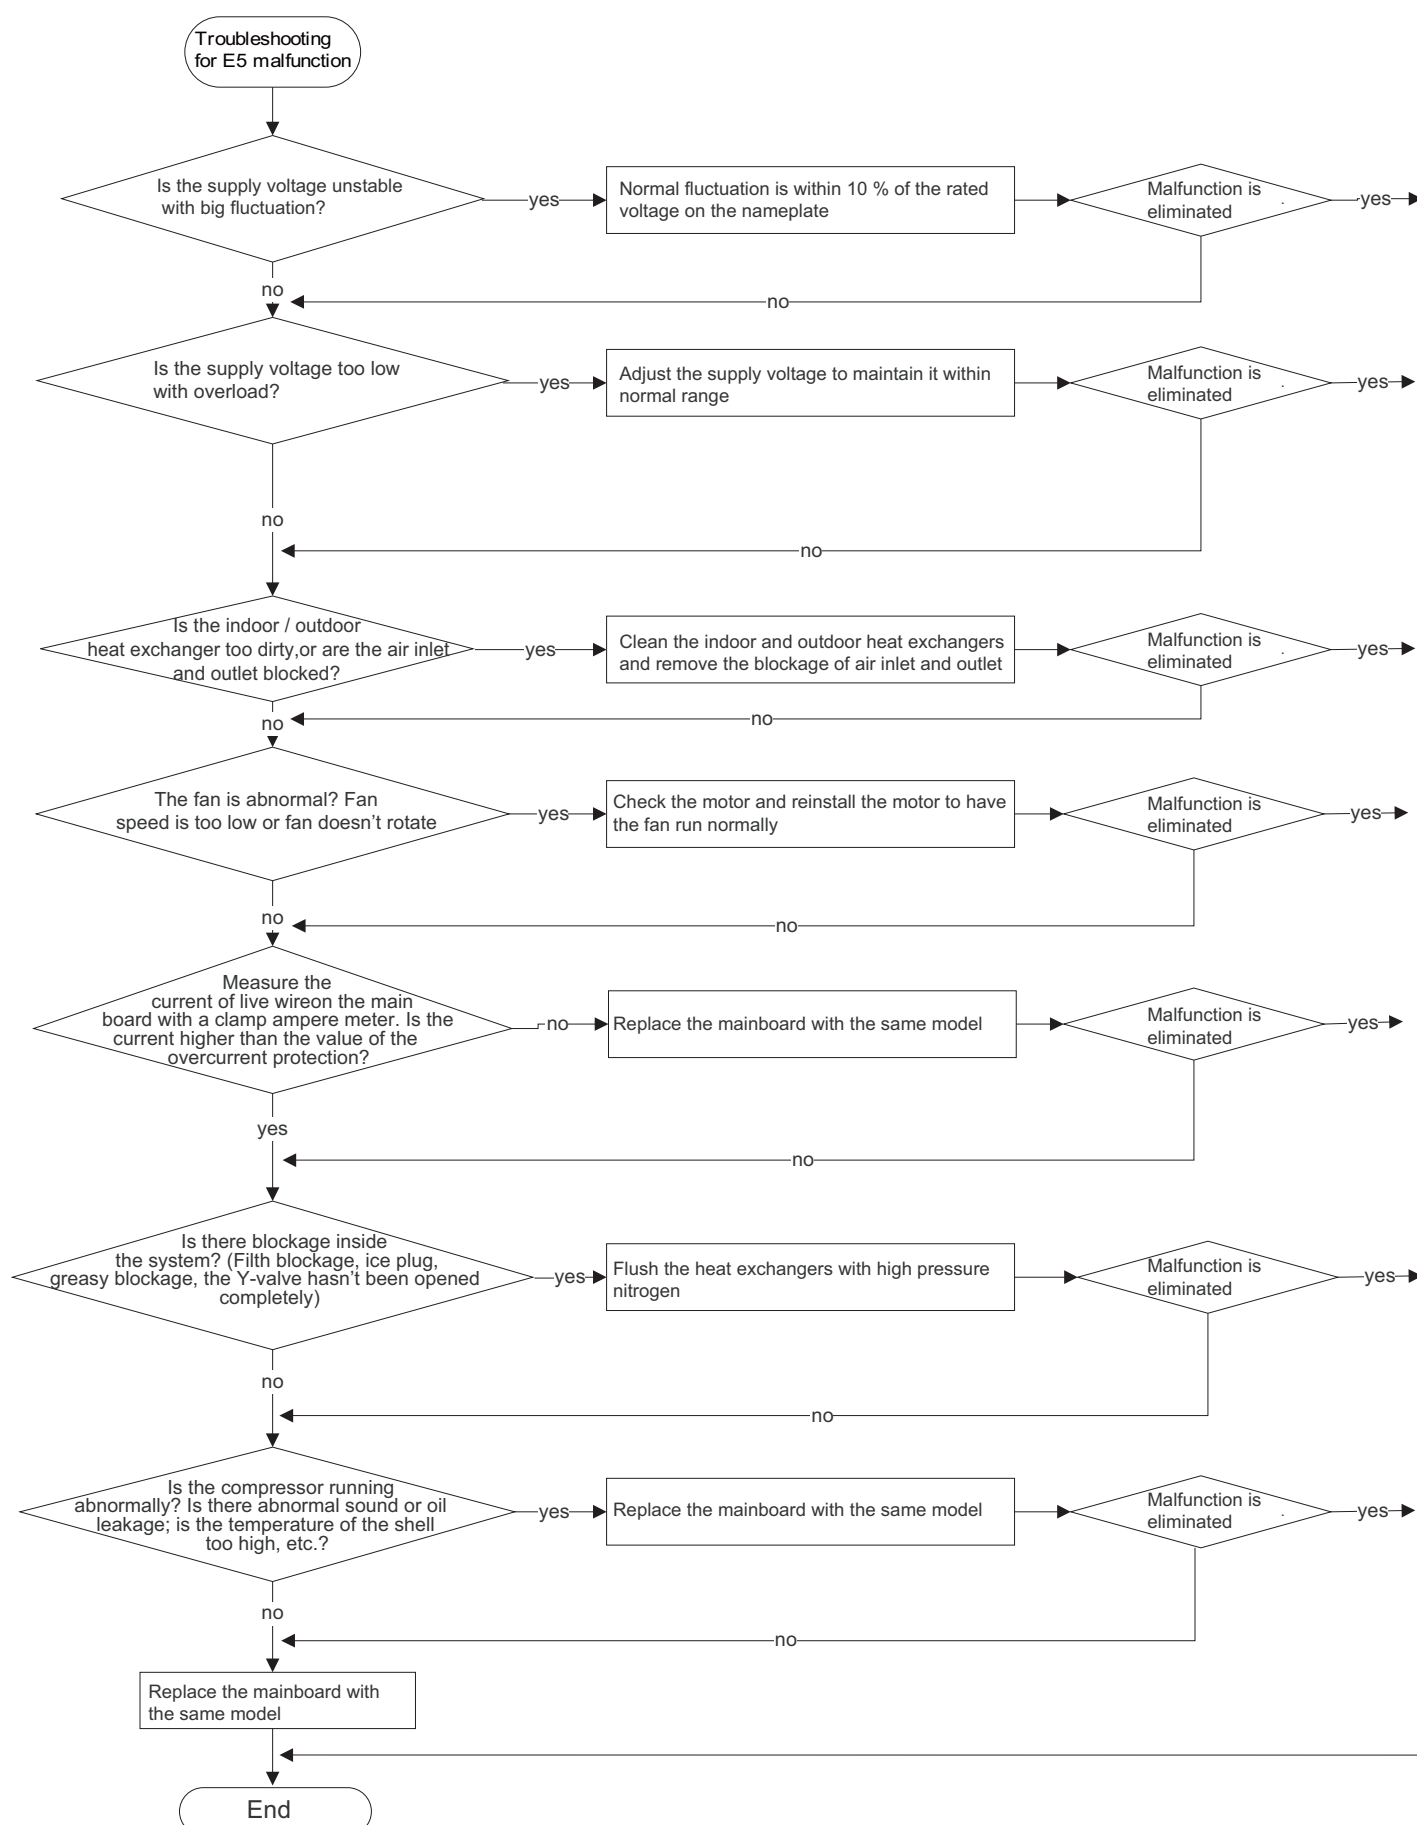


5. Malfunction of Zero-crossing Inspection Circuit Malfunction of the IDU Fan Motor U8

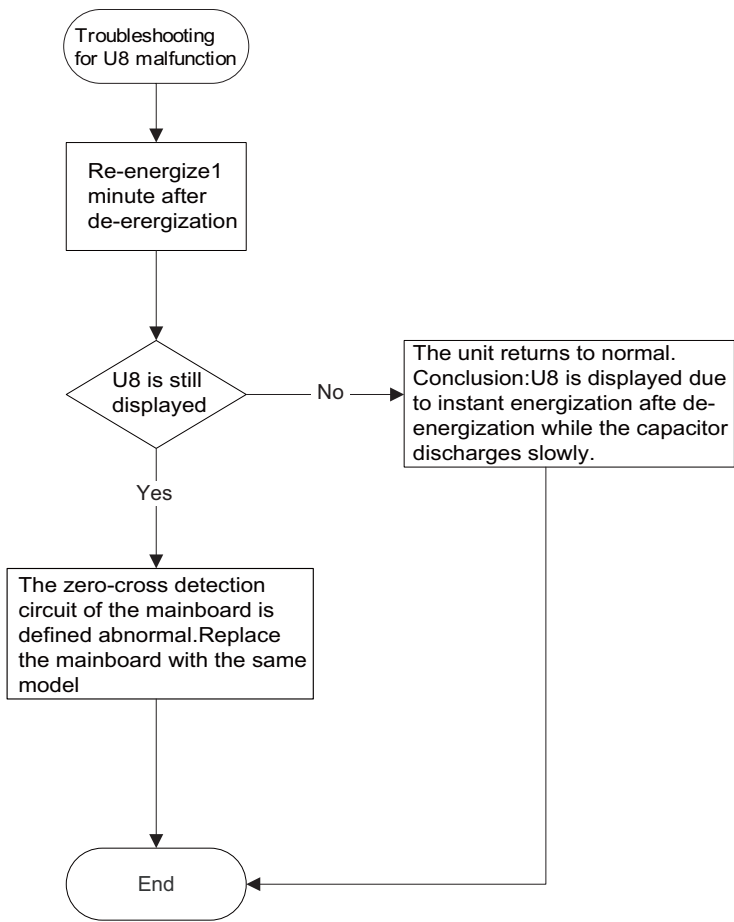

6.Capacity charging malfunction (outdoor unit malfunction) (AP1 below means control board of outdoor unit)

Main detection points:

- Detect if the voltage of L and N terminal of XT wiring board is between 210VAC-240VAC by alternating voltage meter;
- Is reactor (L) well connected? Is connection wire loosened or pulled out? Is reactor (L) damaged?

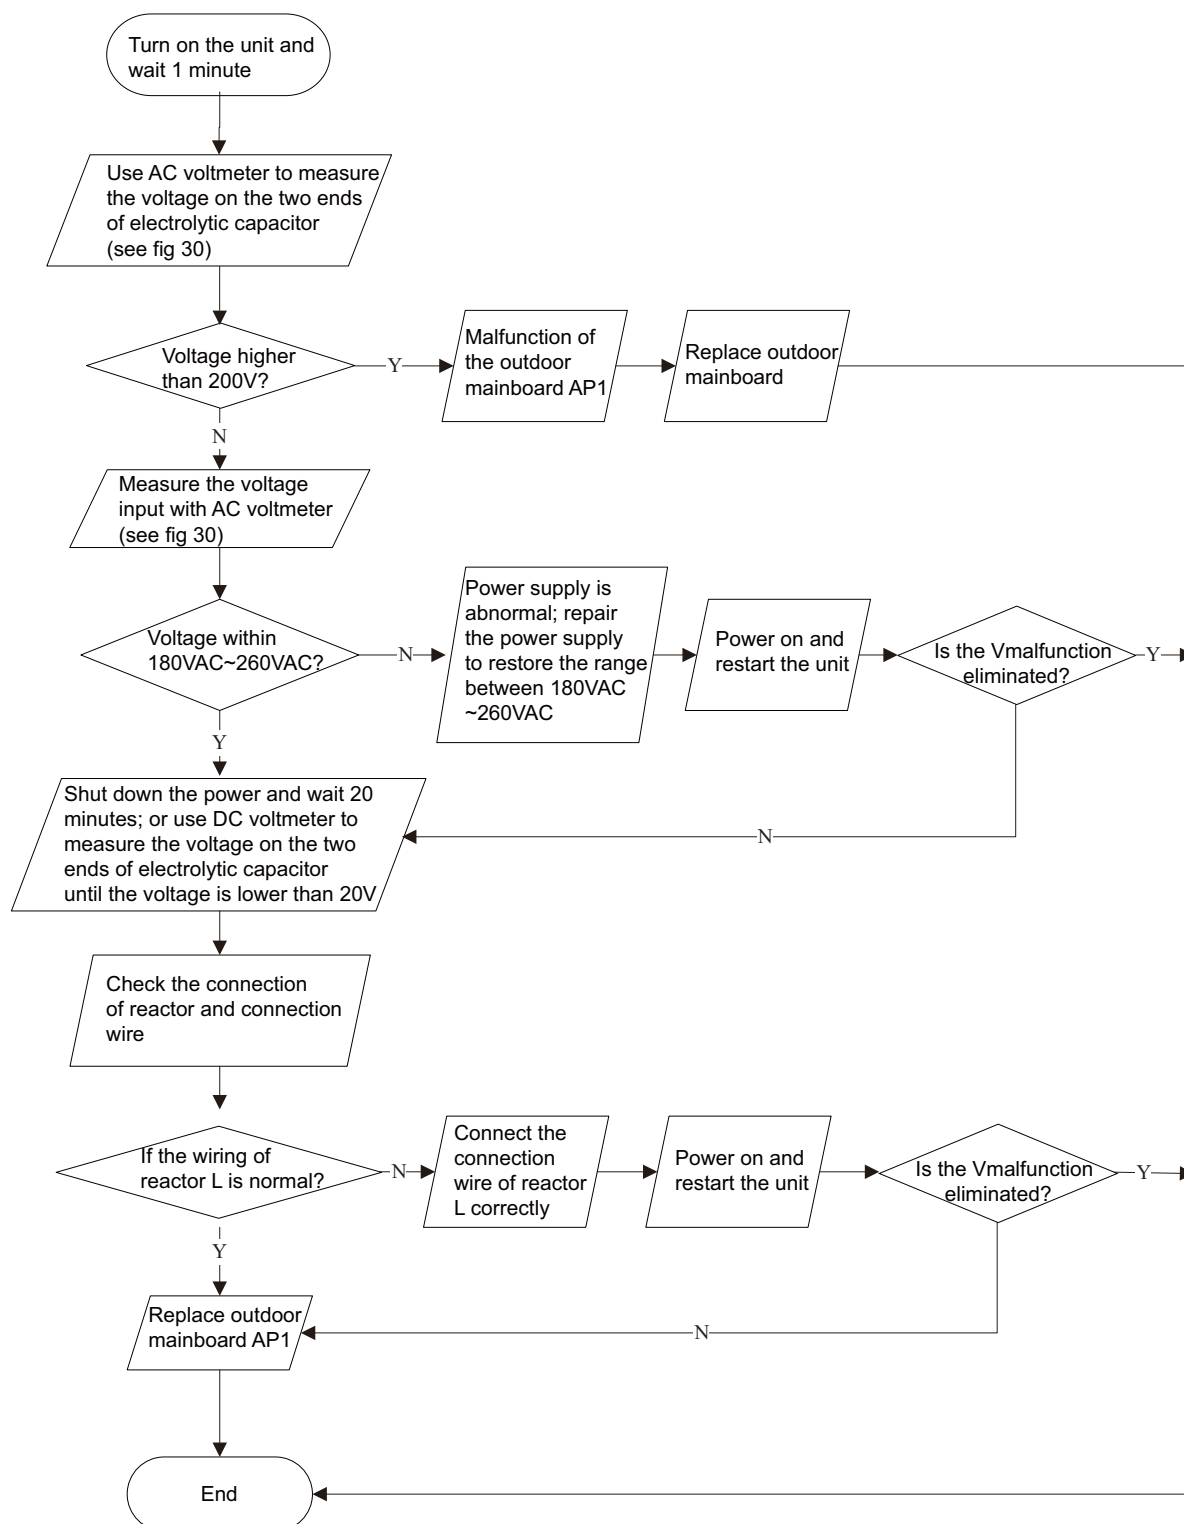


7. IPM protection (H5), desynchronizing malfunction (H7), overcurrent of compressor phase current (P5) (AP1 below means control board of outdoor unit)

Main detection points:

- Is voltage input within the normal range
- If the control board AP1 is well connected with compressor COMP? If they are loosened? If the connection sequence is correct?
- Heat exchange of unit is not good (heat exchanger is dirty and unit radiating environment is bad);
- If the system pressure is too high?
- If the refrigerant charging amount is appropriate?
- If coil resistance of compressor is normal? Is compressor coil insulating to copper pipe well?
- If the work load of unit is heavy? If radiating of unit is good?


Malfunction diagnosis process:

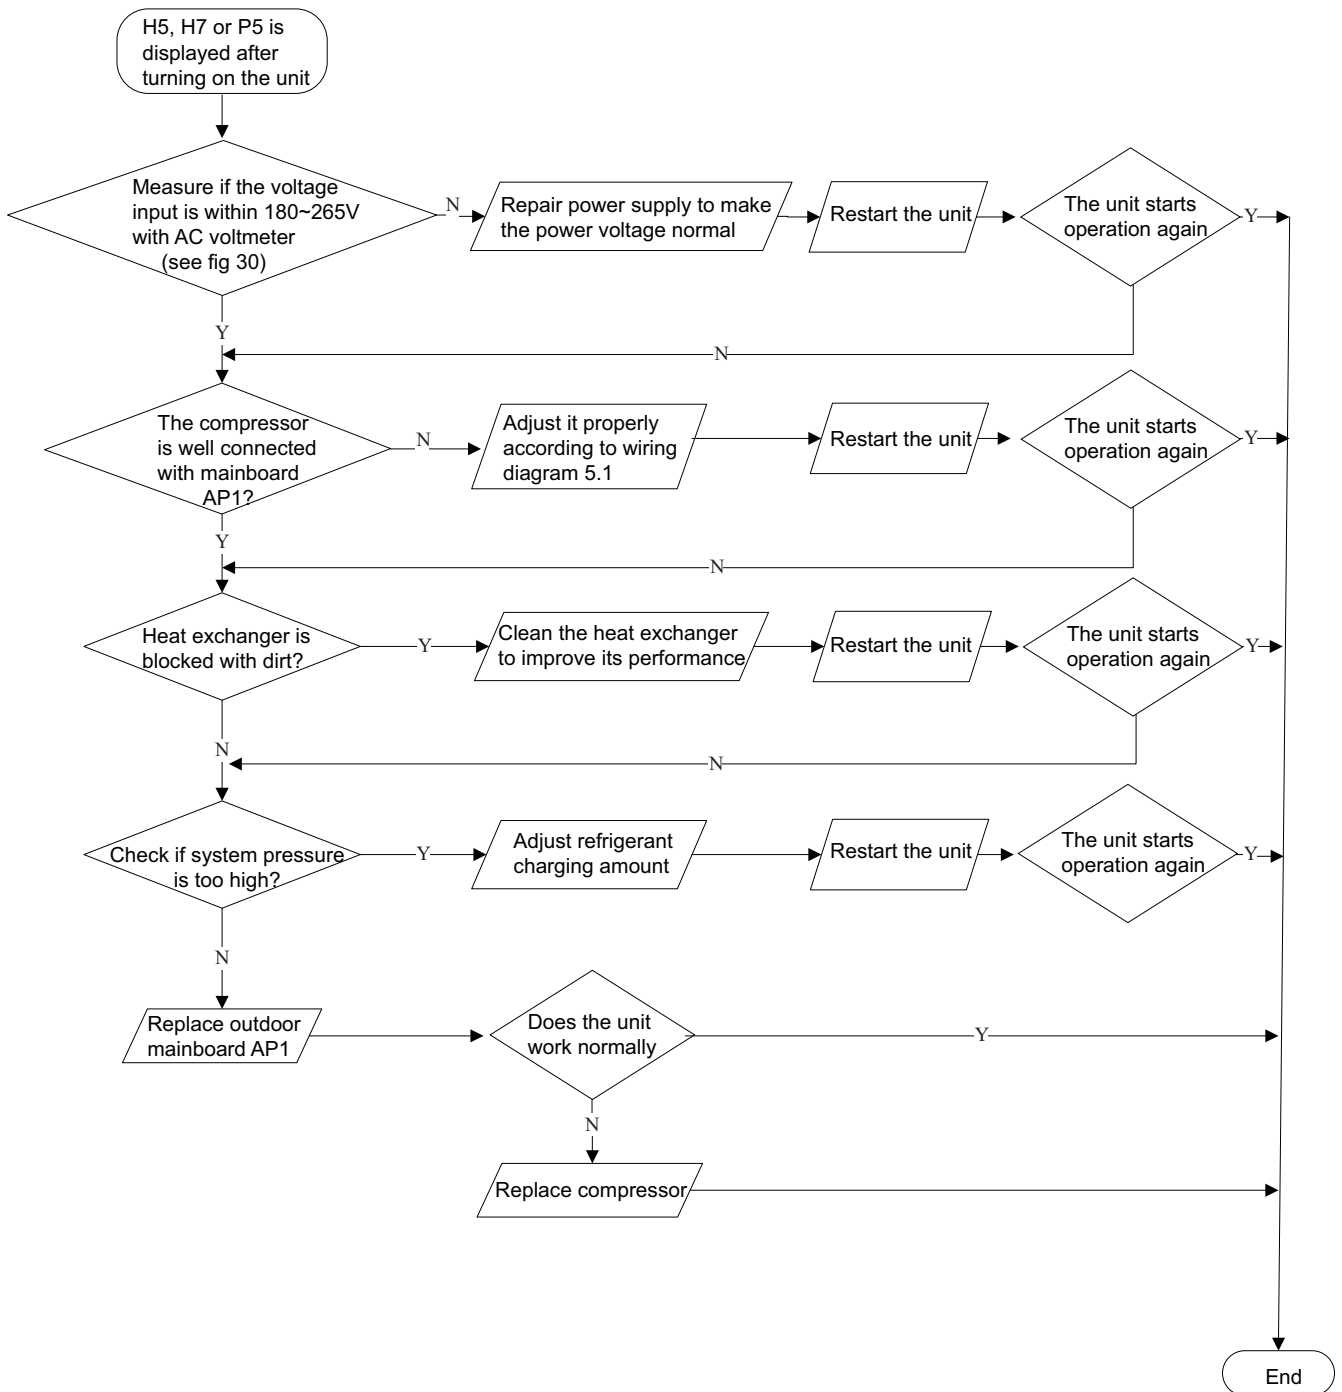

8.High temperature and overload protection (E8)(AP1 below means control board of outdoor unit)

Main detection points:


- If the outdoor ambient temperature is in normal range;
- If the indoor and outdoor fan are running normally;
- If the radiating environment of indoor and outdoor unit is good.

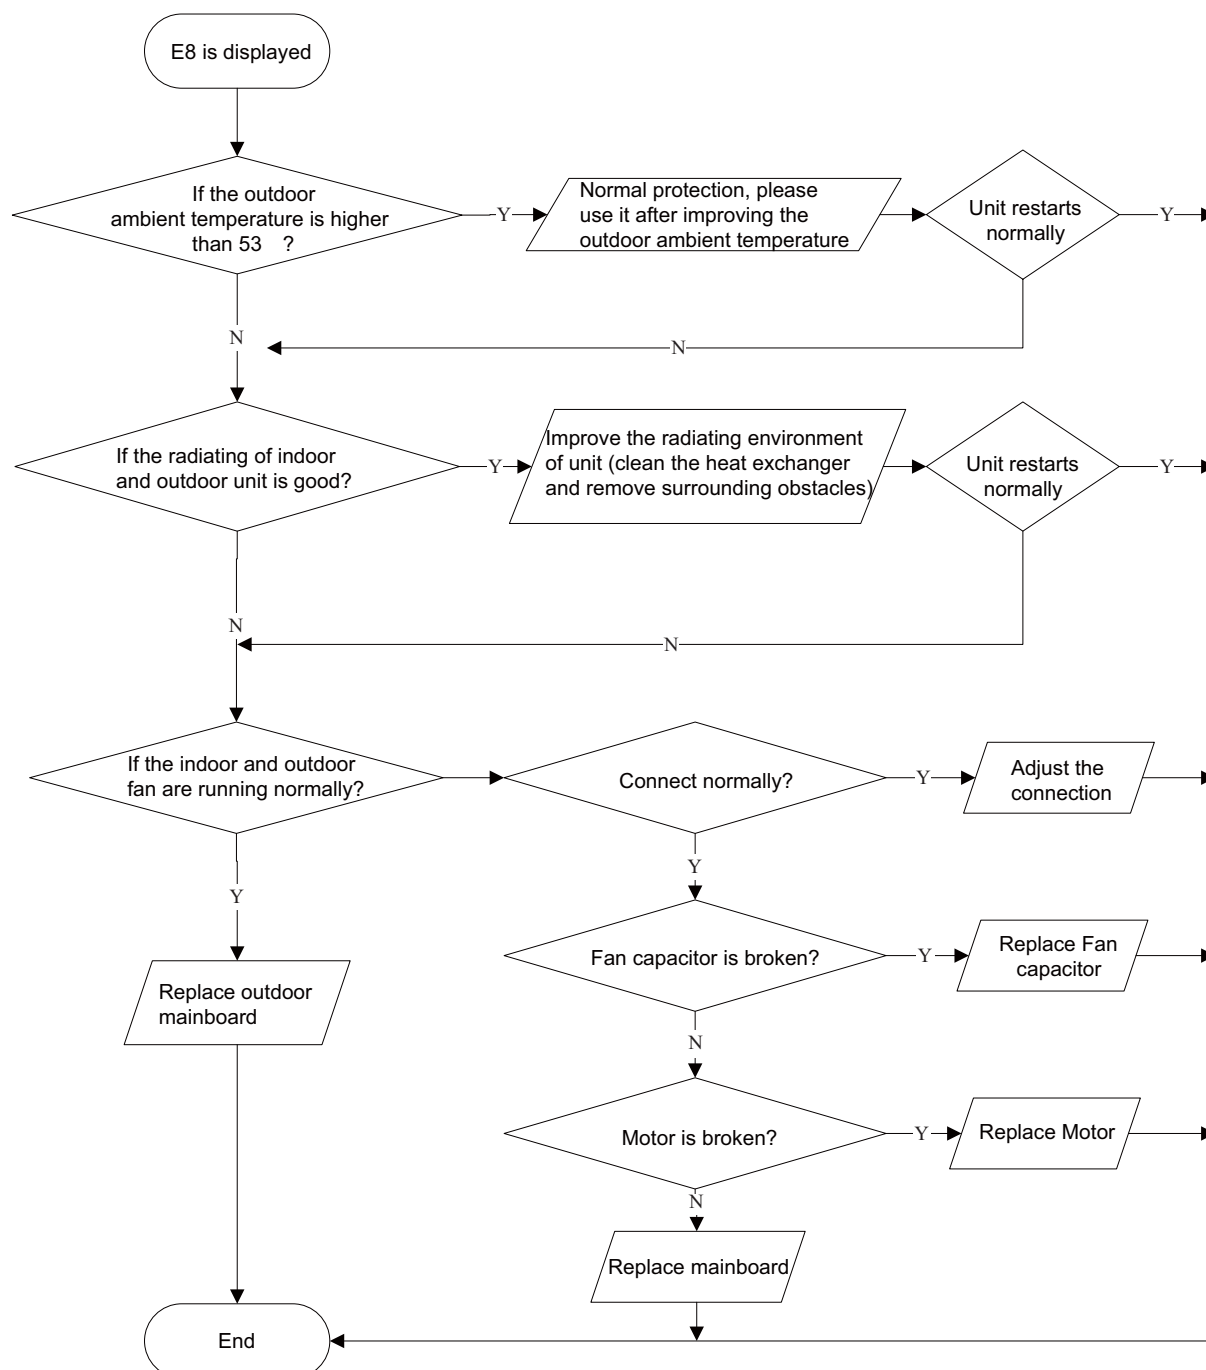

9.Start-up failure (LC) (AP1 below means control board of outdoor unit)

Main detection points:


- If the compressor wiring is correct?
- If the stop time of compressor is sufficient?
- If the compressor is damaged?
- If the refrigerant charging amount is too much?

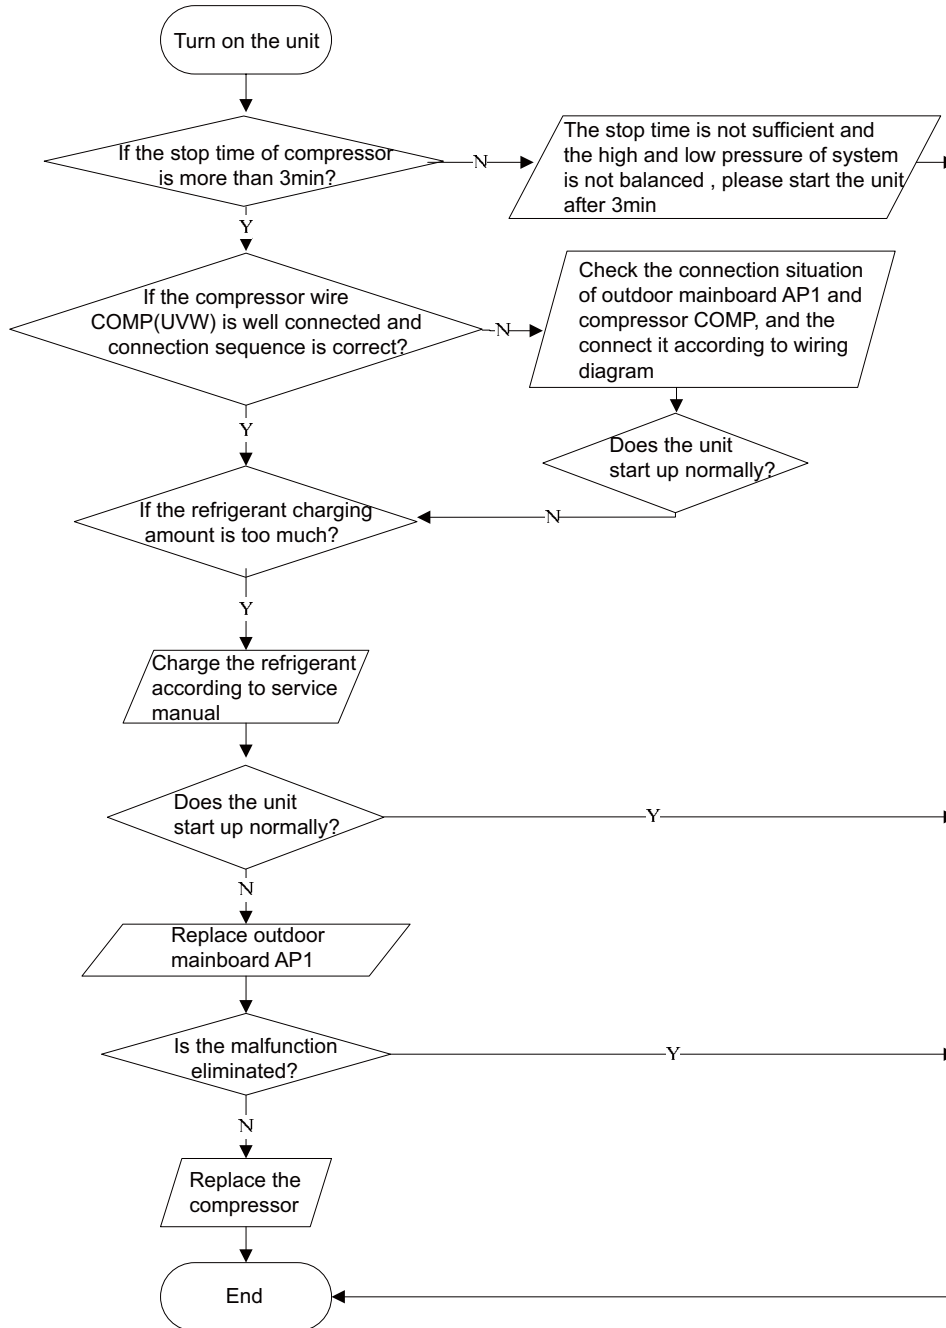

10. Overload and high discharge temperature malfunction

Main detection points:

- If the electronic expansion valve is connected well? Is the electronic expansion valve damaged?
- If the refrigerant is leaked?
- The compressor overload protection terminal is not connected well with the mainboard?
- If the overload protector is damaged?
- Heat exchange of unit is not good? (heat exchanger is dirty and unit radiating environment is bad)
- Too much load of the system causes high temperature of compressor after working for a long time?
- Malfunction of discharge temperature sensor?

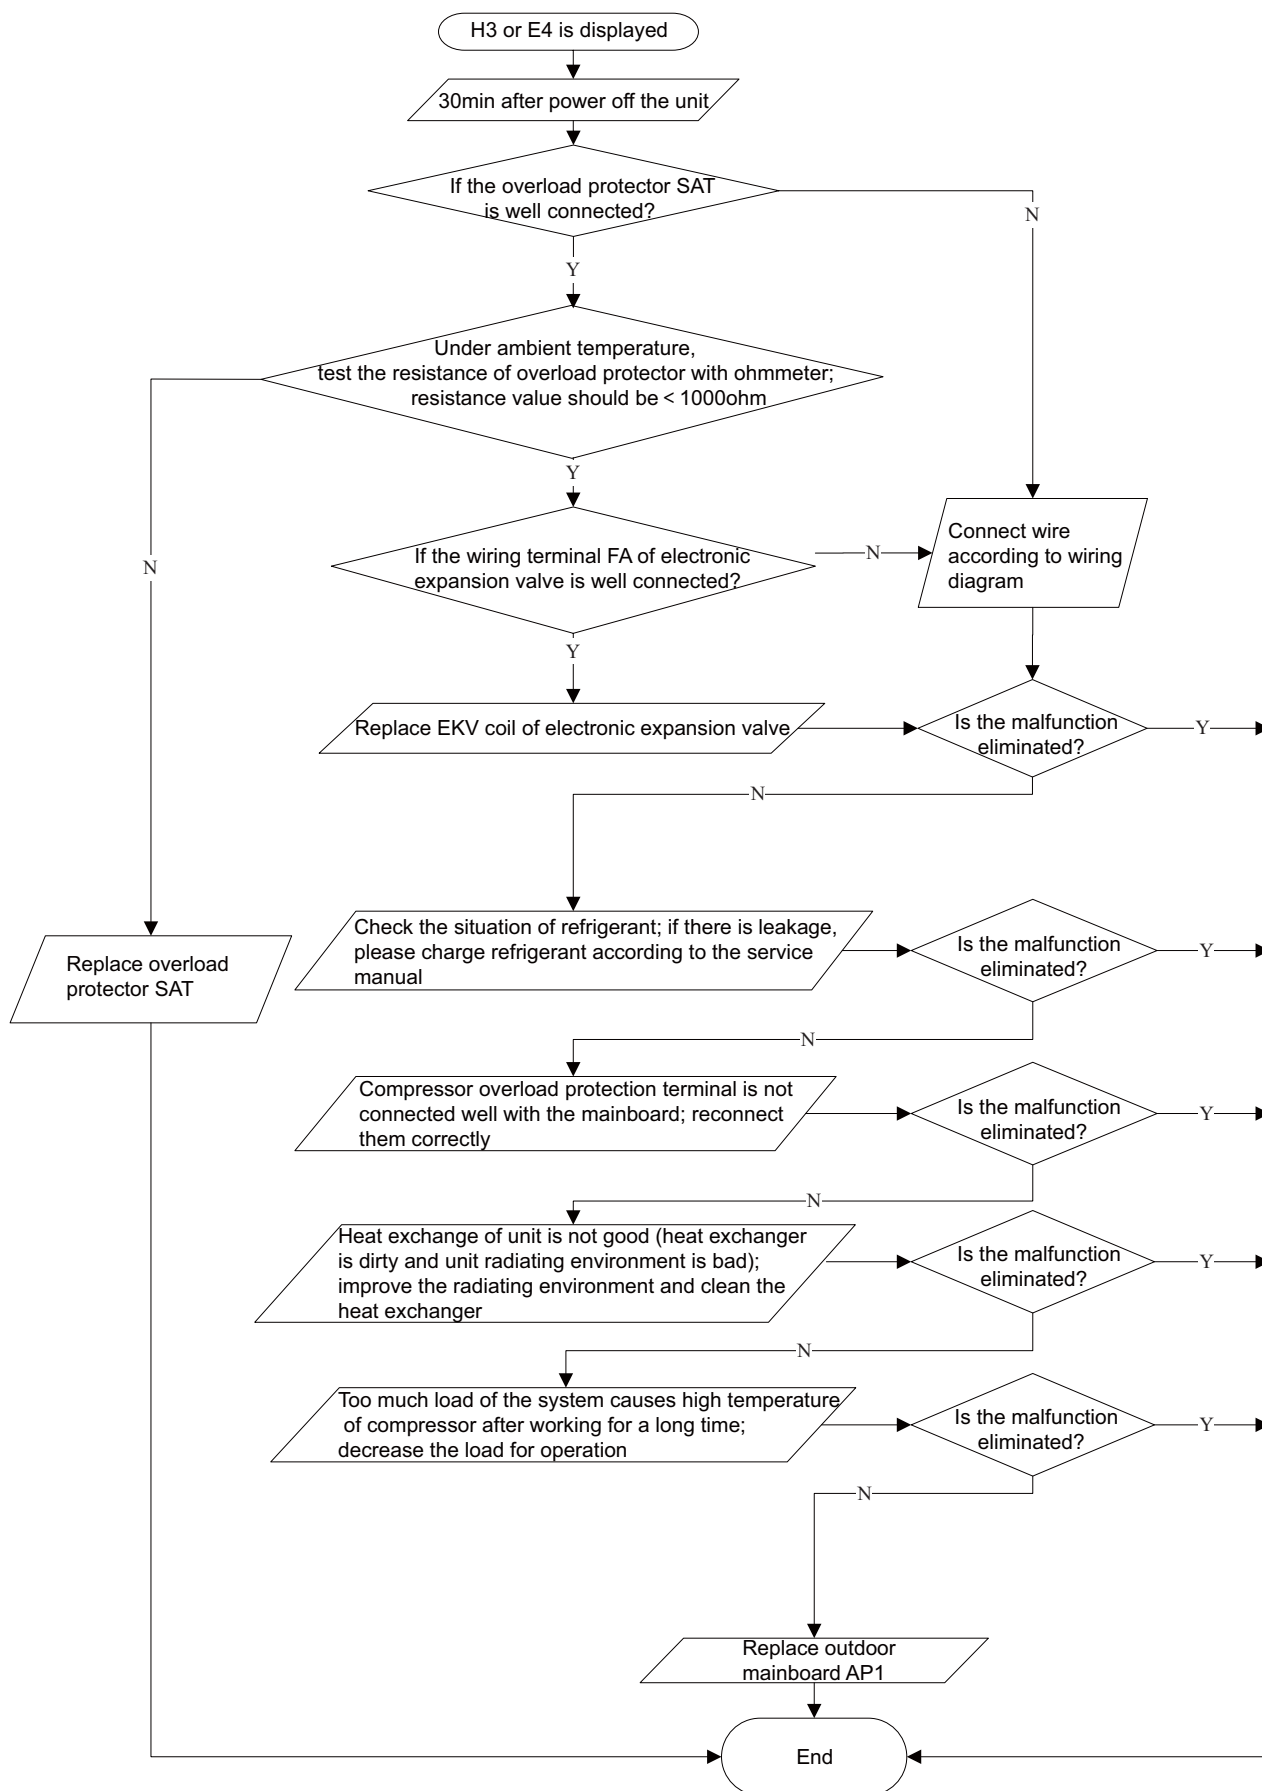


11.PFC (correction for power factor) malfunction (outdoor unit malfunction)

Main detection points:

- Check if power plug is connected well with the socket
- Check if the reactor of outdoor unit is damaged?

Malfunction diagnosis process:

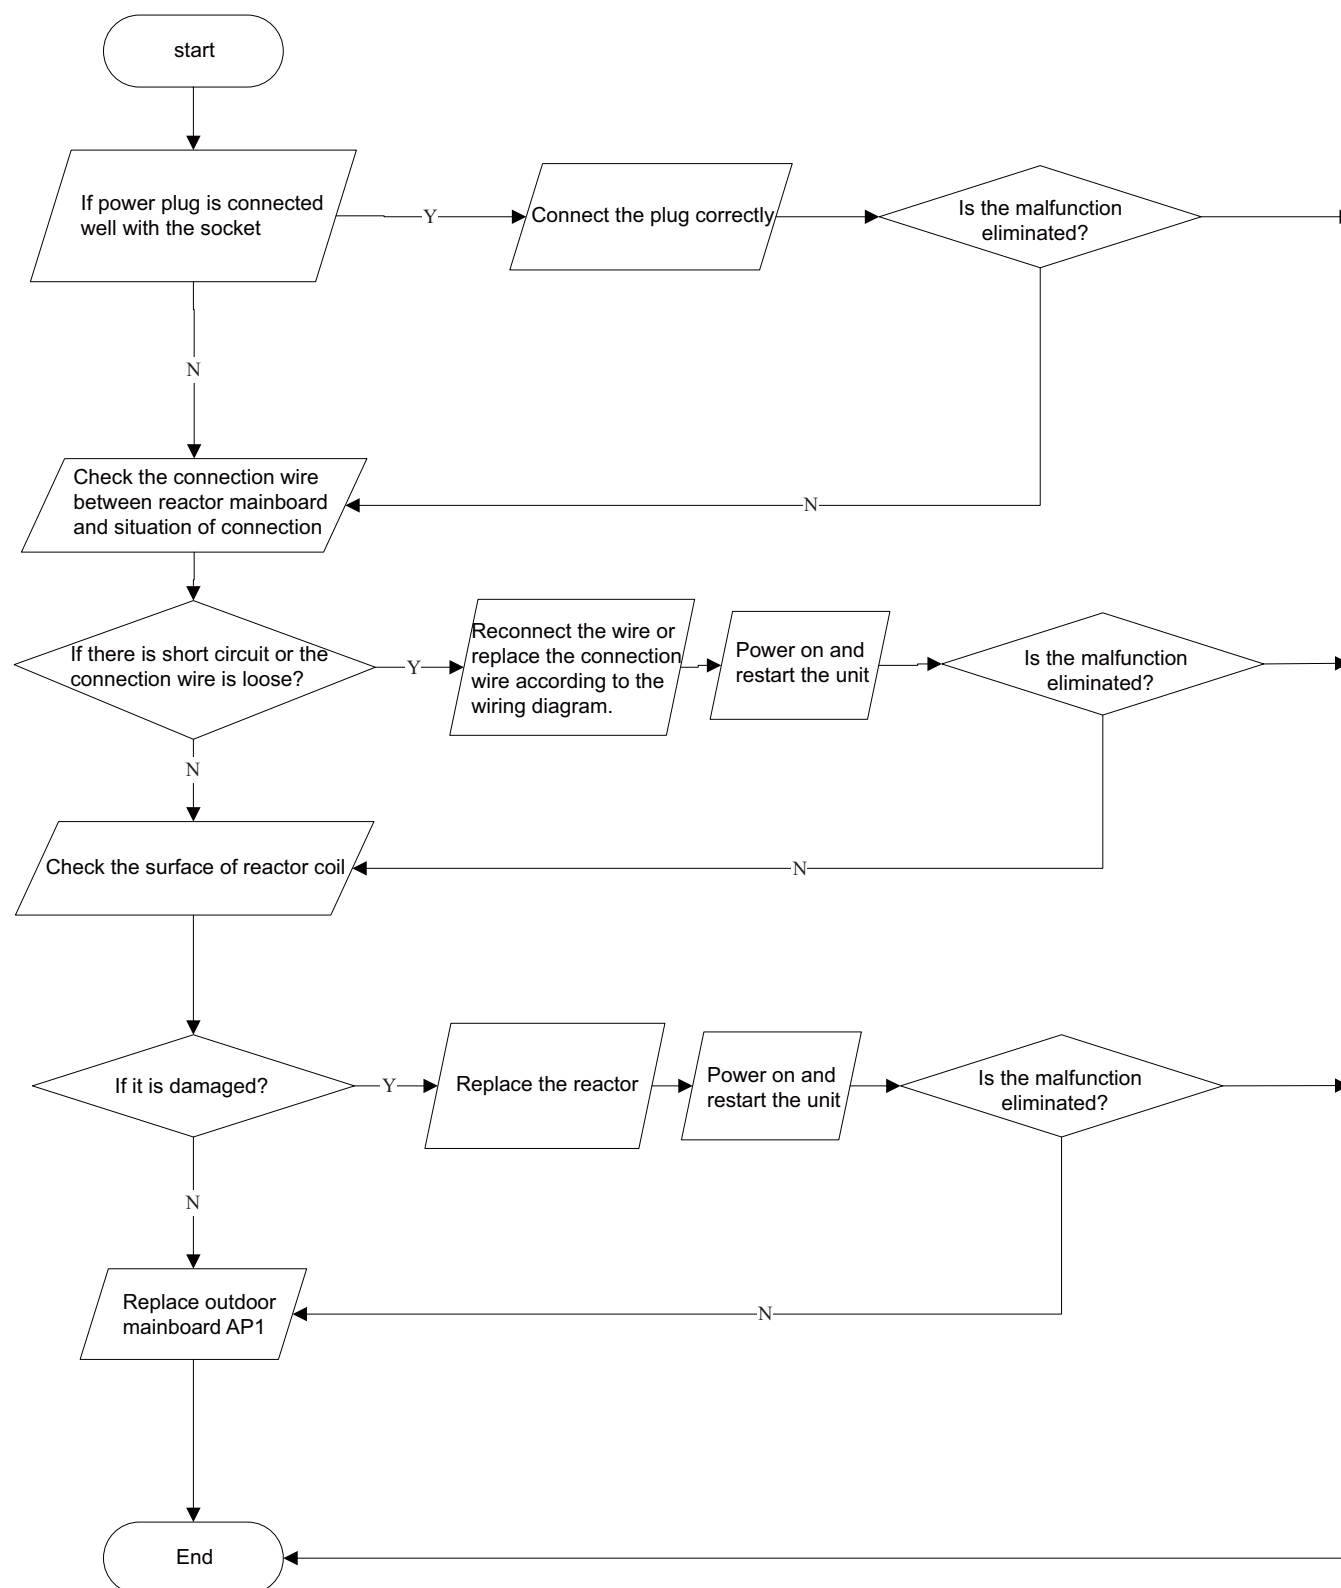


12. Communication malfunction (E6)

Main detection points:

- Check if the connection wire and the built-in wiring of indoor and outdoor unit are connected well and without damage;
- If the communication circuit of indoor mainboard is damaged? If the communication circuit of outdoor mainboard (AP1) is damaged?

Malfunction diagnosis process:

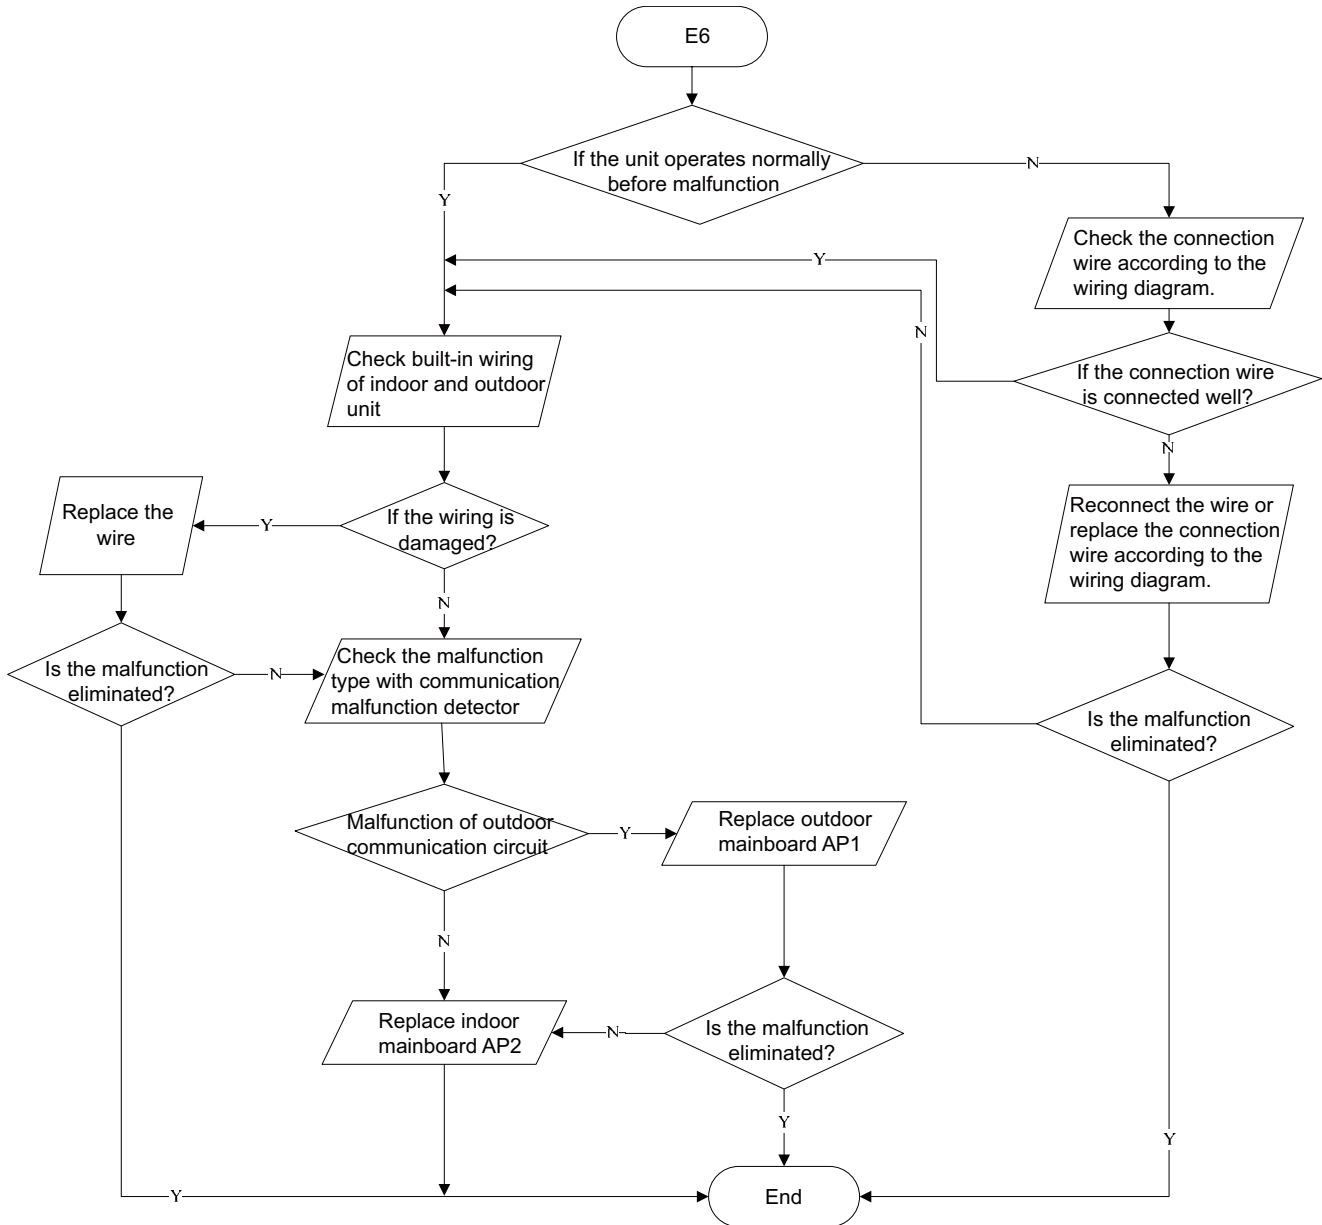

9.3 Troubleshooting for Normal Malfunction

1. Air conditioner can't be started up

Possible Causes	Discriminating Method (Air conditioner Status)	Troubleshooting
No power supply, or poor connection for power plug	After energization, operation indicator isn't bright and the buzzer can't give out sound	Confirm whether it's due to power failure. If yes, wait for power recovery. If not, check power supply circuit and make sure the power plug is connected well.
Wrong wire connection between indoor unit and outdoor unit, or poor connection for wiring terminals	Under normal power supply circumstances, operation indicator isn't bright after energization	Check the circuit according to circuit diagram and connect wires correctly. Make sure all wiring terminals are connected firmly
Electric leakage for air conditioner	After energization, room circuit breaker trips off at once	Make sure the air conditioner is grounded reliably Make sure wires of air conditioner is connected correctly Check the wiring inside air conditioner. Check whether the insulation layer of power cord is damaged; if yes, place the power cord.
Model selection for air switch is improper	After energization, air switch trips off	Select proper air switch
Malfunction of remote controller	After energization, operation indicator is bright, while no display on remote controller or buttons have no action.	Replace batteries for remote controller Repair or replace remote controller

2. Poor cooling (heating) for air conditioner

Possible Causes	Discriminating Method (Air conditioner Status)	Troubleshooting
Set temperature is improper	Observe the set temperature on remote controller	Adjust the set temperature
Rotation speed of the IDU fan motor is set too low	Small wind blow	Set the fan speed at high or medium
Filter of indoor unit is blocked	Check the filter to see it's blocked	Clean the filter
Installation position for indoor unit and outdoor unit is improper	Check whether the installation position is proper according to installation requirement for air conditioner	Adjust the installation position, and install the rainproof and sunproof for outdoor unit
Refrigerant is leaking	Discharged air temperature during cooling is higher than normal discharged wind temperature; Discharged air temperature during heating is lower than normal discharged wind temperature; Unit's pressure is much lower than regulated range	Find out the leakage causes and deal with it. Add refrigerant.
Malfunction of 4-way valve	blow cold wind during heating	Replace the 4-way valve
Malfunction of capillary	Discharged air temperature during cooling is higher than normal discharged wind temperature; Discharged air temperature during heating is lower than normal discharged wind temperature; Unit's pressure is much lower than regulated range. If refrigerant isn't leaking, part of capillary is blocked	Replace the capillary
Flow volume of valve is insufficient	Pressure at the valve is much lower than the regulated range	Open the valve completely
Malfunction of horizontal louver	Horizontal louver can't swing	Refer to point 3 of maintenance method for details
Malfunction of the IDU fan motor	The IDU fan motor can't operate	Refer to troubleshooting for H6 for maintenance method in details
Malfunction of the ODU fan motor	The ODU fan motor can't operate	Refer to point 4 of maintenance method for details
Malfunction of compressor	Compressor can't operate	Refer to point 5 of maintenance method for details

3. Horizontal louver can't swing

Possible Causes	Discriminating Method (Air conditioner Status)	Troubleshooting
Wrong wire connection, or poor connection	Check the wiring status according to circuit diagram	Connect wires according to wiring diagram to make sure all wiring terminals are connected firmly
Stepping motor is damaged	Stepping motor can't operate	Repair or replace stepping motor
Main board is damaged	Others are all normal, while horizontal louver can't operate	Replace the main board with the same model

4. ODU fan motor can't operate

Possible causes	Discriminating method (air conditioner status)	Troubleshooting
Wrong wire connection, or poor connection	Check the wiring status according to circuit diagram	Connect wires according to wiring diagram to make sure all wiring terminals are connected firmly
Capacity of the ODU fan motor is damaged	Measure the capacity of fan capacitor with an universal meter and find that the capacity is out of the deviation range indicated on the nameplate of fan capacitor.	Replace the capacity of fan
Power voltage is a little low or high	Use universal meter to measure the power supply voltage. The voltage is a little high or low	Suggest to equip with voltage regulator
Motor of outdoor unit is damaged	When unit is on, cooling/heating performance is bad and ODU compressor generates a lot of noise and heat.	Change compressor oil and refrigerant. If no better, replace the compressor with a new one

5. Compressor can't operate

Possible causes	Discriminating method (air conditioner status)	Troubleshooting
Wrong wire connection, or poor connection	Check the wiring status according to circuit diagram	Connect wires according to wiring diagram to make sure all wiring terminals are connected firmly
Capacity of compressor is damaged	Measure the capacity of fan capacitor with an universal meter and find that the capacity is out of the deviation range indicated on the nameplate of fan capacitor.	Replace the compressor capacitor
Power voltage is a little low or high	Use universal meter to measure the power supply voltage. The voltage is a little high or low	Suggest to equip with voltage regulator
Coil of compressor is burnt out	Use universal meter to measure the resistance between compressor terminals and it's 0	Repair or replace compressor
Cylinder of compressor is blocked	Compressor can't operate	Repair or replace compressor

6. Air conditioner is leaking

Possible causes	Discriminating method (air conditioner status)	Troubleshooting
Drain pipe is blocked	Water leaking from indoor unit	Eliminate the foreign objects inside the drain pipe
Drain pipe is broken	Water leaking from drain pipe	Replace drain pipe
Wrapping is not tight	Water leaking from the pipe connection place of indoor unit	wrap it again and bundle it tightly


7. Abnormal sound and vibration

Possible causes	Discriminating method (air conditioner status)	Troubleshooting
When turn on or turn off the unit, the panel and other parts will expand and there's abnormal sound	There's the sound of "PAPA"	Normal phenomenon. Abnormal sound will disappear after a few minutes.
When turn on or turn off the unit, there's abnormal sound due to flow of refrigerant inside air conditioner	Water-running sound can be heard	Normal phenomenon. Abnormal sound will disappear after a few minutes.
Foreign objects inside the indoor unit or there're parts touching together inside the indoor unit	There's abnormal sound fro indoor unit	Remove foreign objects. Adjust all parts' position of indoor unit, tighten screws and stick damping plaster between connected parts
Foreign objects inside the outdoor unit or there're parts touching together inside the outdoor unit	There's abnormal sound fro outdoor unit	Remove foreign objects. Adjust all parts' position of outdoor unit, tighten screws and stick damping plaster between connected parts
Short circuit inside the magnetic coil	During heating, the way valve has abnormal electromagnetic sound	Replace magnetic coil
Abnormal shake of compressor	Outdoor unit gives out abnormal sound	Adjust the support foot mat of compressor, tighten the bolts
Abnormal sound inside the compressor	Abnormal sound inside the compressor	If add too much refrigerant during maintenance, please reduce refrigerant properly. Replace compressor for other circumstances.

10. Exploded View and Parts List

10.1 Indoor Unit


GWH09RB-K3DBA3E/I(Cold Plasma) GWH12RB-K3DBA3E/I(Cold Plasma)

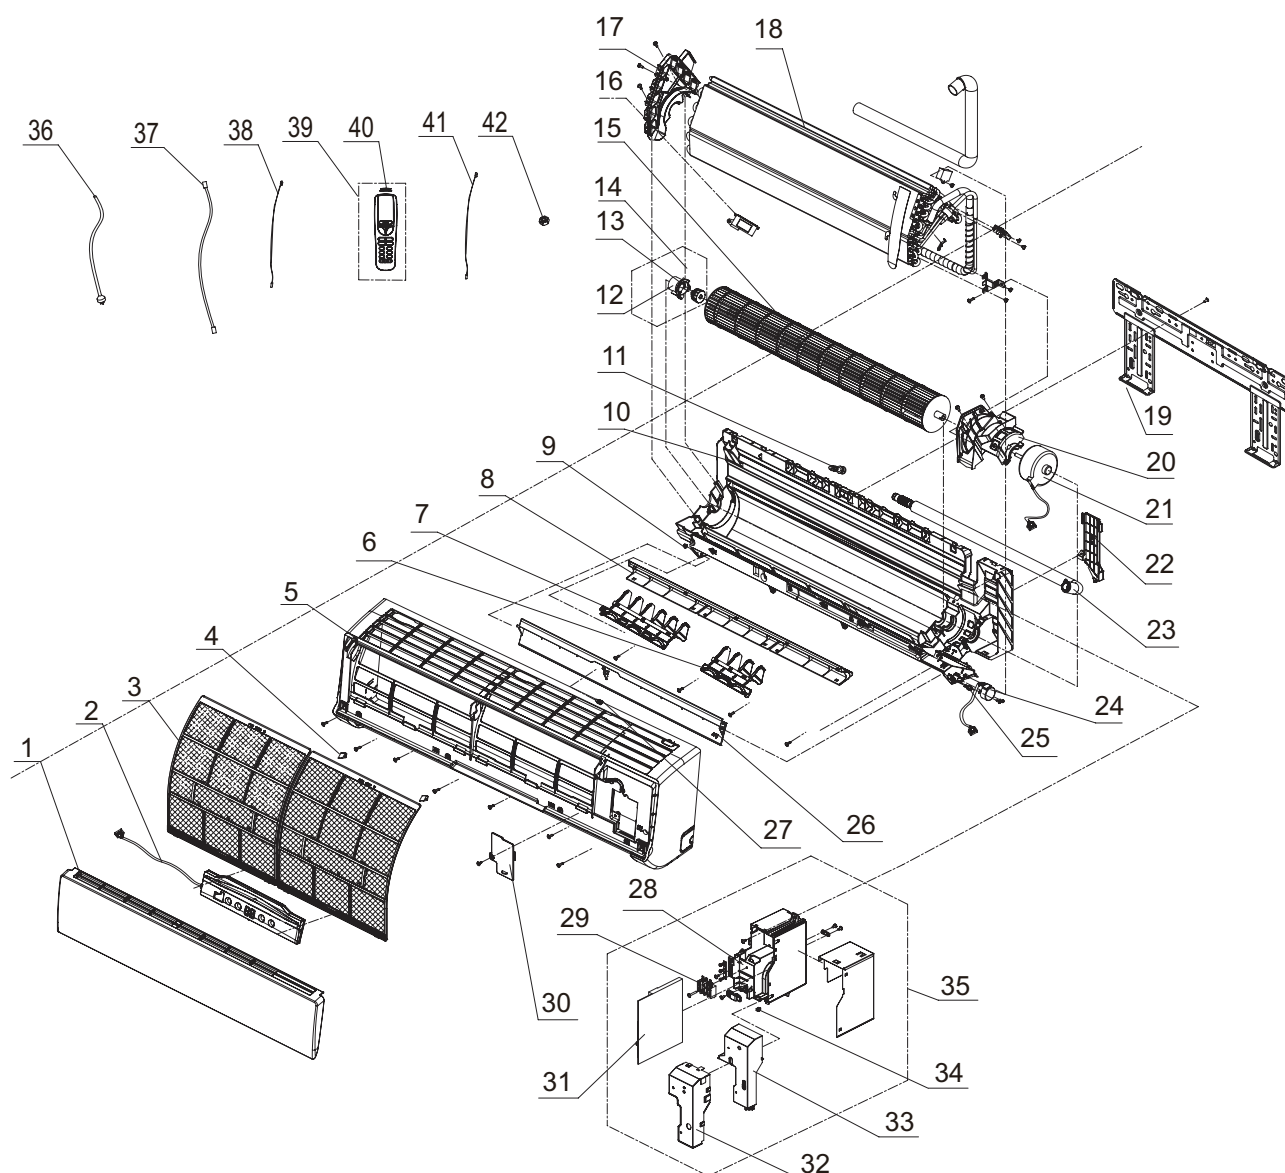

NO.	Description	Part Code		Qty
		GWH09RB-K3DBA3E/I(Cold Plasma)	GWH12RB-K3DBA3E/I(Cold Plasma)	
	Product Code	CB302N02100	CB302N02200	
1	Front Panel Assy	20012858	20012858	1
2	Display Board	30565137	30565137	1
3	Filter Sub-Assy	1112220403	1112220403	2
4	Screw Cover	24252016	24252016	1
5	Front Case Sub-assy	20012790	20012790	1
6	Air Louver 1	1051215603	1051215603	1
7	Air Louver 2	1051215503	1051215503	1
8	Helicoid tongue	2611216302	2611216302	1
9	Left Axile Bush	10512037	10512037	1
10	Rear Case assy	22202467	22202467	1
11	Rubber Plug (Water Tray)	76712012	76712012	1
12	Ring of Bearing	26152022	26152022	1
13	O-Gasket of Cross Fan Bearing	76512203	76512203	1
14	O-Gasket sub-assy of Bearing	7651205102	7651205102	1
15	Cross Flow Fan	10352017	10352017	1
16	Cold Plasma Generator	1114001602	1114001602	1
17	Evaporator Support	24212091	24212091	1
18	Evaporator Assy	01002000011	01002000011	1
19	Wall Mounting Frame	01252021	01252021	1
20	Motor Press Plate	26112161	26112161	1
21	Fan Motor	1501208904	1501208904	1
22	Connecting pipe clamp	2611216401	2611216401	1
23	Drainage hose	0523001401	0523001401	1
24	Stepping Motor	1521212901	1521212901	1
25	Crank	10582070	10582070	1
26	Guide Louver	10512203	10512203	1
27	Axile Bush	10542036	10542036	1
28	Electric Box	2011208201	2011208201	1
29	Terminal Board	42011233	42011233	1
30	Electric Box Cover2	20122075	20122075	1
31	Main Board	30148782	30148782	1
32	Shield cover of Electric Box sub-assy	01592073	01592073	1
33	Electric Box Cover1	22242135	22242135	1
34	Jumper	4202300102	4202300104	1
35	Electric Box Assy	20402447	20402448	1
36	Power Cord	400204649	400204649	1
37	Connecting Cable	400204055	400204055	0
38	Temperature Sensor	390000451	390000451	1
39	Remote Controller	30510125	30510125	1
40	Receiving Window	2243013601	2243013601	1
41	Temperature Sensor	390000451	390000451	1
42	Pipe Connection Nut accessories	06320020	06320020	1

Above data is subject to change without notice.

GWH09RB-K3DBA5E/I GWH12RB-K3DBA5E/I

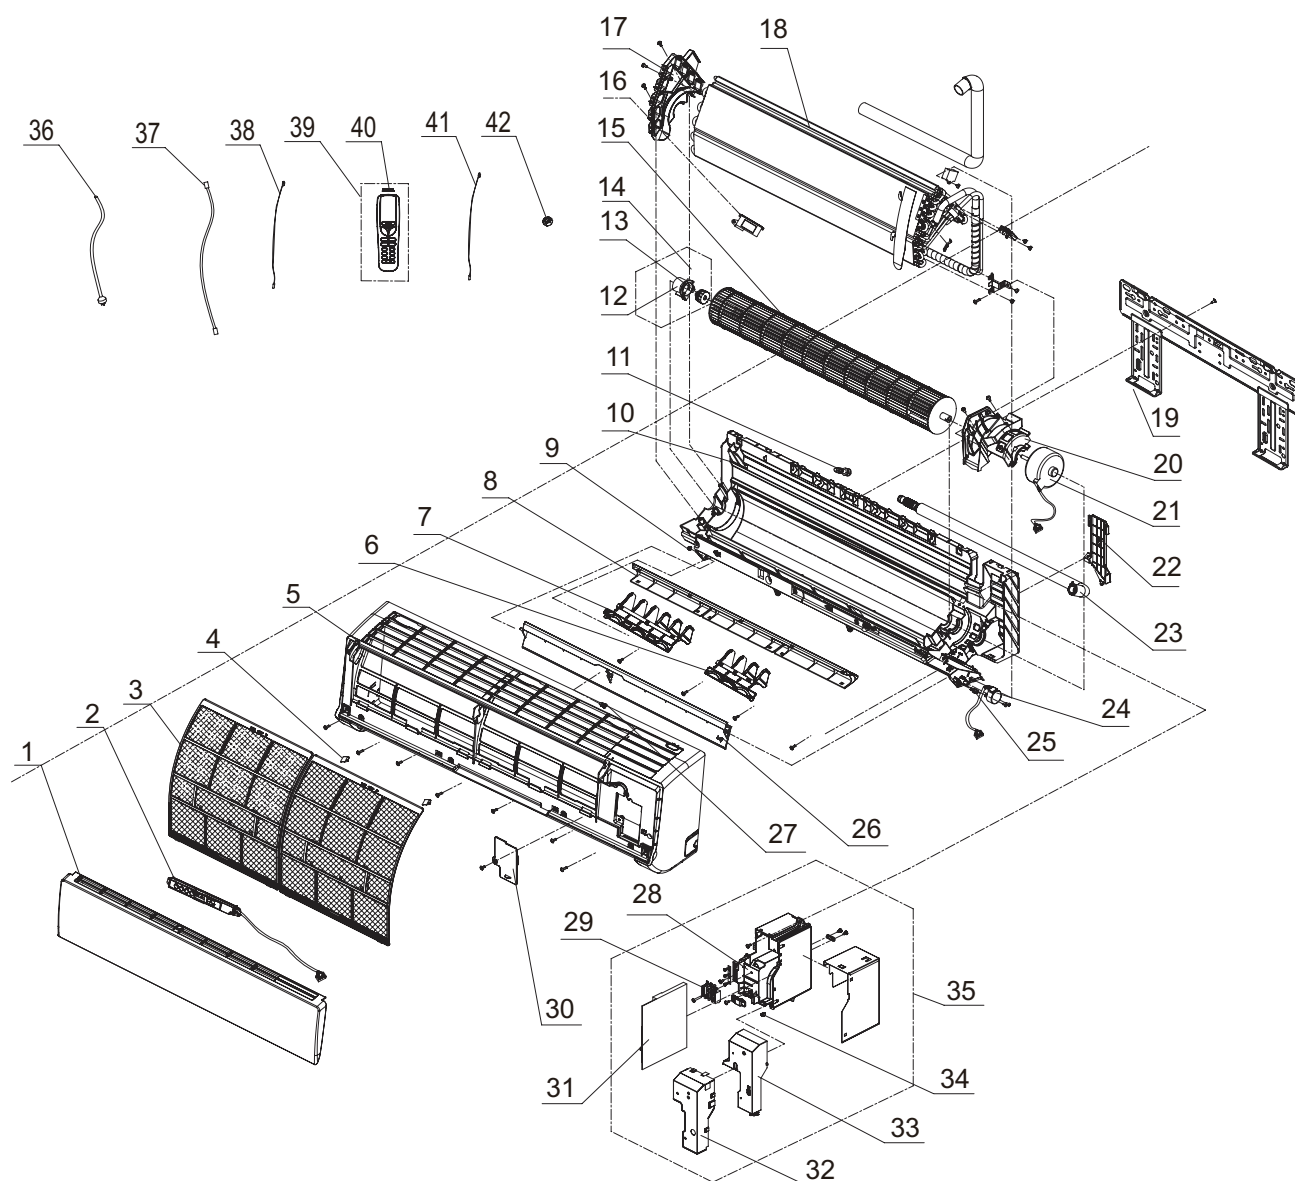


NO.	Description	Part Code		Qty
		GWH09RB-K3DBA5E/I	GWH12RB-K3DBA5E/I	
	Product Code	CB304N01200	CB304N01300	
1	Front Panel Assy	20012948	20012948	1
2	Display Board	30565159	30565159	1
3	Filter Sub-Assy	1112220403	1112220403	2
4	Screw Cover	242520179	242520179	1
5	Front Case Sub-assy	2001279001	2001279001	1
6	Air Louver 1	1051215603	1051215603	1
7	Air Louver 2	1051215503	1051215503	1
8	Helicoid tongue	2611216302	2611216302	1
9	Left Axile Bush	10512037	10512037	1
10	Rear Case assy	22202467	22202467	1
11	Rubber Plug (Water Tray)	76712012	76712012	1
12	Ring of Bearing	26152022	26152022	1
13	O-Gasket of Cross Fan Bearing	76512203	76512203	1
14	O-Gasket sub-assy of Bearing	7651205102	7651205102	1
15	Cross Flow Fan	10352017	10352017	1
16	Cold Plasma Generator	1114001602	1114001602	1
17	Evaporator Support	24212091	24212091	1
18	Evaporator Assy	01002000011	01002000011	1
19	Wall Mounting Frame	01252021	01252021	1
20	Motor Press Plate	26112161	26112161	1
21	Fan Motor	1501208904	1501208904	1
22	Connecting pipe clamp	2611216401	2611216401	1
23	Drainage hose	0523001401	0523001401	1
24	Stepping Motor	1521212901	1521212901	1
25	Crank	10582070	10582070	1
26	Guide Louver	1051220301	1051220301	1
27	Axile Bush	10542036	10542036	1
28	Electric Box	2011208201	2011208201	1
29	Terminal Board	42011233	42011233	1
30	Electric Box Cover2	2012207512	2012207512	1
31	Main Board	30148781	30148781	1
32	Shield cover of Electric Box sub-assy	01592073	01592073	1
33	Electric Box Cover1	22242135	22242135	1
34	Jumper	4202300102	4202300104	1
35	Electric Box Assy	20403046	20402671	1
36	Power Cord	400220113	400204649	1
37	Connecting Cable	400204056	400204055	0
38	Temperature Sensor	390000451	390000451	1
39	Remote Controller	30510125	30510125	1
40	Receiving Window	2243013601	2243013601	1
41	Temperature Sensor	390000591	390000451	1
42	Pipe Connection Nut accessories	06320020	06320020	1

Above data is subject to change without notice.

10.2 Outdoor Unit


GWH09RB-K3DBA5E/O GWH09RB-K3DBA3E/O(LCLH)

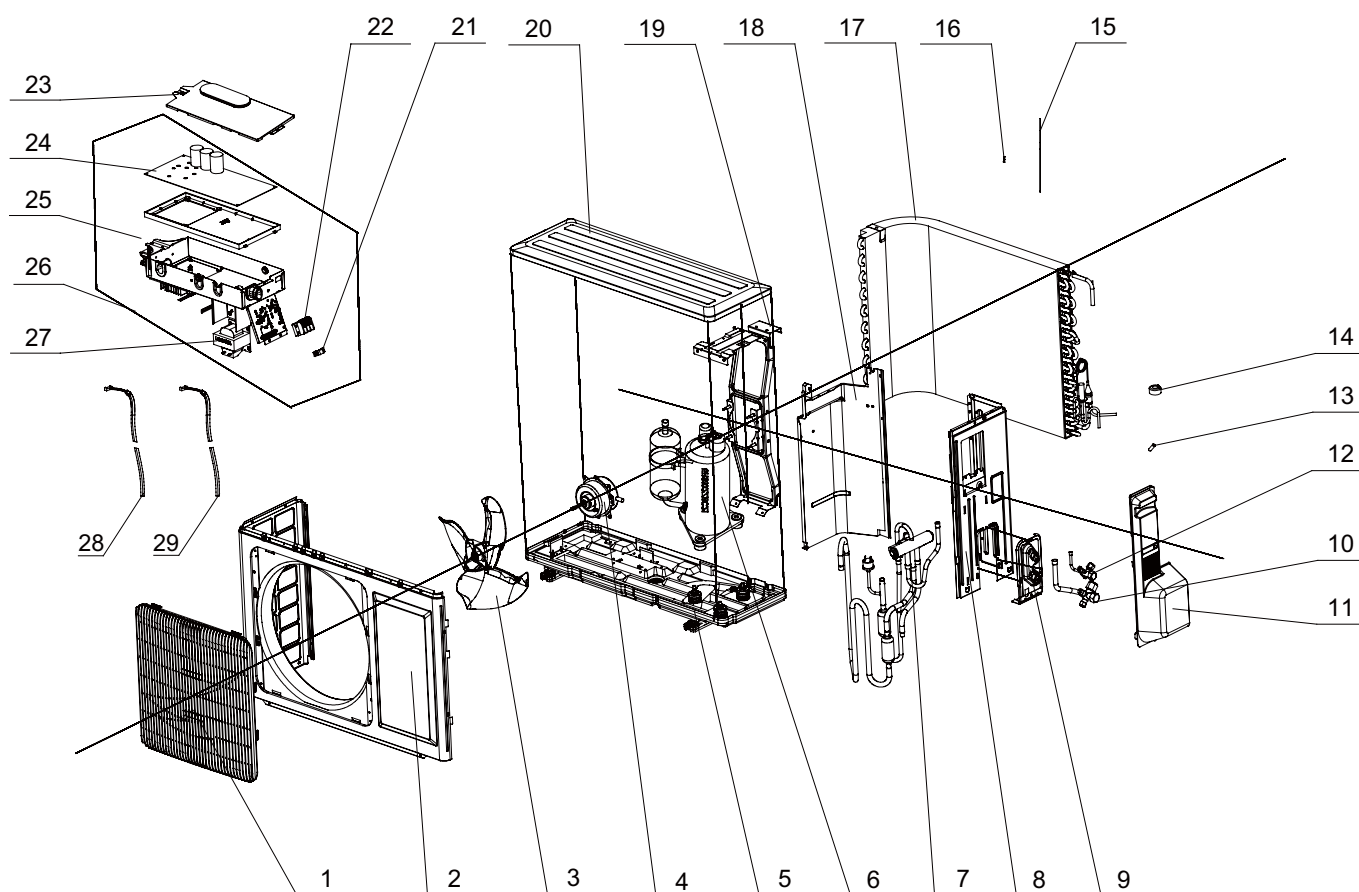

NO.	Description	Part Code		Qty
		GWH09RB-K3DBA5E/O	GWH09RB-K3DBA3E/O(LCLH)	
	Product Code	CB304W01200	CB302W02100	
1	Front Grill	22413008	22413008	1
2	Front Panel	0153303204P	0153303204P	1
3	Axial Flow Fan	10333012	10333012	1
4	Fan Motor	15013159	15013159	1
5	Chassis Sub-assy	02803008P	02803008P	1
6	Compressor and Fittings	00103215	00103215	1
7	4-Way Valve Assy	03123777	03123777	1
8	Right Side Plate Sub-Assy	0130317801	0130317801	1
9	Valve Support	01713041	01713041	1
10	Valve	07100005	07100005	1
11	Big Handle	26233433	26233433	1
12	Cut off Valve	07133082	07133082	1
13	Temp Sensor Sleeving	05212423	05212423	1
14	Magnet Coil	4300040047	4300040047	1
15	Temperature Sensor	3900030903G	3900030903G	1
16	Sensor Insert	42020063	42020063	1
17	Condenser Assy	01163253	01163253	1
18	Clapboard Sub-Assy	01233034	01233034	1
19	Motor Suport Spot Welding Sub-assy	01703007	01703007	1
20	Top Cover Plate	01253443	01253443	1
21	Wire Clamp	71010003	71010003	1
22	Terminal Board	42011113	42011113	1
23	Electric Box Cover Sub-Assy	0260309601	0260309601	1
24	Main Board	30138954	30138954	1
25	Electric Box 1	20113005	20113005	1
26	Electric Box Assy	02613941	01403000081	1
27	Reactor	43130184	43130184	1
28	Electrical Heater(Compressor)	76513004	76513004	1
29	Electrical Heater (Chassis)	76510004	76510004	1

Above data is subject to change without notice.


GWH12RB-K3DBA5E/O GWH12RB-K3DBA3E/O(LCLH)

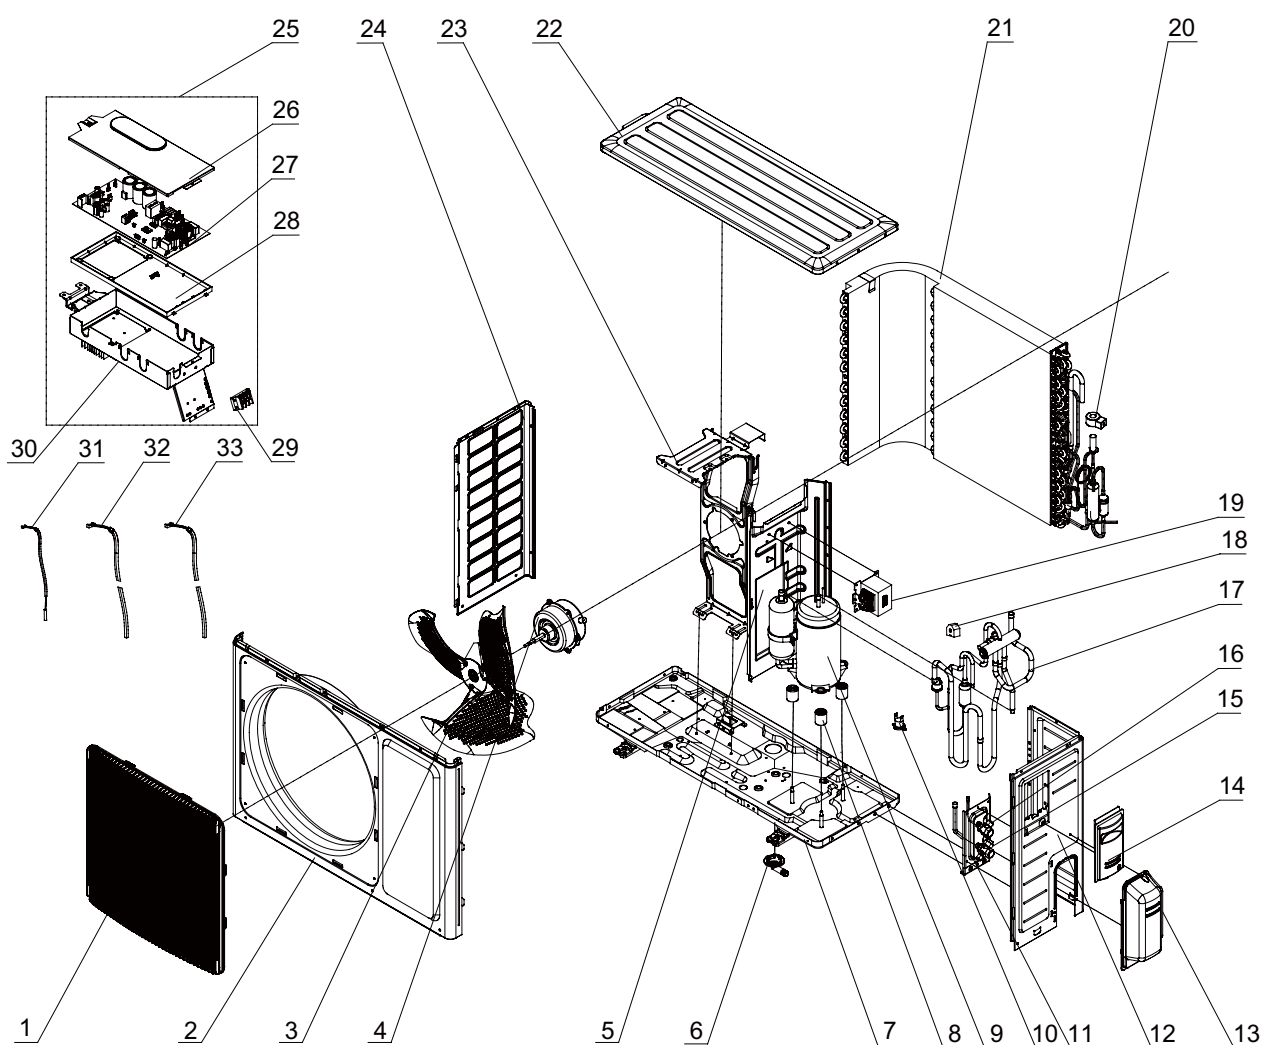





NO.	Description	Part Code		Qty
		GWH12RB-K3DBA5E/O	GWH12RB-K3DBA3E/O(LCLH)	
	Product Code	CB304W01300	CB302W02200	
1	Front Grill	22413015	22413015	1
2	Cabinet	01433034P	01433034P	1
3	Axial Flow Fan	10333417	10333417	1
4	Fan Motor	1501307901	1501307901	1
5	Clapboard	01233125	01233125	1
6	Drainage Joint	26113009	26113009	1
7	Chassis Sub-assy	02803042P	02803042P	1
8	Compressor Gasket	76710236	76710236	3
9	Compressor and fittings	00205212	00205212	1
10	Compressor Overload Protector	00180002	00180002	1
11	Valve Support Sub-Assy	01713115P	01713115P	1
12	Right Side Plate	0130324403P	0130324403P	1
13	Valve cover	22243005	22243005	1
14	Big Handle	26233431	26233431	1
15	Cut off Valve Sub-Assy	07133204	07133204	1
16	Cut off Valve Sub-Assy	07133941	07133941	1
17	4-Way Valve Assy	03123579	03073294	1
18	Magnet Coil	430004002	4300040022	1
19	Reactor	43130184	43130184	1
20	Electric Expand Valve Fitting	4300876701	4300876701	1
21	Condenser Assy	01113882	01113882	1
22	Coping	01253034P	01253034P	1
23	Motor Support Sub-Assy	01703433	01703433	1
24	Left Side Plate	01303169P	01303169P	1
25	Electric Box Assy	02613940	02613940	1
26	Electric Box Cover Sub-Assy	0260309601	0260309601	1
27	Main Board	30138000081	30138000081	1
28	Electric Box 1	20113005	20113005	1
29	Terminal Board	42011113	42011113	1
30	Electric Box Sub-Assy	02603616	02603616	1
31	Temperature Sensor	3900030903G	3900030903G	1
32	Electrical Heater(Compressor)	76513004	76513004	1
33	Electrical Heater (Chassis)	76510004	76510004	1




Above data is subject to change without notice.





11. Removal Procedure






 **Caution:** discharge the refrigerant completely before removal.






11.1 Removal Procedure of Indoor Unit

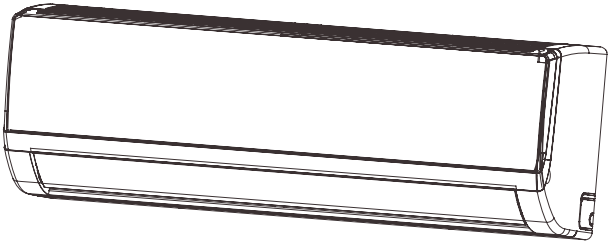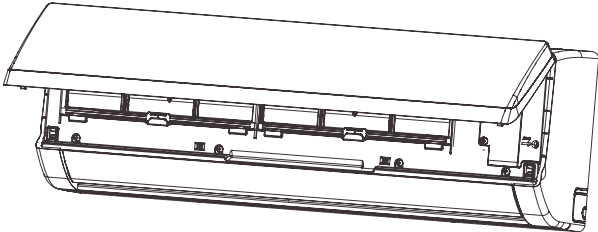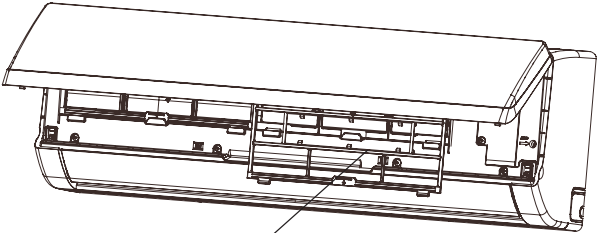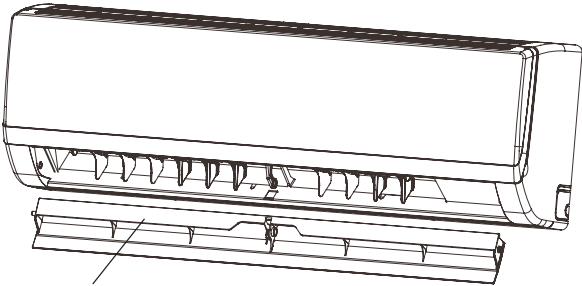Steps	Procedure	
1. Before disassembly of the unit		
2. Remove filter and horizontal louver		  
1	Open the panel.	
2	Loosen clasps on filter and then remove the filter.	
3	Remove axial bush on horizontal louver, and bend the horizontal louver slightly to remove it.	

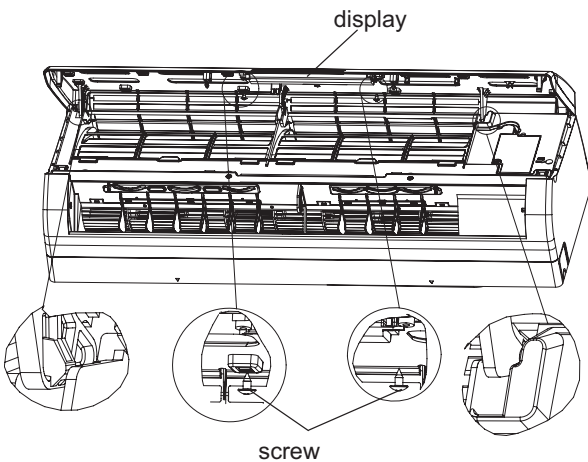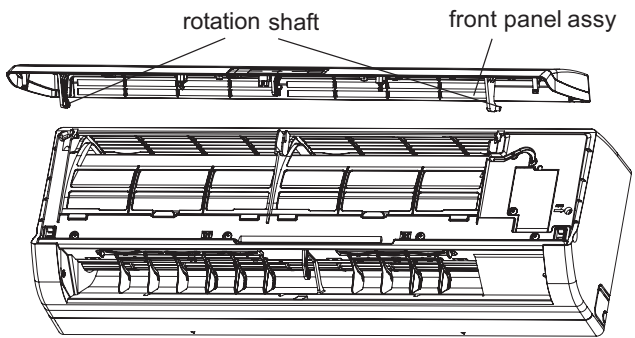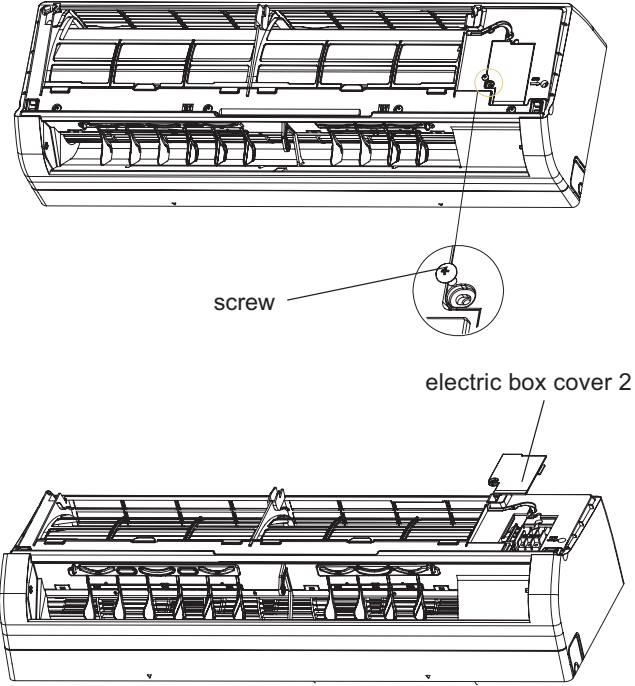
Steps	Procedure	
3. Remove display and panel		
1	Remove screws on display and then remove the display.	
2	Quit the rotation shaft of panel from groove, and then remove the panel.	
4. Remove electric box cover 2		
	Remove screws connecting electric box cover 2 and front case, and then remove the electric box cover 2.	

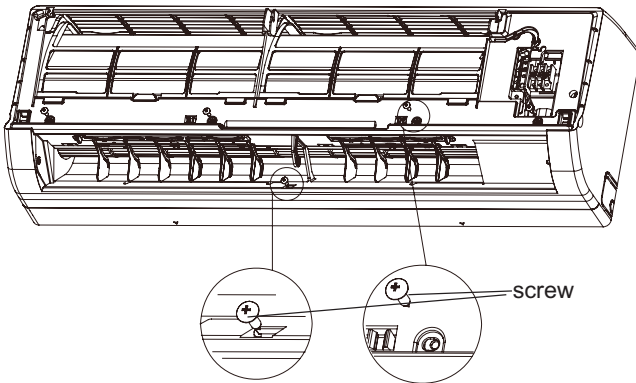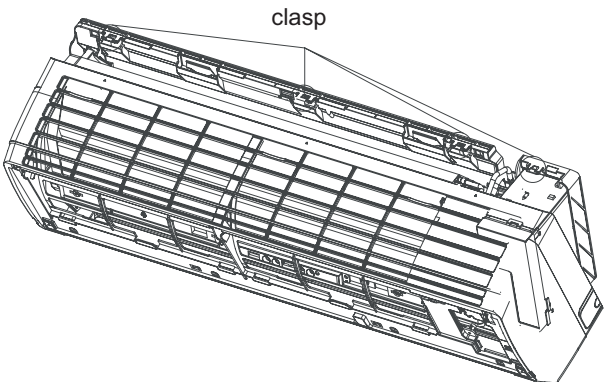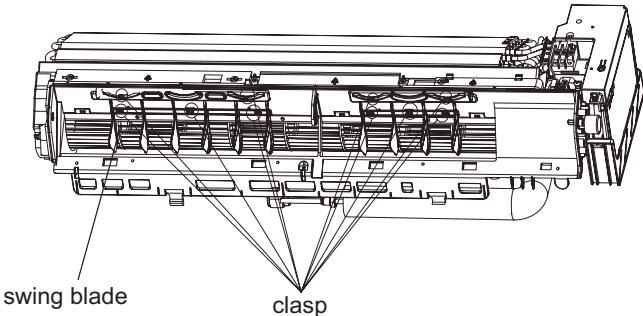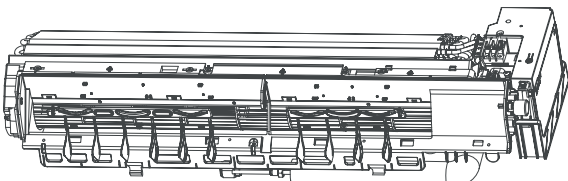Steps		Procedure
5. Remove front case		
1	Remove screws connecting front case and bottom case.	
2	Open screw cover by hand, remove other 3 screws, loosen clasps connecting front case and bottom case and then remove the front case.	
6. Remove swing blade		
1	Remove 10 clasps connecting swing blade and bottom case.	
2	Remove swing blade.	

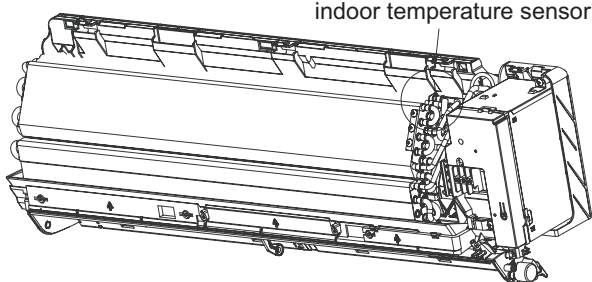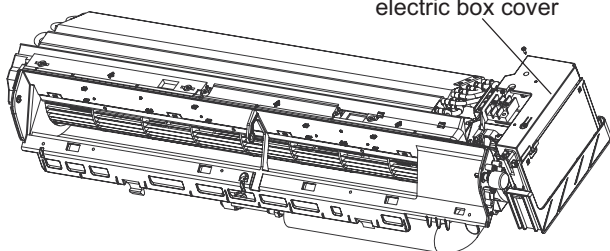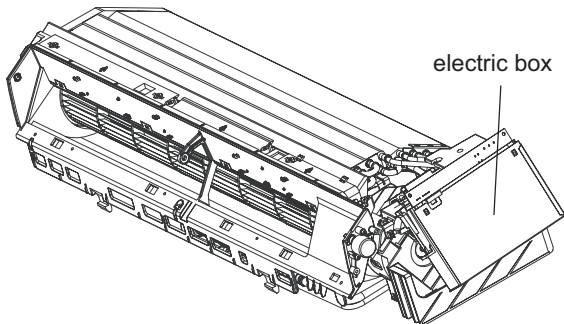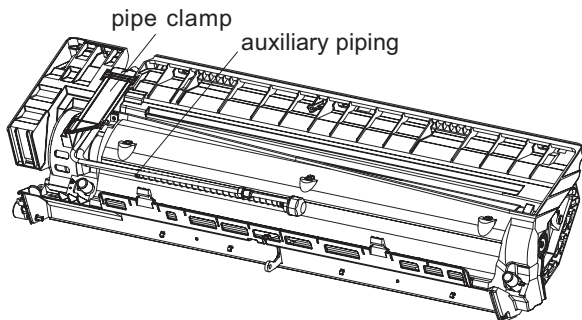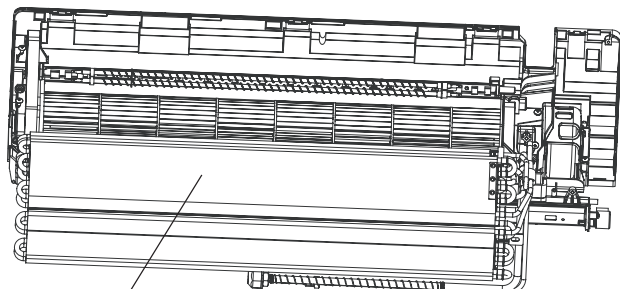Steps	Procedure	
7. Remove electric box		
1	Pull out the indoor temperature sensor.	
2	Remove screws connecting electric box and bottom case, loosen clasps, remove screws connecting earthing wire and evaporator, and then remove the electric box.	 
8. Remove evaporator		
1	Turn over bottom case, remove screws connecting pipe clamp and bottom case, loosen clasps between connecting pipe clamp and bottom case, and then remove the connecting pipe clamp.	
2	Remove screws connecting evaporator and motor press plate and bottom case, loosen clasps fixing evaporator and bottom case, adjust the pipeline and then remove the evaporator.	

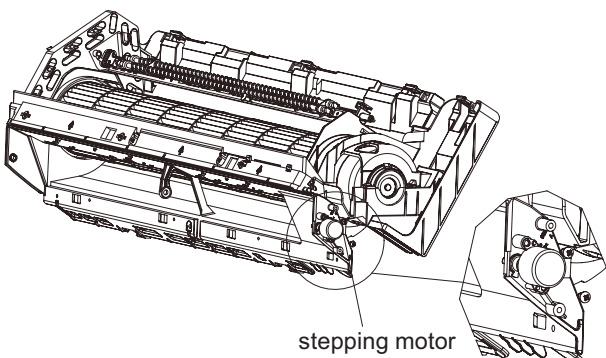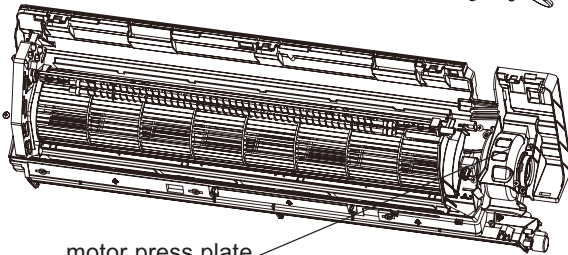
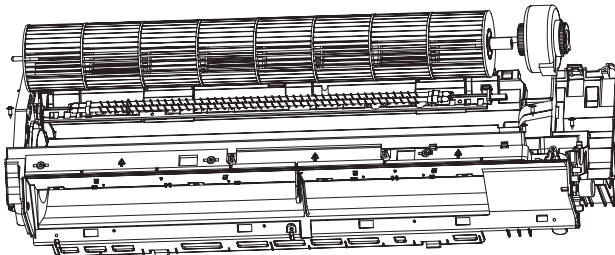
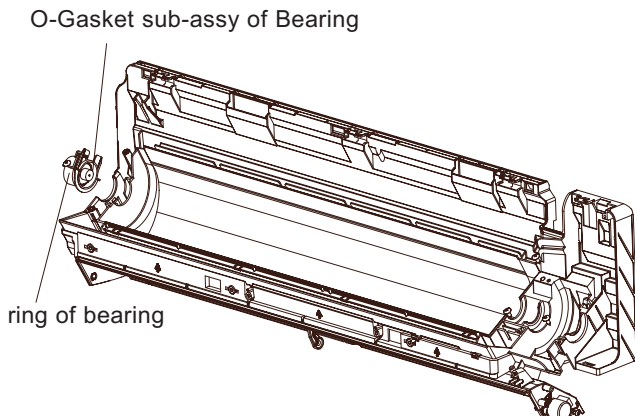
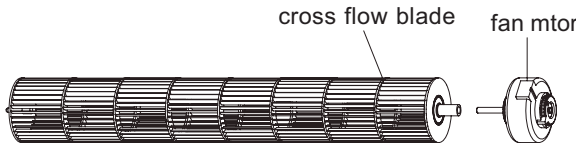
Steps	Procedure	
9. Remove cross flow blade and motor		
1	Remove screws on stepping motor, and then remove the stepping motor.	 <p>stepping motor</p>
2	Remove 4 screws connecting motor press plate and bottom case, and then remove motor press plate.	 <p>motor press plate</p>
3	Remove cross flow blade and motor.	
4	Remove shaft rubber cushion block.	 <p>O-Gasket sub-assy of Bearing</p> <p>ring of bearing</p>
5	Remove screws connecting cross flow blade and motor shaft, and then remove motor.	 <p>cross flow blade</p> <p>fan mtor</p>





11.2 Removal Procedure of Outdoor Unit




 **Warning:** Be sure to wait for a minimum of 20 minutes after turning off all power supplies and discharge the refrigerant completely before removal.




GWH09RB-K3DBA5E/O GWH09RB-K3DBA3E/O(LCLH)



Note:Electric heater band is not shown.

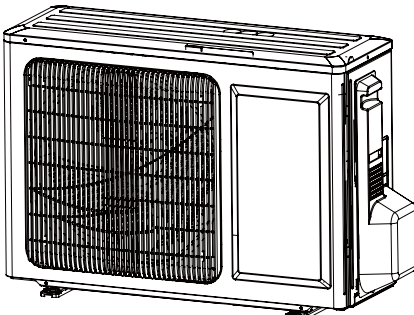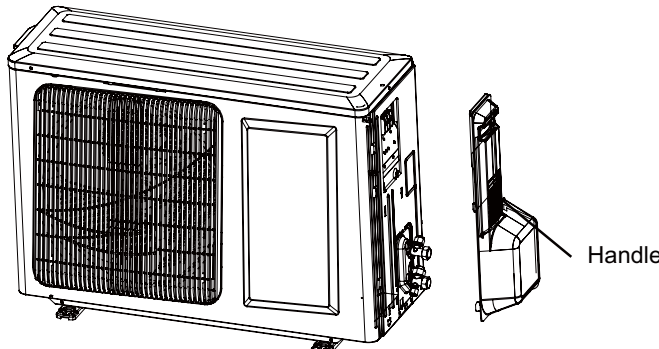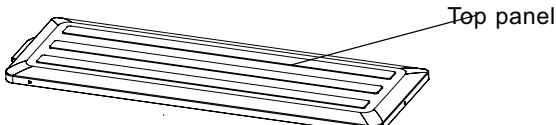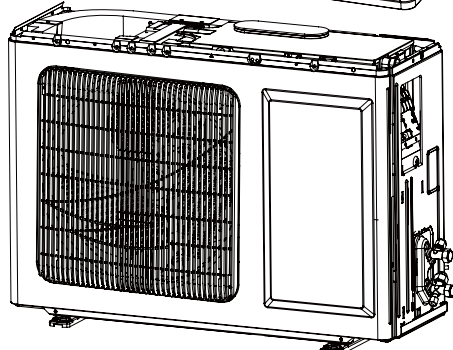Steps		Procedure
1.Remove big handle		 
1	Before disassembly.	
2	Remove the connection screw fixing the big handle and then remove the handle.	
2. Remove top cover		 
	Remove connection screws connecting the top cover plate with the front panel and the right side plate, and then remove the top panel.	

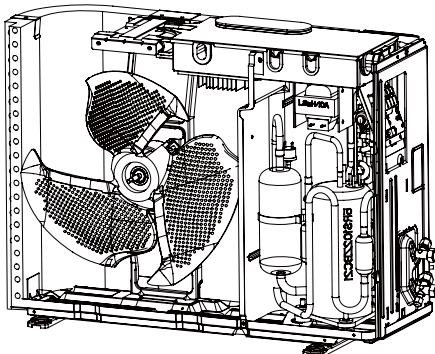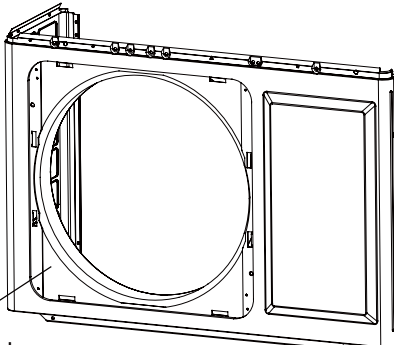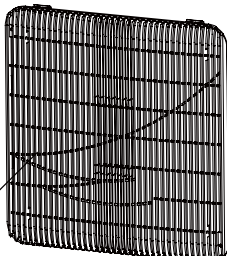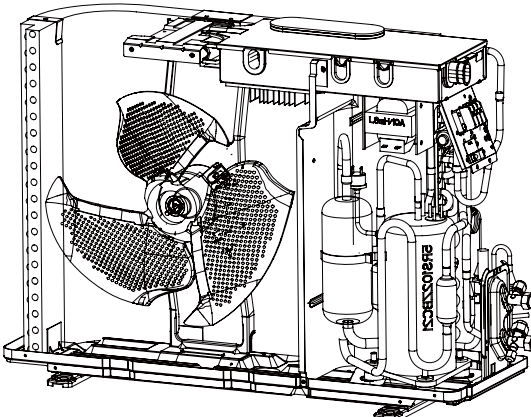Steps	Procedure	
3.Remove grille and front panel		
1	Remove connection screws between the front grille and the front panel. Then remove the front grille.	
2	Remove connection screws connecting the front panel with the chassis and the motor support, and then remove the front panel.	<div><div><p>Front panel</p></div><div><p>Grille</p></div></div>
4.Remove right side plate		
	Remove connection screws connecting the right side plate with the valve support and the electric box. Then remove the right side plate.	<div><p>Right side plate</p></div>

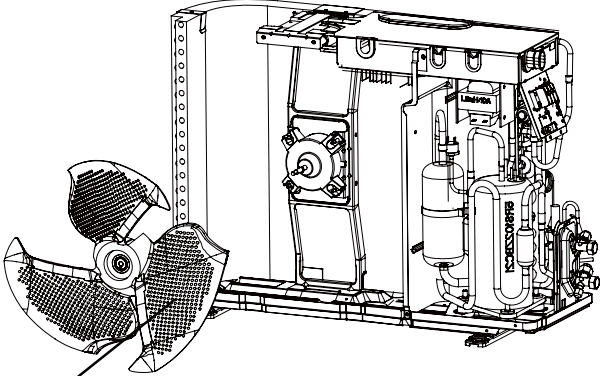
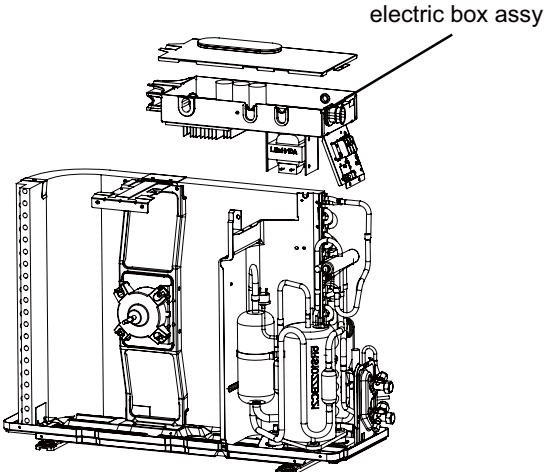
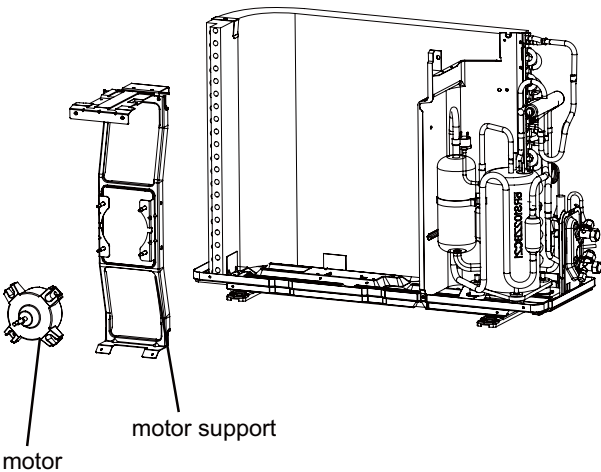
Steps	Procedure	
5.Remove axial flow blade	<p>Remove the nut fixing the blade and then remove the axial flow blade.</p>	 <p>Axial flow blade</p>
6.Remove electric box assy		
7.Remove motor and motor support	<p>Remove the 4 tapping screws fixing the motor. Pull out the lead-out wire and remove the motor. Remove the 2 tapping screws fixing the motor support. Lift motor support to remove it.</p>	 <p>electric box assy</p>
	 <p>motor support</p> <p>motor</p>	

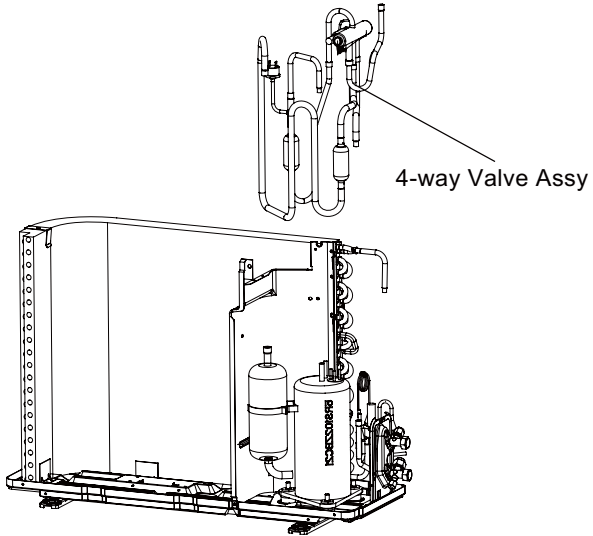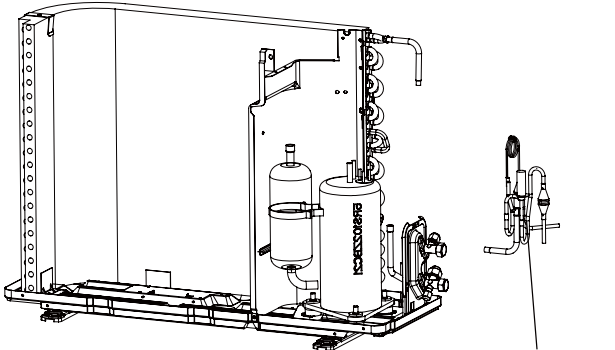
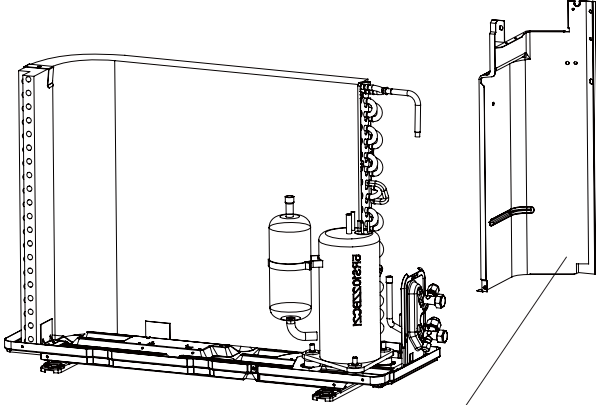
Steps	Procedure
<p>8.Remove 4-way Valve Assy and Capillary Sub-assy</p> <p>Unscrew the fastening nut of the 4-way Valve Assy coil and remove the coil. Wrap the 4-way Valve Assy with wet cotton and unsolder the 4 weld spots connecting the 4-way Valve Assy to take it out.(Note: Refrigerant should be discharged firstly.) Welding process should be as quickly as possible and keep wrapping cotton wet all the time. Be sure not to burn out the lead-out wire of compressor.</p>	 <p>4-way Valve Assy</p>
<p>9.Remove soundproof sponge</p> <p>Unsolder weld point of capillary Sub-assy, valve and outlet pipe of condensator. Then remove the capillary Sub-assy. Do not block the capillary when unsoldering it. (Note: before unsoldering,discharge refrigerants completely)</p>	 <p>Capillary Sub-assy</p>
<p>10. Remove Clapboard Sub-Assy</p> <p>Loosen the screws of the Clapboard Sub-Assy . The Clapboard Sub-Assy has a hook on the lower side. Lift and pull the Clapboard Sub-Assy to remove.</p>	 <p>Clapboard Sub-Assy</p>


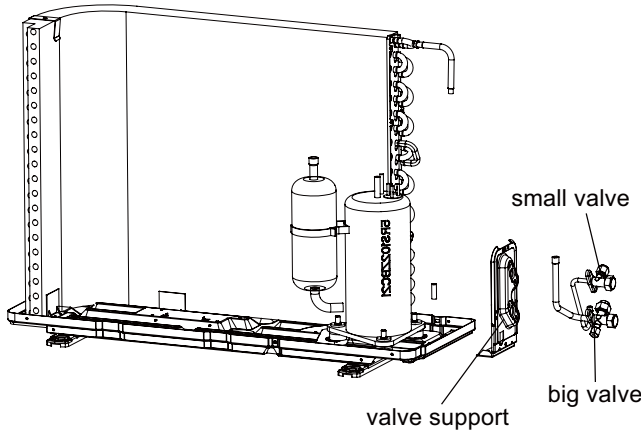
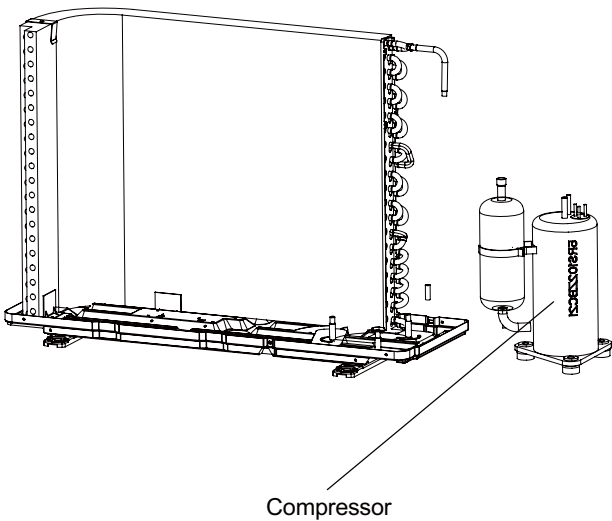
Steps	Procedure
<div data-bbox="98 286 411 315">11.Remove valve sub-assy</div> <div data-bbox="225 443 732 521"> <p>Remove the screws fixing big and small valve, welding cut the welding spots of four-way valve assy, to remove the valve sub-assy.</p> </div>	<div data-bbox="857 443 1500 871">  <p>Diagram illustrating the removal of the valve sub-assembly. The main unit is shown with the valve sub-assembly highlighted. Labels point to the 'small valve', 'big valve', and 'valve support'.</p> </div>
<div data-bbox="98 976 370 1005">12.Remove Compressor</div> <div data-bbox="225 1153 742 1218"> <p>Remove the 3 footing screws of the compressor and remove the compressor.</p> </div>	<div data-bbox="857 1099 1471 1617">  <p>Diagram illustrating the removal of the compressor. The main unit is shown with the compressor highlighted. A label points to the 'Compressor'.</p> </div>




GWH12RB-K3DBA5E/O GWH12RB-K3DBA3E/O(LCLH)




Note:Electric heater band is not shown.

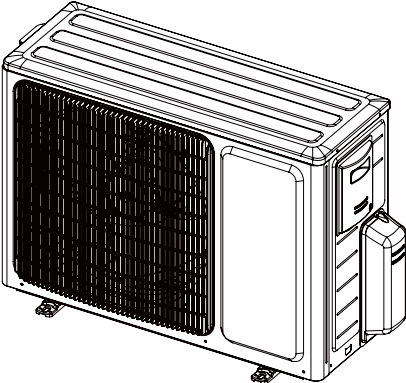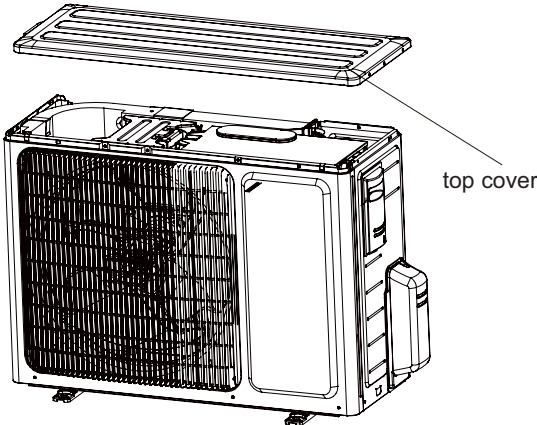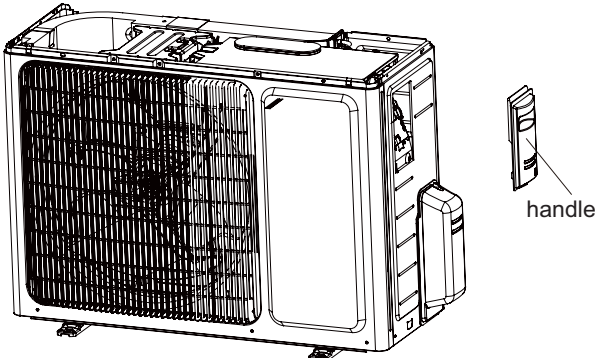
Steps	Procedure
1. Before disassembly	
2. Remove top cover	<p>Remove the screws connecting top cover, left and right side plate, as well as panel, to remove the top cover.</p> 
3. Remove handle	<p>Remove the screws connecting handle and right side plate, to remove the handle.</p> 

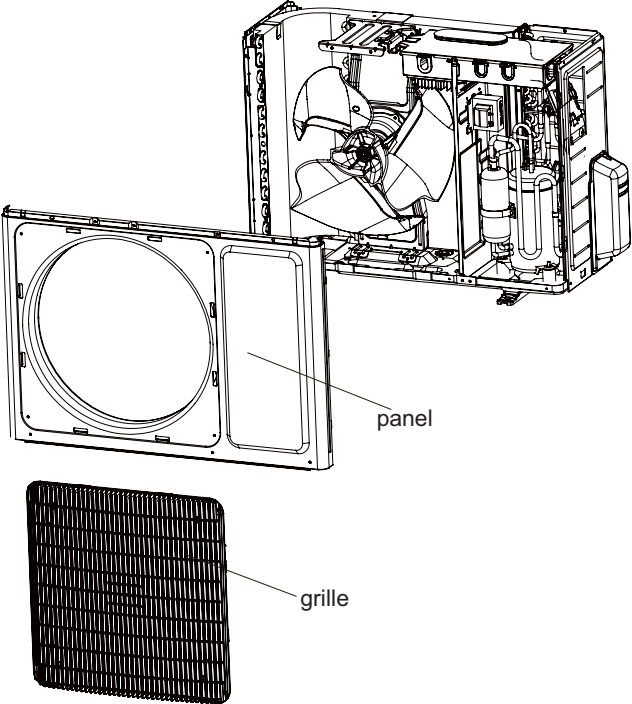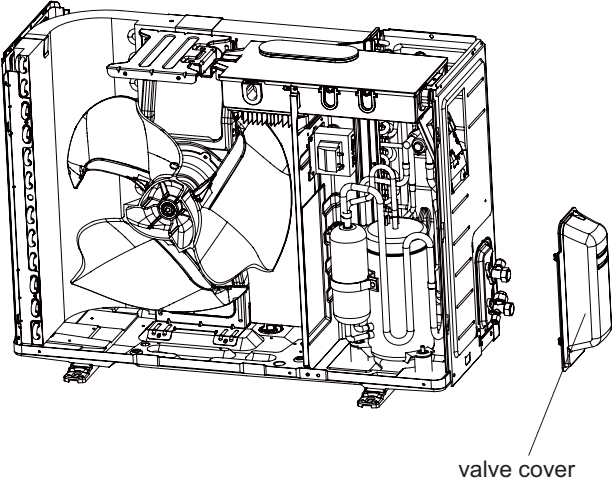Steps	Procedure	
4. Remove panel and grille		
	<p>Remove the screws fixing panel, to remove the panel. Remove the screws connecting panel grille and panel, loosen the clamp, to remove the panel grille.</p>	
5. Remove valve cover		
	<p>Remove the screw fixing valve cover, to remove the cover.</p>	

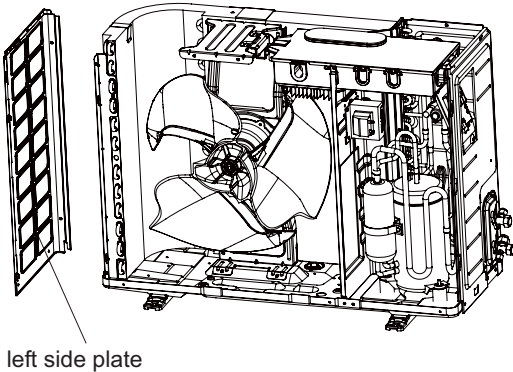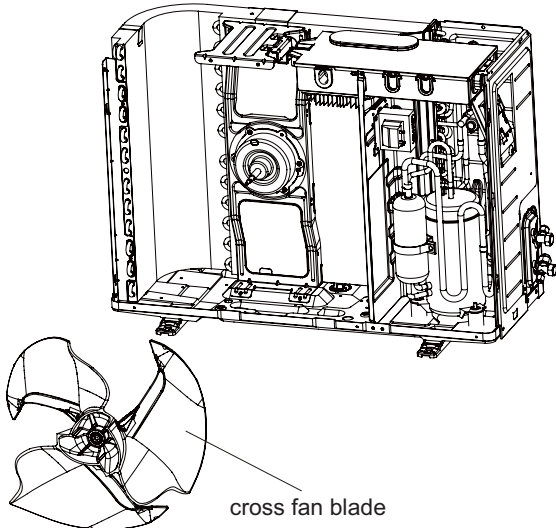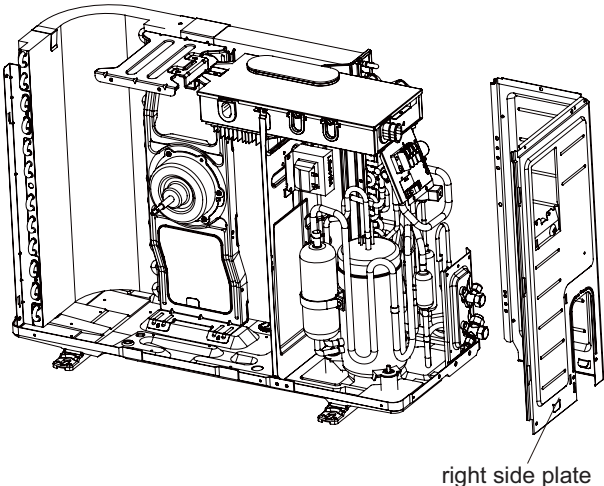
Steps	Procedure	
6. Remove left side plate	<p>Remove the screws fixing left side plate and condenser support board, to remove the left side plate.</p>	
7. Remove cross fan blade	<p>Remove the screw nut fixing cross fan blade, remove the gasket and spring cushion, to remove the cross fan blade.</p>	
8. Remove right side plate	<p>Remove the screws fixing right side plate and valve support, to remove the right side plate.</p>	

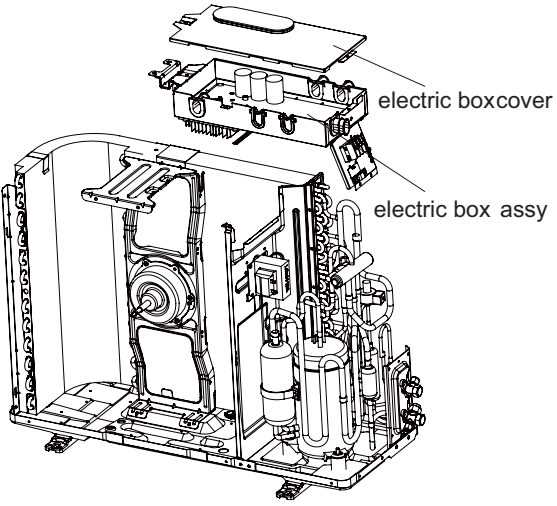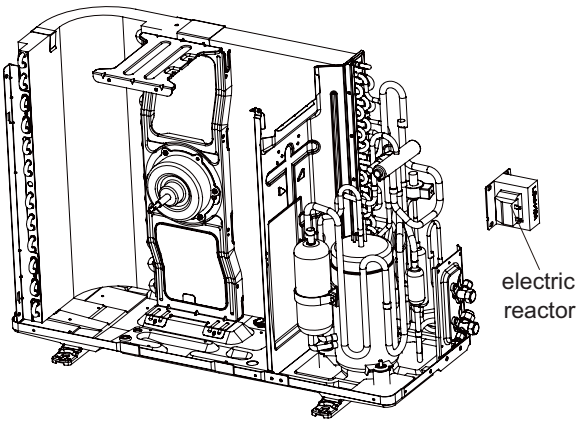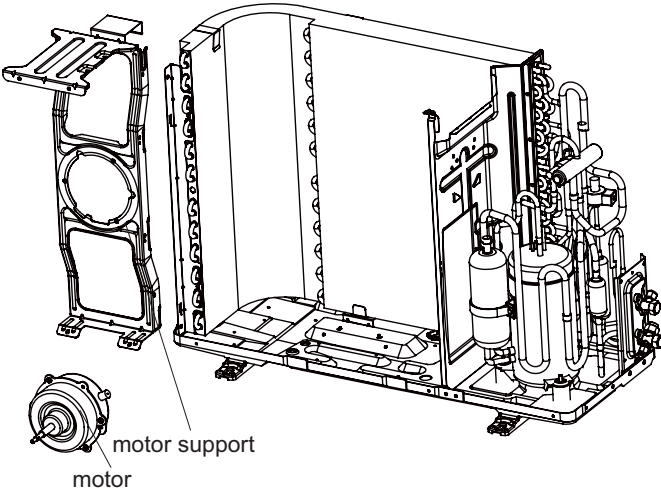Steps	Procedure	
9. Remove electric box assy		
	Remove screws fixing electric box assy and mid-isolation board, loosen the bonding tie, pull off the wiring terminal, lift to remove the electric box assy.	
10. Remove electric reactor		
	Remove the screws fixing electric reactor, to remove the electric reactor.	
11. Remove motor and motor support		
	Remove the four tapping screws fixing motor, pull out the contact tag of motor wiring, to remove the motor. Remove the two tapping screws fixing motor support and chassis, lift to remove the motor support.	

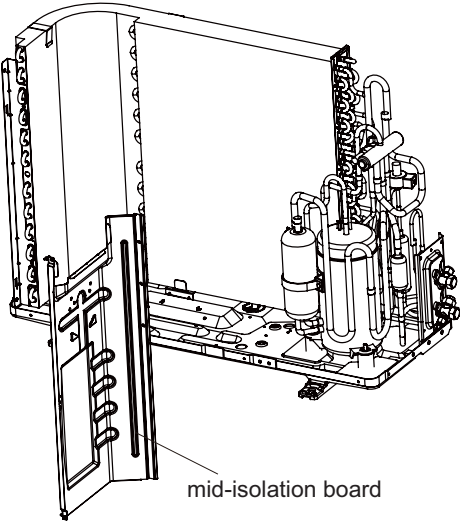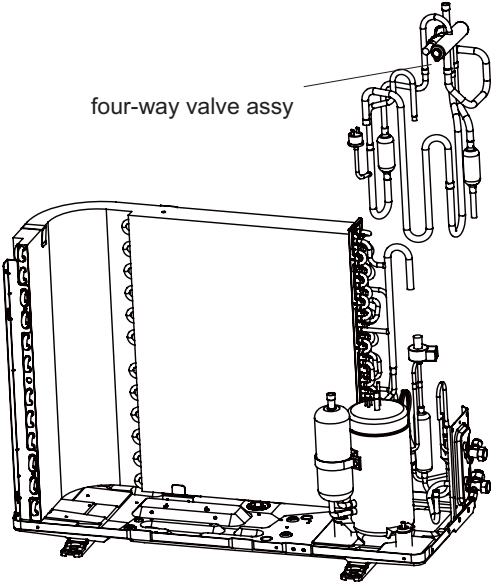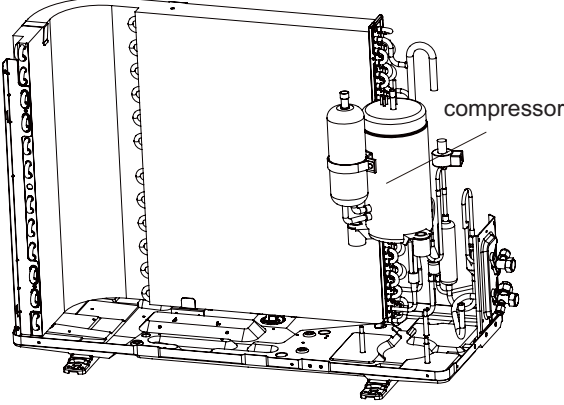Steps	Procedure	
12. Remove mid-isolation board	<p>Remove the screws connecting mid-isolation board, chassis and condenser assy, to remove the mid-isolation.</p>	 <p>mid-isolation board</p>
13. Remove four-way valve assy		
	<p>Welding cut the spot weld of four-way valve assy, compressor air suction/discharging valve and condenser pipe outlet, lift to remove the four-way valve assy. (Note: release the refrigerant before welding cutting.)</p>	 <p>four-way valve assy</p>
14. Remove compressor	<p>Remove the three feet screw nuts fixing compressor, to remove the compressor.</p>	 <p>compressor</p>

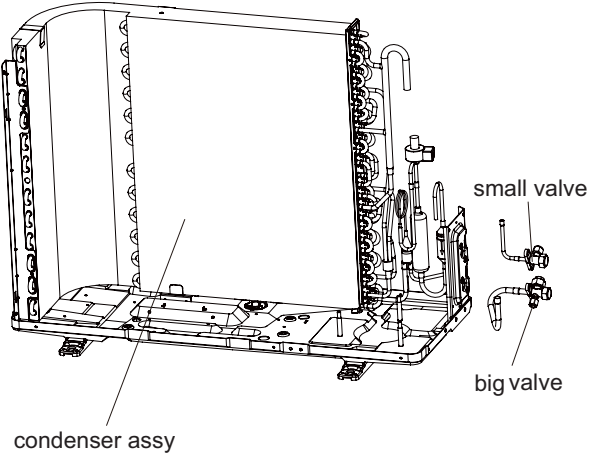Steps	Procedure	
15. Remove big and small valve assy		

Remove screws connecting condenser assy and chassis, to remove the condenser assy.
Remove the screws fixing big and small valve, to remove the valves.

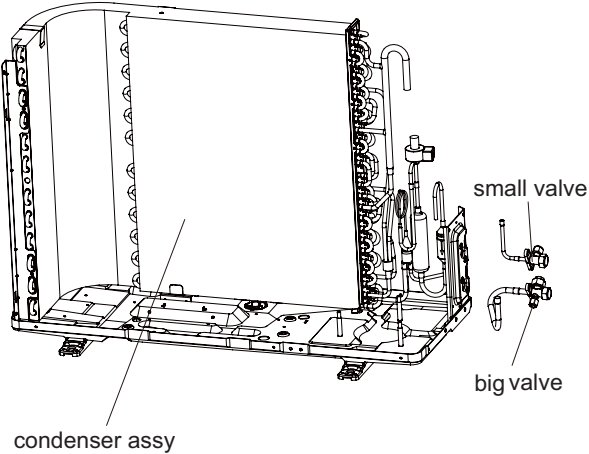

Appendix:

Appendix 1: Reference Sheet of Celsius and Fahrenheit

Conversion formula for Fahrenheit degree and Celsius degree: $T_f = T_c \times 1.8 + 32$

Set temperature

Fahrenheit display temperature (°F)	Fahrenheit (°F)	Celsius (°C)	Fahrenheit display temperature (°F)	Fahrenheit (°F)	Celsius (°C)	Fahrenheit display temperature (°F)	Fahrenheit (°F)	Celsius (°C)
61	60.8	16	69/70	69.8	21	78/79	78.8	26
62/63	62.6	17	71/72	71.6	22	80/81	80.6	27
64/65	64.4	18	73/74	73.4	23	82/83	82.4	28
66/67	66.2	19	75/76	75.2	24	84/85	84.2	29
68	68	20	77	77	25	86	86	30

Ambient temperature

Fahrenheit display temperature (°F)	Fahrenheit (°F)	Celsius (°C)	Fahrenheit display temperature (°F)	Fahrenheit (°F)	Celsius (°C)	Fahrenheit display temperature (°F)	Fahrenheit (°F)	Celsius (°C)
32/33	32	0	55/56	55.4	13	79/80	78.8	26
34/35	33.8	1	57/58	57.2	14	81	80.6	27
36	35.6	2	59/60	59	15	82/83	82.4	28
37/38	37.4	3	61/62	60.8	16	84/85	84.2	29
39/40	39.2	4	63	62.6	17	86/87	86	30
41/42	41	5	64/65	64.4	18	88/89	87.8	31
43/44	42.8	6	66/67	66.2	19	90	89.6	32
45	44.6	7	68/69	68	20	91/92	91.4	33
46/47	46.4	8	70/71	69.8	21	93/94	93.2	34
48/49	48.2	9	72	71.6	22	95/96	95	35
50/51	50	10	73/74	73.4	23	97/98	96.8	36
52/53	51.8	11	75/76	75.2	24	99	98.6	37
54	53.6	12	77/78	77	25			

Appendix 2: Configuration of Connection Pipe

1. Standard length of connection pipe

- 5m, 7.5m, 8m.

2. Min. length of connection pipe is 3m.

3. Max. length of connection pipe and max. high difference.

4. The additional refrigerant oil and refrigerant charging required after prolonging connection pipe

- After the length of connection pipe is prolonged for 10m at the basis of standard length, you should add 5ml of refrigerant oil for each additional 5m of connection pipe.

- The calculation method of additional refrigerant charging amount (on the basis of liquid pipe):

Cooling capacity	Max length of connection pipe	Max height difference
5000 Btu/h(1465 W)	15 m	5 m
7000 Btu/h(2051 W)	15 m	5 m
9000 Btu/h(2637 W)	15 m	10 m
12000 Btu/h(3516 W)	20 m	10 m
18000 Btu/h(5274 W)	25 m	10 m
24000 Btu/h(7032 W)	25 m	10 m
28000 Btu/h(8204 W)	30 m	10 m
36000 Btu/h(10548 W)	30 m	20 m
42000 Btu/h(12306 W)	30 m	20 m
48000 Btu/h(14064 W)	30 m	20 m

- When the length of connection pipe is above 5m, add refrigerant according to the prolonged length of liquid pipe. The additional refrigerant charging amount per meter is different according to the diameter of liquid pipe. See the following sheet.

- Additional refrigerant charging amount = prolonged length of liquid pipe X additional refrigerant charging amount per meter

Additional refrigerant charging amount for R22, R407C, R410A and R134a			
Diameter of connection pipe		Outdoor unit throttle	
Liquid pipe(mm)	Gas pipe(mm)	Cooling only(g/m)	Cooling and heating(g/m)
Φ6	Φ9.5 or Φ12	15	20
Φ6 or Φ9.5	Φ16 or Φ19	15	20
Φ12	Φ19 or Φ22.2	30	120
Φ16	Φ25.4 or Φ31.8	60	120
Φ19	/	250	250
Φ22.2	/	350	350


Appendix 3: Pipe Expanding Method

Note:

Improper pipe expanding is the main cause of refrigerant leakage. Please expand the pipe according to the following steps:


A: Cut the pip

- Confirm the pipe length according to the distance of indoor unit and outdoor unit.
- Cut the required pipe with pipe cutter.

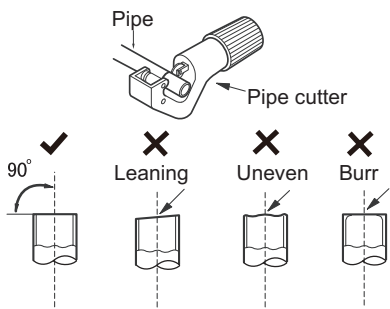

B: Remove the burrs


- Remove the burrs with shaper and prevent the burrs from getting into the pipe.

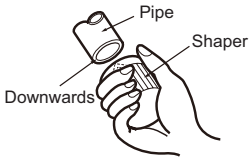

C: Put on suitable insulating pipe

D: Put on the union nut

- Remove the union nut on the indoor connection pipe and outdoor valve; install the union nut on the pipe.

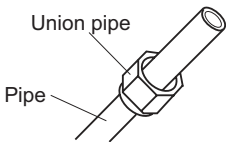


E: Expand the port

- Expand the port with expander.

Note:


- "A" is different according to the diameter, please refer to the sheet below:

Outer diameter(mm)	A(mm)	
	Max	Min
Φ6 - 6.35 (1/4")	1.3	0.7
Φ9.52 (3/8")	1.6	1.0
Φ12 - 12.70 (1/2")	1.8	1.0
Φ16 - 15.88 (5/8")	2.4	2.2

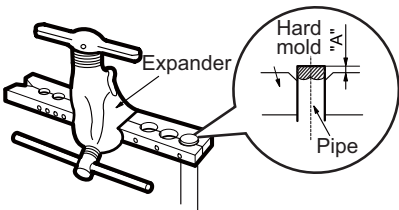

F: Inspection

- Check the quality of expanding port. If there is any blemish, expand the port again according to the steps above.

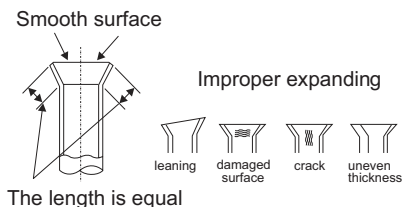

Appendix 4: List of Resistance for Ambient Temperature Sensor

Resistance Table for Indoor and Outdoor Ambient Temperature Sensors (15K)

Temp(℃)	Resistance(kΩ)	Temp(℃)	Resistance(kΩ)	Temp(℃)	Resistance(kΩ)	Temp(℃)	Resistance(kΩ)
-19	138.1	20	18.75	59	3.848	98	1.071
-18	128.6	21	17.93	60	3.711	99	1.039
-17	121.6	22	17.14	61	3.579	100	1.009
-16	115	23	16.39	62	3.454	101	0.98
-15	108.7	24	15.68	63	3.333	102	0.952
-14	102.9	25	15	64	3.217	103	0.925
-13	97.4	26	14.36	65	3.105	104	0.898
-12	92.22	27	13.74	66	2.998	105	0.873
-11	87.35	28	13.16	67	2.896	106	0.848
-10	82.75	29	12.6	68	2.797	107	0.825
-9	78.43	30	12.07	69	2.702	108	0.802
-8	74.35	31	11.57	70	2.611	109	0.779
-7	70.5	32	11.09	71	2.523	110	0.758
-6	66.88	33	10.63	72	2.439	111	0.737
-5	63.46	34	10.2	73	2.358	112	0.717
-4	60.23	35	9.779	74	2.28	113	0.697
-3	57.18	36	9.382	75	2.206	114	0.678
-2	54.31	37	9.003	76	2.133	115	0.66
-1	51.59	38	8.642	77	2.064	116	0.642
0	49.02	39	8.297	78	1.997	117	0.625
1	46.6	40	7.967	79	1.933	118	0.608
2	44.31	41	7.653	80	1.871	119	0.592
3	42.14	42	7.352	81	1.811	120	0.577
4	40.09	43	7.065	82	1.754	121	0.561
5	38.15	44	6.791	83	1.699	122	0.547
6	36.32	45	6.529	84	1.645	123	0.532
7	34.58	46	6.278	85	1.594	124	0.519
8	32.94	47	6.038	86	1.544	125	0.505
9	31.38	48	5.809	87	1.497	126	0.492
10	29.9	49	5.589	88	1.451	127	0.48
11	28.51	50	5.379	89	1.408	128	0.467
12	27.18	51	5.197	90	1.363	129	0.456
13	25.92	52	4.986	91	1.322	130	0.444
14	24.73	53	4.802	92	1.282	131	0.433
15	23.6	54	4.625	93	1.244	132	0.422
16	22.53	55	4.456	94	1.207	133	0.412
17	21.51	56	4.294	95	1.171	134	0.401
18	20.54	57	4.139	96	1.136	135	0.391
19	19.63	58	3.99	97	1.103	136	0.382

Resistance Table for Indoor and Outdoor Tube Temperature Sensor (20K)

Temp(℃)	Resistance(kΩ)	Temp(℃)	Resistance(kΩ)	Temp(℃)	Resistance(kΩ)	Temp(℃)	Resistance(kΩ)
-19	181.4	20	25.01	59	5.13	98	1.427
-18	171.4	21	23.9	60	4.948	99	1.386
-17	162.1	22	22.85	61	4.773	100	1.346
-16	153.3	23	21.85	62	4.605	101	1.307
-15	145	24	20.9	63	4.443	102	1.269
-14	137.2	25	20	64	4.289	103	1.233
-13	129.9	26	19.14	65	4.14	104	1.198
-12	123	27	18.13	66	3.998	105	1.164
-11	116.5	28	17.55	67	3.861	106	1.131
-10	110.3	29	16.8	68	3.729	107	1.099
-9	104.6	30	16.1	69	3.603	108	1.069
-8	99.13	31	15.43	70	3.481	109	1.039
-7	94	32	14.79	71	3.364	110	1.01
-6	89.17	33	14.18	72	3.252	111	0.983
-5	84.61	34	13.59	73	3.144	112	0.956
-4	80.31	35	13.04	74	3.04	113	0.93
-3	76.24	36	12.51	75	2.94	114	0.904
-2	72.41	37	12	76	2.844	115	0.88
-1	68.79	38	11.52	77	2.752	116	0.856
0	65.37	39	11.06	78	2.663	117	0.833
1	62.13	40	10.62	79	2.577	118	0.811
2	59.08	41	10.2	80	2.495	119	0.77
3	56.19	42	9.803	81	2.415	120	0.769
4	53.46	43	9.42	82	2.339	121	0.746
5	50.87	44	9.054	83	2.265	122	0.729
6	48.42	45	8.705	84	2.194	123	0.71
7	46.11	46	8.37	85	2.125	124	0.692
8	43.92	47	8.051	86	2.059	125	0.674
9	41.84	48	7.745	87	1.996	126	0.658
10	39.87	49	7.453	88	1.934	127	0.64
11	38.01	50	7.173	89	1.875	128	0.623
12	36.24	51	6.905	90	1.818	129	0.607
13	34.57	52	6.648	91	1.736	130	0.592
14	32.98	53	6.403	92	1.71	131	0.577
15	31.47	54	6.167	93	1.658	132	0.563
16	30.04	55	5.942	94	1.609	133	0.549
17	28.68	56	5.726	95	1.561	134	0.535
18	27.39	57	5.519	96	1.515	135	0.521
19	26.17	58	5.32	97	1.47	136	0.509

Resistance Table of Outdoor Discharge Temperature Sensor(50K)

Temp(℃)	Resistance(kΩ)	Temp(℃)	Resistance(kΩ)	Temp(℃)	Resistance(kΩ)	Temp(℃)	Resistance(kΩ)
-29	853.5	10	98	49	18.34	88	4.754
-28	799.8	11	93.42	50	17.65	89	4.609
-27	750	12	89.07	51	16.99	90	4.469
-26	703.8	13	84.95	52	16.36	91	4.334
-25	660.8	14	81.05	53	15.75	92	4.204
-24	620.8	15	77.35	54	15.17	93	4.079
-23	580.6	16	73.83	55	14.62	94	3.958
-22	548.9	17	70.5	56	14.09	95	3.841
-21	516.6	18	67.34	57	13.58	96	3.728
-20	486.5	19	64.33	58	13.09	97	3.619
-19	458.3	20	61.48	59	12.62	98	3.514
-18	432	21	58.77	60	12.17	99	3.413
-17	407.4	22	56.19	61	11.74	100	3.315
-16	384.5	23	53.74	62	11.32	101	3.22
-15	362.9	24	51.41	63	10.93	102	3.129
-14	342.8	25	49.19	64	10.54	103	3.04
-13	323.9	26	47.08	65	10.18	104	2.955
-12	306.2	27	45.07	66	9.827	105	2.872
-11	289.6	28	43.16	67	9.489	106	2.792
-10	274	29	41.34	68	9.165	107	2.715
-9	259.3	30	39.61	69	8.854	108	2.64
-8	245.6	31	37.96	70	8.555	109	2.568
-7	232.6	32	36.38	71	8.268	110	2.498
-6	220.5	33	34.88	72	7.991	111	2.431
-5	209	34	33.45	73	7.726	112	2.365
-4	198.3	35	32.09	74	7.47	113	2.302
-3	199.1	36	30.79	75	7.224	114	2.241
-2	178.5	37	29.54	76	6.998	115	2.182
-1	169.5	38	28.36	77	6.761	116	2.124
0	161	39	27.23	78	6.542	117	2.069
1	153	40	26.15	79	6.331	118	2.015
2	145.4	41	25.11	80	6.129	119	1.963
3	138.3	42	24.13	81	5.933	120	1.912
4	131.5	43	23.19	82	5.746	121	1.863
5	125.1	44	22.29	83	5.565	122	1.816
6	119.1	45	21.43	84	5.39	123	1.77
7	113.4	46	20.6	85	5.222	124	1.725
8	108	47	19.81	86	5.06	125	1.682
9	102.8	48	19.06	87	4.904	126	1.64

Note: The information above is for reference only.

JF00301841



GREE ELECTRIC APPLIANCES, INC. OF ZHUHAI

Add: West Jinji Rd, Qianshan, Zhuhai, Guangdong, China 519070

Tel: (+86-756) 8522218 Fax: (+86-756) 8669426

Email: gree@gree.com.cn [Http://www.gree.com](http://www.gree.com)

HONG KONG GREE ELECTRIC APPLIANCES SALES LIMITED

Add: Unit 2612, 26/F., Miramar Tower 132 Nathan Road, TST, Kowloon, HK

Tel: (852) 31658898 Fax: (852) 31651029

For product improvement, specifications and appearance in this manual are subject to change without prior notice.